

Programming Channel Memory - Toshiba S5ES Series Service Manual

1
Table Of Contents
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50

•

[Table of Contents](#)

•

Bookmarks



Preset the channels automatically (ASM function)

Use remote control for this operation. The buttons on the TV with similar name may also be use.

1

Select the starting position for channel to be preset. Press the Number buttons (-/--, 0~9) or CH s/t.

PROGRAMMING CHANNEL MEMORY

Model 29CZ5DE is used in this manual for illustration purpose.

2

Preset the channels automatically (ASM function)

Set the correct broadcast system for your region. Press **MENU** and then ; -/+ to highlight the icon.

Use remote control for this operation. The buttons on the TV with similar name may also be use.

To use the SEARCH function

1

Press **MENU** and then the "TUNING" icon.

SETUP
LANGUAGE
COLOR MODE
SOUND MODE
SKIP
BLUE SCREEN
TEXT
SELECT /

Confirm "COLOR MODE" is set to the Number

1 Select the starting position for channel to be preset. Press the Number buttons (-/--, 0~9) or CH ▲/▼.



"SOUND MODE" is set to proper system. If not, press CH s/t to select "COLOR MODE" or "SOUND MODE" and press ; +/- to set each proper system.

3

Press MENU and then ; +/- to highlight the "TUNING" icon. Select "ASM", then press ; + to start the search. When the TV screen returns to the start position, the procedure is complete.

PROGRAMMING CHANNEL MEMORY

Model 29CZ5DE is used in this manual for illustration purpose.

Preset the channels automatically (ASM function)

Presetting channel

First, use the ASM (Automatic Search Memory) function

to preset all active channels in your area automatically.

Then, arrange the preset channels with the SEARCH, SKIP and MFT (Manual Fine Tuning) functions so that

you can tune into only desired channels.

Use the SEARCH function if desired channels cannot be preset with the ASM or if you would like to preset channels

to specific position numbers one by one.

All manuals and user guides at all-guides.com

Use a remote control for this operation. The buttons on the TV with similar name may also be use.

1 Select the starting position for channel to be preset. Press the Number buttons (-/+, 0~9) or CH ▲/▼.

2 Set the correct broadcast system for your region. Press MENU and then ; +/- to highlight the "SET UP" icon.

3 Press MENU and then ; +/- to highlight the "TUNING" icon. Select "ASM", then press ; + to start the search. When the TV screen returns to the start position, the procedure is complete.

PROGRAMMING CHANNEL MEMORY

Model 29CZ5DE is used in this manual for illustration purpose.

1 SET UP

ENGLISH
AUTO
BIG
OFF
ON
FAST
ADJUST +/-
BACK
OFF
POD1
ADJUST +/-
BACK

- 16 -

To use the SEARCH function

1

Press MENU and then ; +/- to highlight the "TUNING" icon.

TUNING
MFT
AFT
ASM
SEARCH
POSITION
MEMORY
SELECT /
MENU +/-

2

Press CH s/t to select "SEARCH". Press ; + to start searching. Pressing ; -/+ to highlight the "TUNING" icon. Select "ASM", then press ; + to start the search. When the TV screen returns to the start position, the procedure is complete.

 
pressing the opposite direction button, + and -, respectively, will cancel SEARCH function.

Use the SEARCH function if desired channels cannot be preset with the ASM or if you would like to preset channels to specific position numbers one by one.

TUNING
MFT
AFT
ON



Confirm "COLOR MODE" is set to "AUTO" and "SOUND MODE" is set to proper system. If not, press CH ▲/▼ to select "COLOR MODE" or "SOUND MODE" and press ; +/- to set each proper system.

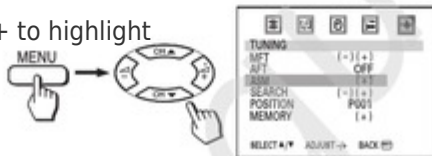

Presetting channel

• First, use the ASM (Automatic Search Memory) function to preset all active channels in your area automatically.

• Then, arrange the preset channels with the SEARCH, SKIP and MFT (Manual Fine Tuning) functions so that you can tune into only desired channels.

• Use the SEARCH function if desired channels cannot be preset with the ASM or if you would like to preset channels to specific position numbers one by one.

To use the SEARCH function

 
1

Press MENU and then ; +/- to highlight the "TUNING" icon.



2


Press CH ▲/▼ to select "SEARCH". Pressing ; -/+ to highlight the "TUNING" icon. Select "ASM", then press ; + to start the search. When the TV screen returns to the start position, the procedure is complete.

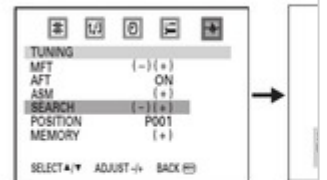

Repeat this process until the desired channel is shown.

3

 When the desired channel is shown, press CH ▲/▼ to select "POSITION". Press ; + repeatedly until the position number is shown.

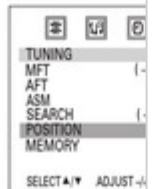

4

Press CH ▲/▼ to select "MEMORY". Press ; + to memorize the channel and press ; -/+ to cancel.



ASM
SEARCH
POSITION
P001
MEMORY
SELECT /
ADJUST +/-
BACK

Repeat this process until you can get the desired channel.

3 PROGRAMMING CHANNEL MEMORY

When the desired channel is shown, press CH t to select "POSITION". Press the ; +/- buttons repeatedly until the position number to be preset is shown.

Preset the channels automatically (ASM function)

Use remote control for this operation. The buttons on the TV with similar name may also be use.

TUNING
MFT
AFT
ASM
SEARCH
POSITION
MEMORY
SELECT /
ADJUST +/-

1 Select the starting position for channel to be preset. Press the Number buttons (-/+, 0~9) or CH ▲/▼.

Press CH s/t to select "MEMORY", then press ; + to memorize the channel at the current position.

TUNING
MFT
AFT
ASM
SEARCH
POSITION
MEMORY
SELECT /
ADJUST +/-

2 Press CH ▲/▼ to select "SEARCH" to start searching. Pressing "SEARCH" lower frequencies while pressing the opposite "SEARCH" higher frequencies respectively, will cancel SEARCH.

When you program other channels, repeat steps 2 to 4.

ON
P001
BACK
SEARCH
VIEW II
P001
STOP
OFF
P002
BACK
OFF
P002
BACK

SPECIFIC INFORMATIONS

2 Set the correct broadcast system for your region. Press **MENU** and then **SET UP** icon.



 
Confirm "COLOR MODE" is set to "AUTO" and "SOUND MODE" is set to proper system. If not, press CH ▲/▼ to select "COLOR MODE" or "SOUND MODE" and press **SET UP** to set each proper system.

To use the SEARCH function

1 Press **MENU** and then the **TUNING** icon.



2 Press CH ▲/▼ to select "SEARCH" to start searching. Pressing "SEARCH" lower frequencies while pressing the opposite "SEARCH" higher frequencies respectively, will cancel SEARCH.

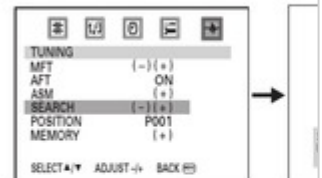

[Previous Page](#)
[Next Page](#)

1
...
13
14
15
16
17
18
19
20

Quick Links:

[Circuit Block Diagram](#)

Related Manuals for Toshiba S5ES Series

[TV Toshiba S5ES Series Service Manual](#)

(46 pages)

[TV Toshiba 29CZ5DE Service Manual](#)

S5es series (50 pages)

[TV Toshiba 29CZ6DA Owner's Manual](#)

Color television (20 pages)

[TV Toshiba CPBRO2005Eu Catalog](#)

Home cinema catalogue 2005-6 (21 pages)

[TV Toshiba Stasia 17WL46 Catalogue](#)

Television plasma, lcd, projector, dvd video (9 pages)

[TV Toshiba 32SL863B Owner's Manual](#)

SI86* digital series, ul86* digital series (102 pages)

[TV Toshiba 22BL704B Owner's Manual](#)

Digital series (48 pages)

[TV Toshiba 32BV801B User Manual](#)

Digital series (45 pages)

[TV Toshiba 32BV501B User Manual](#)

Digital series (49 pages)

[TV Toshiba 42VL963B Owner's Manual](#)

VI96 digital series (92 pages)

[TV Toshiba 32SL753B Owner's Manual](#)

SI75* digital series, wl75* digital series, rw75* digital series (78 pages)

[TV Toshiba 46SV685DB Owner's Manual](#)

Sv6 digital series (62 pages)

[TV Toshiba 29CJZ5SR Service Manual](#)

(52 pages)

[TV Toshiba 43 UF3D Series Operating Instructions Manual](#)

(29 pages)

[TV Toshiba 40VL20 Series Owner's Manual](#)

Led lcd tv (60 pages)

[TV Toshiba 43VJ33P Service Manual](#)

(78 pages)

Related Content for Toshiba S5ES Series

[CF27C30 Programming Channel Memory](#)

Toshiba CF27C30

[14AS20 Programming Channel Memory](#)

Toshiba 14AS20

[14CS2R Programming Channel Memory](#)

Toshiba 14CS2R

[CF32H40 Programming Channel Memory](#)

Toshiba CF32H40

[CE35E15 Programming Channel Memory](#)

Toshiba CE35E15

[55A10A Programming Channel Memory](#)

Toshiba 55A10A

[CF19H22 Programming Channel Memory](#)

Toshiba CF19H22

[TAC0326 Programming Channel Memory](#)

Toshiba TAC0326

This manual is also suitable for:

[29cz5de29cz5t29cz6si](#)