

Service Mode - Toshiba S5ES Series Service Manual

1
Table Of Contents
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50

--

•

[Table of Contents](#)

•

Bookmarks



1. ENTERING TO SERVICE MODE

1) Press o button once on Remote Control.

2. DISPLAYING THE ADJUSTMENT MENU

1) Press MENU button on TV.

Service mode

S

 
3. KEY FUNCTION IN THE SERVICE MODE

The following key entry during display of adjustment menu provides special functions.

A single horizontal line ON/OFF :
Test signal ON/OFF :
Selection of the adjustment items :
Change of the data value :
Adjustment menu mode ON/OFF :
Initialization of the memory (QA10) :
Reset the count of operating protect circuit to "00":

SERVICE MODE


1) Pressing the MENU button once on Remote Control.

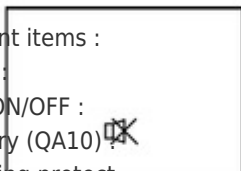

2) Pressing the MENU button again to keep pressing.



 3) While pressing the MENU button, press the MENU button.



(Service m

"VG2" alignment :
 "BCUT" selection :
 "GCUT" selection :
 "SCNT" selection :
 "COLC" selection :
 "TNTC" selection :
 "SBY" selection :

Self diagnostic display ON/OFF :

CAUTION : Never try to perform initialization unless you have changed the memory IC.

All manuals and user guides at all-guides.com

SERVICE MODE

SERVICE MODE

1. ENTERING TO SERVICE MODE

1) Press button once on Remote Control.

2) Press button again to keep pressing.

3) While pressing press MENU

2) Press button again to keep pressing.

Adjustment mode

Press

Press

- / - - button (on remote control)

a button (on TV or remote control)

Channel s/t (on TV or remote control)

Volume +/- (on TV or remote control)

MENU button (on TV)

CALL + Channel button on TV (S)

CALL + Channel button on TV (t)

0 button

1 button

2 button

4 button

5 button

Color thickness correction

6 button

note: Displayed differently as shown below, depending

7 button

9 button

- 8 -

3) While pressing the button,

press MENU button on TV.

Item

Data

(Service mode display)

Item

Data

 
 
on the setting of the receiving color system.

COLP (PAL)

COLC (NTSC)

COLS (SECAM)




S

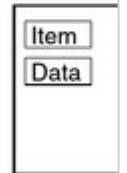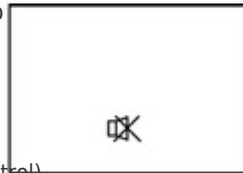

(Service mode display)

2. DISPLAYING THE ADJUSTMENT MENU

   1) Press MENU button on TV.

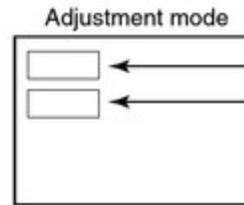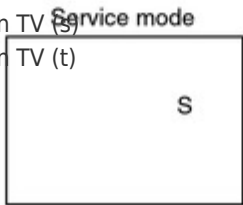

3. KEY FUNCTION IN THE SERVICE MODE

The following key entry during display of adjustment menu provides special functions.

A single horizontal line ON/OFF:

Test signal ON/OFF :

Selection of the adjustment items :

Change of the data value :

Adjustment menu mode ON/OFF :

Initialization of the memory (QA10) :

Reset the count of operating protect circuit to "00":

"VG2" alignment :

"BCUT" selection :

"GCUT" selection :

"SCNT" selection :

"COLC" selection :

"TNTC" selection :

"SRV" selection :

- / - - button (on remote control)

button (on TV or remote control)

Channel (on TV or remote control)

Volume +/- (on TV or remote control)

MENU button (on TV)

CALL + Channel button on TV ()

CALL + Channel button on TV ()

0 button

1 button

2 button

4 button

5 button - - - - - Color thickness correction

6 button

7 button

note: Displayed differently as shown on the setting of the receiving

[Previous Page](#)
[Next Page](#)

1
...
5
6
7
8
9
10
11
12

Quick Links:

[Circuit Block Diagram](#)

Related Manuals for Toshiba S5ES Series

[TV Toshiba S5ES Series Service Manual](#)

(46 pages)

[TV Toshiba 29CZ5DE Service Manual](#)

S5es series (50 pages)

[TV Toshiba 29CZ6DA Owner's Manual](#)

Color television (20 pages)

[TV Toshiba CPBRO2005Eu Catalog](#)

Home cinema catalogue 2005-6 (21 pages)

[TV Toshiba Stasia 17WL46 Catalogue](#)

Television plasma, lcd, projector, dvd video (9 pages)

[TV Toshiba 32SL863B Owner's Manual](#)

SI86* digital series, ul86* digital series (102 pages)

[TV Toshiba 22BL704B Owner's Manual](#)

Digital series (48 pages)

[TV Toshiba 32BV801B User Manual](#)

Digital series (45 pages)

[TV Toshiba 32BV501B User Manual](#)

Digital series (49 pages)

[TV Toshiba 42VL963B Owner's Manual](#)

VI96 digital series (92 pages)

[TV Toshiba 32SL753B Owner's Manual](#)

SI75* digital series, wl75* digital series, rw75* digital series (78 pages)

[TV Toshiba 46SV685DB Owner's Manual](#)

Sv6 digital series (62 pages)

[TV Toshiba 29CJZ5SR Service Manual](#)

(52 pages)

[TV Toshiba 21ARF45 Guía Del Usuario](#)

21arf45 user's guide (38 pages)

[TV Toshiba fire tv 43C350KU Quick Setup Manual](#)

(19 pages)

[TV Toshiba 32DT2U Specifications](#)

Toshiba 32dt2u: specifications (2 pages)

Related Content for Toshiba S5ES Series

[34HF85 Service Mode List](#)

Toshiba 34HF85

[TAC0326 Service Mode](#)

Toshiba TAC0326

[29AX9UM Service Mode](#)

Toshiba 29AX9UM

[26HF14SVM Service Mode List](#)

Toshiba 26HF14SVM

[29CJZ6DR Service Mode](#)

Toshiba 29CJZ6DR

[20A3E Service Mode](#)

Toshiba 20A3E

[43S7DE Service Mode](#)

Toshiba 43S7DE

[2857DD Service Mode General Instructions](#)

Toshiba 2857DD

This manual is also suitable for:

[29cz5de29cz5t29cz6si](#)