
 
# Limitations Of Use; Replacing The Batteries - Whirlpool PM05016 Installation And Use Instructions Manual

Electronic mixer control unit

19			
20			
21			
22			
23			
24			
25			
26			
27			
28			
Table Of Contents			
29			
•			



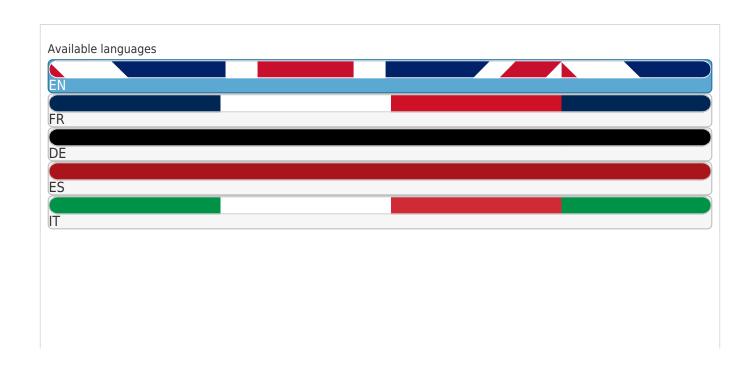





# Disposal

Dispose of any batteries, disused accessories and packaging in order that they can be recycled in an environmentally-friendly way.

only for Ec countries: Do not dispose of any used batteries with household waste! In accordance with the provisions of Directive 2002/96/EC on waste electrical and electronic

equipment (WEEE) and its transposition into national law, spent batteries should be collected separately and reused ecologically.

### limitations of use

The appliance is not designed to be used by persons (including children) with limited physical,

sensory or mental capabilities, or by anyone with a lack of experience or knowledge, unless

same are supervised and instructed when using the appliance by a person responsible for their

safety. Children must be supervised to ensure that they do not play with the appliance.

## replacing the Batteries

- The batteries should only be replaced with new batteries of the same type as those listed in

manual.

- Before replacing the batteries, turn off the control unit by disconnecting the power supply.
- Make sure that the polarity of the batteries and connectors match.
- Dispose of any replaced batteries according to current regulations.

26

**Table of Contents** 

Previous Page Next Page

... 

### Related Products for Whirlpool PM05016

Whirlpool pmn

Whirlpool PS-11

Whirlpool Packaged Terminal Air Conditioner

Whirlpool PORTABLEAIR CONDITIONER

Whirlpool PRO 25 IX

Whirlpool Personal Valet PVBS600LY

Whirlpool PACW9COL

Whirlpool PK 750 TL GH/HA

Whirlpool PK 630 RTL GH/HA

Whirlpool PK 644D GH X/HA LPG

Whirlpool PC 750 T GH/HA

Whirlpool PC 750 X/HA

Whirlpool PC 640 X/HA

Whirlpool PC 640T GH R/HA

Whirlpool PB-SPE904-HD

Whirlpool PB-DTE904-HD