





## Whirlpool W11411645A Quick Start Manual

Water and ice dispenser controls




1  
2  
3  
4  
5  
6  
7  
8  
9

--

•

## Bookmarks

Available languages

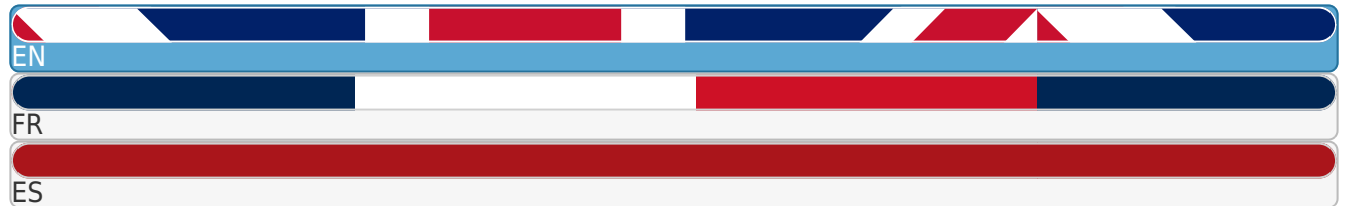

The language selection bar consists of three horizontal buttons. The top button is light blue and contains the text 'EN'. The middle button is dark blue and contains the text 'FR'. The bottom button is red and contains the text 'ES'. The buttons are separated by thin white lines and are set against a light gray background.

## Quick Links

[Download this manual](#)



FFrreennccchhDDoooorrBBoottttoommMMooounnttDDiissppeennssiinnngaannddSSttoorraaggeeGGuuiiddee

## Water and Ice Dispenser Controls

A. Ice/Water dispenser paddle

Press Ice/Water to toggle through the following choices in a continuous loop:

- ◆ Water (default) - Dispenses water.
- ◆ Cubed - Dispenses cubed ice.
- ◆ Crushed - Dispenses crushed ice.

### TO DISPENSE WATER (STANDARD)

1. Select water.

2. Press a sturdy glass against the water dispenser paddle.

 
**NOTE:** While dispensing water and for 3 seconds after dispensing has stopped, the digital display will show how much water has been dispensed.

3. Remove the glass to stop dispensing.

### TO DISPENSE WATER (MEASURED FILL)

Measured Fill allows you to dispense a specified amount of water

A. Ice/Water dispenser paddle

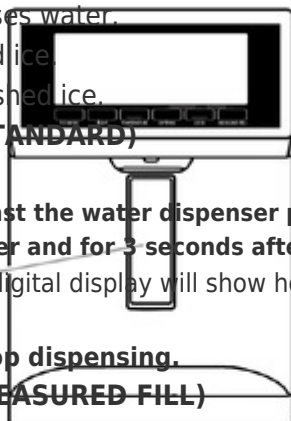

**NOTE:** You may press Ice Type calibration mode. The Calibrat



3. Press and release the water dispense water to the 1 cup



with the touch pad.

**NOTE:** The amount of water you select will be dispensed. Be sure that the container is empty and can hold the entire volume. If ice is

## Water and Ice Dispenser Controls

in the container, you may need to adjust your selection. Household water pressure may affect the accuracy of the Measured Fill feature. For optimum performance of your water dispenser, you must first calibrate Measured Fill. For best results, calibration should be performed when water is not being used in the house.

### How to calibrate Measured Fill:

**IMPORTANT:** Flush the water system before calibrating Measured Fill.

1. Place a sturdy measuring cup (1-cup [237 mL] size) on the dispenser tray centered in front of the ice/water dispenser paddle.

**NOTE:** Depending on your model, a measuring cup may be provided.

2. Press and hold the Options and Lock buttons at the same time for 3 seconds. The words "Back" and "1 Cup" will appear on the display screen. Also, the Calibrate Measured Fill icon will

illuminate and remain lit while the Measured Fill feature is being calibrated.

**NOTE:** You may press Ice Type "Back" at any time to exit calibration mode. The Calibrate Measured Fill icon will disappear.

3. Press and release the water dispenser paddle, as needed, to dispense water to the 1 cup fill line.

**NOTE:** If overfilling or spilling occurs, discard the water and press "Back" to restart the calibration process.

4. Press Measured Fill to turn on the feature. When the feature is on, the Measured Fill screen appears on the display.

When Measured Fill calibration has been confirmed, the Calibration icon will disappear and the display will return to the home screen.

### TO DISPENSE WATER (STANDARD)

1. Press Measured Fill to turn the feature on. When the feature is on, the Measured Fill screen appears on the display. Press Ice/Water "Back" to manually turn off the Measured Fill feature.

2. Press a sturdy glass against the water dispenser paddle.

**NOTE:** While dispensing water and for 3 seconds after dispensing has stopped, the digital display will show how much water has been dispensed.

3. Remove the glass to stop dispensing.

### TO DISPENSE WATER (MEASURED FILL)

2. You can dispense water by the ounce, cup, or liter. The default unit is ounces. To switch to cups or liters, press the light button with the touch pad.

**NOTE:** The amount of water you select will be dispensed. Be sure that the container is empty and can hold the entire volume. If ice is

in the container, you may need to adjust your selection.

### Default


Household water pressure may affect the accuracy of the Measured Fill feature. For optimum performance of your water dispenser, you must first calibrate Measured Fill. For best results, calibration should be performed when water is not being used in the house.

### How to calibrate Measured Fill:

**IMPORTANT:** Flush the water system before calibrating Measured Fill.

3. Press the Lock and Options buttons to adjust the volume as

**NOTE:** You may press Ice Type calibration mode. The Calibrate

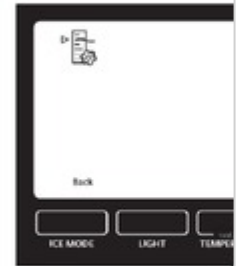


3. Press and release the water dispense water to the 1 cup

**NOTE:** If overfilling or spilling occurs, press "Back" to restart the

4. Press Measured Fill to turn on, the Measured Fill screen

When Measured Fill calibration Calibration icon will disappear home screen.

1. Press Measured Fill to turn on, the Measured Fill screen Water "Back" to manually t

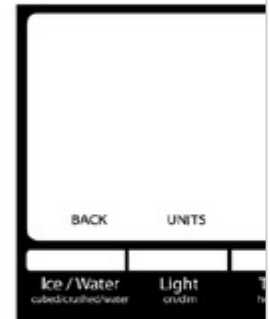

**NOTE:** The dispenser will after 1 minute of inactivity. any changes you have made restored.

2. You can dispense water by unit is ounces. To switch to button.

Default, minimum, and max

Units	Default
Ounces	8
Cups	1
Liters	0.25

3. Press the Lock and Option desired. The Lock button in

desired. The Lock button increases the volume, and the Options button lowers the volume.

## French Door Bottom Mount Dispensing and Storage Guide

**NOTE:** Most coffee cups (commonly 4 to 6 oz [118 to 177 mL])

per cup) are not the same size as a measuring cup (8 oz [237 mL]). You may need to adjust the volume to avoid unintentionally overfilling coffee cups.

When increasing or decreasing the dispense volumes, if an adjustment button (-/+ ) is held for approximately 10 seconds or longer the control may stop responding. Release the button for approximately 2 seconds and then continue making the adjustment.

**Minimum**

**Maximum**

1

 
128

1/4

16

0.05

4.0 Press Ice/Water to toggle through the following choices in a continuous loop:

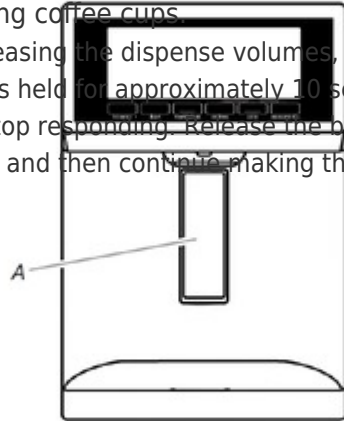

A. Ice/Water dispenser paddle

**NOTE:** You may press Ice Type calibration mode. The Calibrate



3. Press and release the water dispense water to the 1 cup

**NOTE:** If overfilling or spilling press "Back" to restart the

4. Press Measured Fill to turn

[Next Page](#)

1  
2  
3  
4  
5

# Related Manuals for Whirlpool W11411645A

[Dispenser Whirlpool Load & Go Quick Start Manual](#)

(2 pages)

[Dispenser Whirlpool 8178501A Manual](#)

Fast fill dispenser system (52 pages)

[Dispenser Whirlpool Vessi Use And Care Manual](#)

Fermentor & dispenser (40 pages)

[Dispenser Whirlpool HDIOOXS Use And Care Manual](#)

Whirlpool hot water dispenser use and care guide hdiooxs (6 pages)

## Summary of Contents for Whirlpool W11411645A

[Page 1](#) FFrrreenncchhDDooooorBBoottttoommMMoouunnttDDiiss  
ppeennssiinnngaannddSSttoorraaggeeGGuuiidde Water and Ice  
Dispenser Controls NOTE: You may press Ice Type "Back"...

[Page 2: Temperature-Controlled Drawer](#)

4. Dispense water. 3. Remove the glass to stop dispensing. NOTE: While dispensing water, the digital display will count NOTE: Ice may continue to dispense for several seconds after down how much water remains to be dispensed, according to removing the glass from the dispenser paddle. The dispenser the volume you selected.

[Page 3](#) To remove EasySlide bin: DISABLING SOUNDS 1. Remove all three crisper drawers. ♦  
To turn off all control and dispenser sounds, press and hold 2. Hold the upper sliding lid near the trim and lift up to remove. Ice/Water and Measured Fill at the same time for 3 seconds. Remove the lower lid.

[Page 4](#) GGUuiiddeeddeerraannggeemmenntteettduuddiissttr  
riibbuutteeuurrdduurrééffriiggéerraatteuurrààppoorrtteè  
àddoouubblleebbaattttaanntteettccoonggé...

[Page 5](#) 2. Il est possible de puiser l'eau par once, par tasse ou par litre. L'écran affiche « Ice » (glaçons) et indique le type de glace L'unité utilisée par défaut est l'once. Pour passer aux tasses ou sélectionné (concassée ou sous forme de glaçons). aux litres, appuyer sur le bouton Light (éclairage).

[Page 6](#) Pour replacer le bac EasySlide : Appuyer sur Select (sélectionner) pour alterner entre les 1. Incliner légèrement l'arrière du bac vers le haut. différents réglages de température. L'icône s'allume lorsque le réglage souhaité est sélectionné. 2. Aligner l'arête centrale et les languettes du bac EasySlide avec les arêtes et encoches du cabinet.

[Page 7](#) GGUuííaaddeeddeessppaacchhooyyaallmmaacceennaam  
miiennttooddeellrreeffriiggerraaddoorrddeeddoosppue  
errttaassccoonnmoonnttaajjeeennllaappaarrtteeiinnffeerr  
iioorr Controles del despachador de agua y hielo Cómo calibrar Measured Fill (Llenado medido):...

[Page 8](#) 2. Puede despachar agua por onza, taza o litro. La unidad La palabra "Ice" (Hielo) aparecerá en la pantalla cuando se prefijada es onzas. Para cambiar a tazas o litros, presione el seleccione hielo picado o en cubos. botón Light (Luz). Para obtener hielo picado, los cubos de hielo se trituran antes de A continuación se enlistan los volúmenes prefijados, mínimos y despacharse.

[Page 9](#) 3. Baje el depósito para colocarlo en su lugar. ® ©2020 Whirlpool. All rights reserved.

Used under license in Canada. <sup>™</sup> Tous droits réservés. Utilisé sous licence au Canada. Todos los derechos reservados. Se usa bajo licencia en Canadá.