



# **TOSHIBA**

Toshiba EC9P032SV-SV Instruction Manual



1	
Table Of Contents	
2	
3	
4	
5	
6	
7	
8	
9	
10	
11	
12	
13	
14	
15	
16	
17	

18  
19  
20  
21  
22  
23  
24  
25  
26  
27

•

- 

Troubleshooting

•

Bookmarks

--

## Quick Links

[1 Operation Instructions](#)

[Download this manual](#)





**MICROWAVE OVEN  
INSTRUCTION MANUAL  
EC9P032SV-SV**

## [Table of Contents](#)

[Next Page](#)

1  
2  
3  
4  
5

## Related Manuals for Toshiba EC9P032SV-SV

[Microwave Oven Toshiba EC042A5C-BS Instructions Manual](#)

Microwave convection oven (37 pages)

[Microwave Oven Toshiba EC042A5C-BS Instruction Manual](#)

Microwave convection oven (44 pages)

[Microwave Oven Toshiba EC042A5C-BS Instructions Manual](#)

Convection oven (60 pages)

[Microwave Oven Toshiba EC034A2XC-S1 Instruction Manual](#)

(36 pages)

[Microwave Oven Toshiba EC0P042SV-SSHA Instruction Manual](#)

(34 pages)

[Microwave Oven Toshiba EC042A5C-SS Instructions Manual](#)

Microwave convection oven (36 pages)

[Microwave Oven Toshiba EC0P042SV-S Instruction Manual](#)

(40 pages)

[Microwave Oven Toshiba ER-GD400HK Instruction Manual](#)

Microwave oven with super heated steam oven (65 pages)

[Microwave Oven Toshiba EM245A5C-BS Instruction](#)

Microwave solo oven (32 pages)

[Microwave Oven Toshiba EM245A5C-BS Instructions Manual](#)

Solo oven (52 pages)

[Microwave Oven Toshiba EM131A5C-BS Instruction Manual](#)

Microwave solo oven (40 pages)

[Microwave Oven Toshiba EM925A5A-BS Instructions Manual](#)

Microwave solo oven (33 pages)

[Microwave Oven Toshiba ER-TD5000HK Instruction Manual](#)

Microwave oven with superheated steam oven for household appliances (64 pages)

[Microwave Oven Toshiba ER-LD430C Instruction Manual](#)

Microwave oven with superheated steam oven (66 pages)

[Microwave Oven Toshiba EM925A5A-SS Instruction Manual](#)

Microwave solo oven (40 pages)

[Microwave Oven Toshiba ER-ND300C Instruction Manual](#)

(156 pages)

## Summary of Contents for Toshiba EC9P032SV-SV

[Page 1](#) MICROWAVE OVEN INSTRUCTION MANUAL EC9P032SV-SV...

### [Page 2: Table Of Contents](#)

CONTENTS PRODUCT SAFETY PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE  
MICROWAVE ENERGY .....EN-3 IMPORTANT SAFETY INSTRUCTIONS .....EN-4  
MATERIALS YOU CAN USE IN MICROWAVE OVEN .....EN-9 MATERIALS TO BE AVOIDED IN  
MICROWAVE OVEN .....EN-10 PRODUCT INTRODUCTION SETTING UP YOUR OVEN  
.....EN-11 INSTRUCTION FOR USE OPERATION INSTRUCTIONS .....EN-14

### [Page 3: Product Safety](#)

(2). HINGES AND LATCHES (broken or loosened) (3). DOOR SEALS AND SEALING SURFACES (d). The oven should not be adjusted or repaired by anyone except properly qualified service personnel. SPECIFICATIONS Model: EC9P032SV-SV 120V~ 60Hz Rated Voltage: Rated Input Power (Microwave): 1400W Rated Output Power (Microwave):...

### [Page 4: Excessive Microwave Energy](#)

IMPORTANT SAFETY INSTRUCTIONS When using electrical appliances basic safety precautions should be followed, including the following: WARNING - To reduce the risk of burns, electric shock, re, injury to persons or exposure to excessive microwave energy: Read all instructions before using the appliance. Read and follow the specification: "PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY"...

[Page 5](#) PRODUCT SAFETY IMPORTANT SAFETY INSTRUCTIONS door, use only mild, nonabrasive soaps, or detergent applied with a sponge or soft cloth. To reduce the risk of re in the oven cavity: – Do not overcook food. Carefully attend appliance when paper, plastic, or other combustible materials are placed inside the oven to facilitate cooking.

[Page 6](#) GROUNDING INSTRUCTIONS This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug.

[Page 7](#) PRODUCT SAFETY RADIO INTERFERENCE 1. Operation of the microwave oven may cause interference to your radio, TV or similar equipment. 2. When there is interference, it may be reduced or eliminated by taking the following measures: (1). Clean door and sealing surface of the oven (2).

[Page 8](#) UTENSILS CAUTION Personal Injury Hazard Tightly-closed utensils could explode. Closed containers should be opened and plastic pouches should be pierced before cooking. See the instructions on "Materials you can use in microwave oven or to be avoided in microwave oven." There may be certain non-metallic utensils that are not safe to use for microwaving.

### [Page 9: Materials You Can Use In Microwave Oven](#)

PRODUCT SAFETY MATERIALS YOU CAN USE IN MICROWAVE OVEN UTENSILS REMARKS Follow manufacturer's instructions. The bottom of browning dish must be at least 3/16 inch (5mm) above the turntable. Incorrect usage may cause the turntable to break. Microwave-safe only. Follow manufacturer's instructions. Do not use Dinnerware cracked or chipped dishes.

### [Page 10: Materials To Be Avoided In Microwave Oven](#)

MATERIALS TO BE AVOIDED IN MICROWAVE OVEN UTENSILS REMARKS Aluminum tray May cause arcing. Transfer food into microwave-safe dish. Food carton with May cause arcing. Transfer food into microwave-safe dish. metal handle Metal or Metal shields the food from microwave energy. metal trimmed Metal trim may cause arcing.

### [Page 11: Product Introduction](#)

PRODUCT INTRODUCTION SETTING UP YOUR OVEN NAMES OF OVEN PARTS AND ACCESSORIES Remove the oven and all materials from the carton and oven cavity. Your oven comes with the following accessories: • This illustration is for reference only. Some accessories are available only with certain models, depending on the appliance model, individual details may differ.

### [Page 12: Setting Up Your Oven](#)

SETTING UP YOUR OVEN TURNTABLE INSTALLATION Cleaning the cooking compartment and putting the turntable in place. For new installations, make sure all packaging and shipping tape has been removed from the turntable shaft. Before using the appliance to prepare food for the first time, you will need to put the turntable in place correctly.

[Page 13](#) PRODUCT INTRODUCTION SETTING UP YOUR OVEN COUNTERTOP INSTALLATION Remove all packing material and accessories. Examine the oven for any damage such as dents or broken door. Do not install if oven is damaged. surface. Do not remove the light brown Mica

cover that is attached to the oven cavity to protect the magnetron.

## [Page 14: Instruction For Use](#)

INSTRUCTION FOR USE OPERATION INSTRUCTIONS CONTROL PANEL EN-14...

[Page 15](#) OPERATION INSTRUCTIONS This microwave oven uses modern electronic control to adjust cooking parameters to meet your needs better for cooking. 1.CLOCK SETTING In waiting state, press " Kit.Timer/Clock " twice, The hour gures will falsh. Turn parameter knob to set the hour gures.

[Page 16](#) INSTRUCTION FOR USE OPERATION INSTRUCTIONS 2. MICROWAVE COOKING Microwave Power Chart Level Power 100% Display PL10 Press the " Power " key once, "P100" displays. Turn parameter knob or press "Power" key repeatedly to set the power level .The 10 power levels are available.

[Page 17](#) OPERATION INSTRUCTIONS KITCHEN TIMER SETTING In waiting state, press " Kit.Timer/Clock " once, "00:00" displays. Turn parameter knob to set the desired time. The maximum time value is "95:00" Press The timer starts counting down. NOTE • During kitchen timer, any program cannot be set.

[Page 18](#) INSTRUCTION FOR USE OPERATION INSTRUCTIONS 7. HOMEFRY MENU In waiting state, Press the "Homefry" key , "H01" will ash. Turn parameter knob to set the menu. Press " " to start cooking . HOMEFRY MENU CHART Menu Display Frozen French Fries Frozen onion Rings Frozen chicken nuggets Fresh chicken wings...

[Page 19](#) OPERATION INSTRUCTIONS 6. AUTO MENU (A01-A07, A10) Turn parameter knob right , " A01"~" A10" will display in order. Press " " to con rm the menu. Turn parameter knob to set the weight. Press " " to start cooking. A08-A09 R epeat step to step...

[Page 20](#) INSTRUCTION FOR USE OPERATION INSTRUCTIONS 2. COMBINATION COOKING Instructions Display Microwave Grill Convection Press the " Combi " key once, " C-1 " will display. Turn parameter knob right or press the " Combi " key repeatedly, " C-2 " will display. Press "...

[Page 21](#) OPERATION INSTRUCTIONS 9. LOCK FUNCTION FOR CHILDREN You can use this function to prevent children from accidentally turning the oven on. To activate the lock: In waiting state, press and hold " " for three seconds. A long beep sounds and the locked icon will display.

[Page 22](#) INSTRUCTION FOR USE OPERATION INSTRUCTIONS 12. ECO FUNCTION To enter ECO mode: In waiting state, press " ". The screen To cancel ECO mode: In ECO mode, press any key to wake up the screen. 13. INQUIRING FUNCTION If the clock has been set, the current time will display for three seconds by pressing "...

[Page 23](#) INSTRUCTION FOR USE OPERATION INSTRUCTIONS 2. GRILL COOKING Press the " Broil " key once, then press " " to con rm, " G-1 "will display. Turn parameter knob to set the time. Press " " to start cooking . •...

[Page 24](#) OPERATION INSTRUCTIONS 2. CONVECTION COOKING WITH PREHEAT FUNCTION Press the " Bake " key once, the screen will display "350F". Turn parameter knob or press the " Bake " key repeatedly, 10 temperatures will display. Press " " to con rm . Press "...

[Page 25](#) OPERATION INSTRUCTIONS 2. CONVECTION COOKING WITHOUT PREHEAT FUNCTION TEMP Display 100F 150F 250F 275F 300F 325F 350F 375F 400F 425F Press the " Bake " key once, the screen will display "350F". Turn parameter knob or press the " Bake " key repeatedly, 10 temperatures will display.

[Page 26](#) OPERATION INSTRUCTIONS 2. CONVECTION COOKING WITHOUT PREHEAT FUNCTION Press the " Bake " key once, the screen will display "350F". Turn parameter knob or press the " Bake " key repeatedly, 10 temperatures will display. Press " " to con rm . Turn parameter knob to set the cook time.

## Page 27: Trouble Shooting

TROUBLE SHOOTING Check your problem by using the chart below and try the solutions for each problem. TROUBLE Possible Cause Possible Remedy Electrical cord for oven is not Plug into the outlet. Oven will not start plugged in. Close the door and try again. Door is open.