



Toshiba B-852 Series Supply Loading Instructions

1
2
3
4
5
6
7
8
9

--

•

[Table of Contents](#)

•

Bookmarks

Table of Contents

[1 Installing the Media Onto the Supply Holder Unit](#)

[2 Loading Media into the Printer](#)

[3 Setting Sensor Positions](#)

[4 Loading the Ribbon](#)

[Download this manual](#)



TOSHIBA Thermal Printer
TOSHIBA
B-852 Series

SUPPLY LOADING INSTRUCTIONS

This sheet contains only the media and ribbon loading procedures. Please be sure to read the Owner's Manual in the CD-ROM for further information about this printer.

1. LOADING THE MEDIA

1. Do not touch any moving parts. To reduce the risk of fingers, jewellery, clothing, etc., being drawn into the moving parts, be sure to load the media once the printer has stopped moving completely.
 2. The Print Head becomes hot immediately after printing. Allow it to cool before loading the
-

media.



3. Care must be taken not to pinch your fingers when opening or closing the Top Cover.

4. Be careful not to pinch your fingers by the Supply Holder Frame or Media Holders when loading the media.

1. Ne touchez pas aux éléments en mouvement. Pour éviter les risques que les doigts, les bijoux les habits, etc. soient tirés vers les éléments en mouvement, rassurez-vous de charger le média lorsque

l'imprimante est arrêtée complètement.

2. La tête chauffe beaucoup en imprimant. Laissez-la refroidir avant de charger le média.

3. Prenez garde à ne pas vous pincer les doigts lorsque vous manipulez la capot supérieur ou le capot coté droit.

4. Prenez garde à ne pas vous pincer les doigts lorsque vous manipulez le cadre support média ou les guides lors du chargement média.

1.1 Assembling the Supply Holder Frame

1. Assemble the Supply Holder Frame (L) and Supply Holder Frame (R) to the Supply Holder Base using the two M-4X6 Wing Bolts supplied, as shown below.

Wing Bolt

NOTE:

Make sure that the two small flanges at each end of the Supply Holder Base fit into the small rectangular holes at the bottom of the Supply Holder Frames before tightening the Wing Bolts.

AVERTISSEMENT!

Supply Holder Frame (R)

! 0 0 T S C C 0 1 5 6 6 0 3 !

WARNING

1

Supply Holder Frame (L)

Supply Holder Base

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba B-852 Series

[Barcode Reader Toshiba B-852 Owner's Manual](#)

(118 pages)

[Printer Toshiba B-880-QQ SERIES Owner's Manual](#)

Toshiba thermal printer owner's manual (34 pages)

[Printer Toshiba B-852-R Series Maintenance Manual](#)

(32 pages)

[Printer Toshiba B-852 Advance Specification Sheet](#)

Thermal transfer / direct thermal (2 pages)

[Printer Toshiba B-852 User Manual](#)

Thermal transfer / direct thermal (2 pages)

[Printer Toshiba B-EP2DL Series Maintenance Manual](#)

Potable printer (30 pages)

[Printer Toshiba B-SX6T Series Supply Loading Instructions](#)

(10 pages)

[Printer Toshiba B-SA4T Series Option Installation Manual](#)

(58 pages)

[Printer Toshiba B-SA4TM SERIES Owner's Manual](#)

Toshiba thermal printer owner's manual (114 pages)

[Printer Toshiba B-SA4TP Series Instructions Manual](#)

(9 pages)

[Printer Toshiba B-EX4 SERIES Maintenance Manual](#)

(173 pages)

[Printer Toshiba B-EX4 SERIES Product Description](#)

Thermal printer (55 pages)

[Printer Toshiba B-SX5T Product Description](#)

(57 pages)

[Printer Toshiba TEC B-SX4T Series Maintenance Manual](#)

(223 pages)

[Printer Toshiba B-FP3D SERIES Owner's Manual](#)

(39 pages)

[Printer Toshiba B-FV4T-GS12-QM-R Owner's Manual](#)

B-fv4t series (63 pages)

Summary of Contents for Toshiba B-852 Series

[Page 1](#) ! 0 0 T S C C 0 1 5 6 6 0 3 ! TOSHIBA Thermal Printer B-852 Series SUPPLY LOADING INSTRUCTIONS This sheet contains only the media and ribbon loading procedures. Please be sure to read the Owner's Manual in the CD-ROM for further information about this printer.

[Page 2: Installing The Media Onto The Supply Holder Unit](#)

2. Attach the assembled Supply Holder Frame to the rear of the B-852 printer by inserting the hooks of the Frame into the two slots in the rear of the printer as shown in the figure below.
Hook Hook NOTE: After attaching the supply holder frame to the printer, make sure that it is assembled firmly
1.2 Installing the Media onto the Supply Holder Unit 1.

[Page 3](#) 2. Install the Media and reassemble the Supply Holder. **WARNING!** If you turn the Removable Supply Holder side down after loading the media, the media may drop by weight. You might be injured by the dropped media. **AVERTISSEMENT!** Prenez garde à ne pas tenir le support de media avec la flasque amovible vers le bas car le rouleau de media peut tomber sous l'effet de son propre poids.

[Page 4](#) 1.3 Installing the Supply Holder Unit onto the Supply Holder Frame 1. Insert the assembled Supply Holder Unit into the rear notches of the Supply Holder Frame as shown in the diagram below. **CAUTION!** The reassembled Supply Holder Unit and media roll may be quite heavy, so be careful not to pinch your fingers when installing the Supply Holder Unit onto the Supply Holder Frame.

[Page 5: Loading Media Into The Printer](#)

1.4 Loading Media into the Printer **WARNING!** The Top Cover can be opened during the operation for control purposes only. It should be closed during normal operation. **AVERTISSEMENT!** Le capot supérieur peut être ouvert en fonctionnement à des fins de contrôle uniquement. Il doit être fermé...

[Page 6](#) 4. Release the locking levers on the two paper guides as shown in the figure below. 5. Grasp the right hand Paper Guide and move it to the right to open the Paper Guides wide enough to accept the media. 6.

[Page 7: Setting Sensor Positions](#)

11. If you are using labels or thick tag paper, then it may be necessary to increase the head pressure by lowering the Head Pressure Adjust Lever in the figure below. **NOTE:** Head Pressure Adjust Lever Position Head Pressure Adjust Lever position Head pressure Available media
•Thin tag paper •Narrow media...

[Page 8: Loading The Ribbon](#)

2. **LOADING THE RIBBON WARNING!** 1. The Print Head may become hot. Do not touch the Print Head. 2. The Top Cover can be opened during the operation for control purposes only. It should be closed during normal operation. 3. Risk of injuries. Do not touch moving parts. Disconnect the mains before maintenance of ribbon and media.

[Page 9](#) Be sure to remove any slack in the ribbon. Printing with a wrinkled ribbon will lower the print quality Copyright © 2011 < For EU Only > by TOSHIBA TEC CORPORATION TOSHIBA TEC Europe Retail Information Systems S.A. All Rights Reserved Rue de la Célidée 33 BE-1080 Brussels 570 Ohito, Izunokuni-shi, Shizuoka-ken, JAPAN...