 


Wired Setup; Wireless Setup;
Connecting With An Hdmi (Arc)
Cable; Connecting With An Hdmi
Cable - Toshiba 43C350KP Owner's
Manual

1
Table Of Contents
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29



•

-

Troubleshooting

•

Bookmarks



Wired Setup

Connect your TV to your network by connecting the LAN port on the back of your TV to an external modem or router using a LAN (Ethernet/Cat 5) cable. See the illustration below.

NOTES

- You get access to the Internet through your TV.
- You are recommended to use a modem or router that supports Dynamic Host Configuration Protocol (DHCP). Modems and routers that support DHCP automatically provide the IP address, subnet mask, gateway, and DNS, so you don't have to enter them manually. Most home networks already have DHCP.

IP Share (Router)
(with DHCP server)
LAN
LAN Cable



Wireless Setup

To connect your TV to your wireless network, you need a wireless router or modem. See the illustration below.

The TV's built-in Wireless LAN Adapter supports the IEEE802.11 ac/a/b/g/n communication protocols.

NOTES

- You get access to the Internet through your TV.
- Connect to an available wireless network.
- Make sure that you have the wireless router's SSID and password before attempting to connect.

Wireless Adapter
built-in the TV set

 
Connecting with an HDMI (ARC) Cable

Connect an HDMI cable from an external digital audio system. ARC enables the TV to directly output the digital sound through an HDMI cable. Please note that it works only when the TV is connected to the audio receiver that supports the ARC (Audio Return Channel) function.

HDMI
ARC
HDMI cable (not included)

NOTES

- When this port is used as the ARC function, it can be used as signal input when DVD is connected to amplifier and the amplifier is connected to the TV at the same time. (Some amplifiers may not support series connection.)
- ARC work by auto as per input ARC condition.

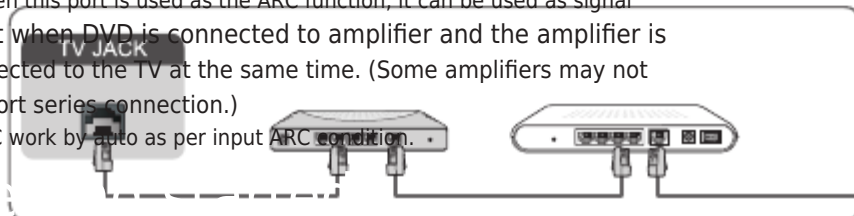

External Modem
(ADSL / VDSL / Cable TV)

LAN Cable

Modem Cable

Wireless Router

The LAN Port

on the Wall
(not provided)

LAN Cable

Audio Amplifier/Speaker

HDMI

Connecting with an HDMI Cable

Connect an HDMI cable from an external A/V equipment. Some devices such as DVD player require HDMI signal to be set to output in the device's settings. Please consult your device user manual for instructions. Please note that the HDMI connector provides both video and audio signals, so it's not necessary to connect an audio cable.

HDMI

Connecting with an USB Cable

 
 
Connect the USB devices such as hard drives, USB sticks and digital cameras for browsing photos, listening to music.

- Support the U disk 4G, 8G, 16G, 32G, 64G, 128G and other common market size, and 8T hard drive is currently supported.
- Support format: NTFS, FAT32, EXT4.

Using the USB storage device function

The USB storage device function can be used to record and view digital broadcast programmes.

Read the precautions below before recording or viewing programmes using the USB storage device function.

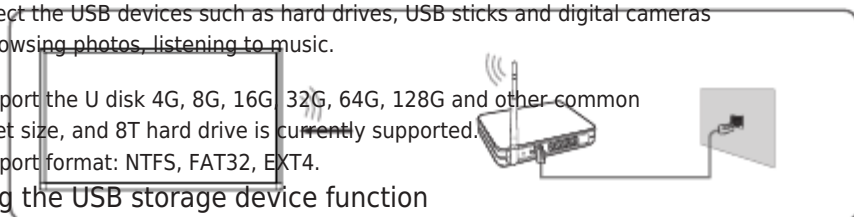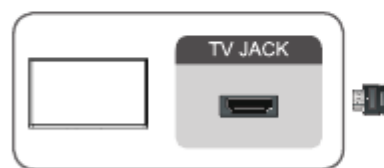

NOTES

• Be sure to select the correct country/region for use.
Use of the recording function may not be possible depending on the selected country/region.

 
Use with incorrect settings may violate certain laws or other regulations, and may result in criminal punishment.

In such cases, TOSHIBA CORPORATION and the Toshiba Group shall bear no responsibility whatsoever.

- Recorded programmes saved on the USB storage device can only be viewed on this TV. They cannot be viewed when connected to another TV (including the same model of TV), a PC, or other device.
- You cannot watch one channel while recording another.
- If the recording time to the USB storage device is too short, no data may be saved.
- You cannot record video input signals on the USB device.
- Not all types of broadcast may be recordable.
- After programming the TV to record digital broadcasting, do not disconnect the power plug before recording starts.
- Should video or audio recording fail due to malfunction of the TV or poor reception, no compensation shall be paid.
- Certain digital cameras may not be compatible with the TV.

9

DVD/Blu-Ray/AV receiver
/Set-top Box TV JACK
HDMI
HDMI cable (not included)

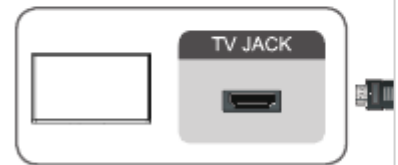

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
7
8
9
10
11
12
13
14

Quick Links:

[Tv Rear](#)

[Using the Settings](#)

[Specifications](#)

Related Manuals for Toshiba 43C350KP

[LED TV Toshiba 32L5660* Series Owner's Manual](#)

(60 pages)

[LED TV Toshiba 40L366 * Series Owner's Manual](#)

40-55" inches (54 pages)

[LED TV Toshiba 32L221U User Manual](#)

Led google cast tv (99 pages)

[LED TV Toshiba 43UL5A63DB Quick Start Manual](#)

(17 pages)

[LED TV Toshiba 43TL5A Series Operating Instructions Manual](#)

(35 pages)

[LED TV Toshiba 43U5865 Series Owner's Manual](#)

(27 pages)

[LED TV Toshiba 50U5865 Series Owner's Manual](#)

(52 pages)

[LED TV Toshiba 32L5865 Series Owner's Manual](#)

(26 pages)

[LED TV Toshiba 43U5069 Owner's Manual](#)

(29 pages)

[LED TV Toshiba 43U2063DB Quick Start Manual](#)

(17 pages)

[LED TV Toshiba 43U5050 Series Owner's Manual](#)

(28 pages)

[LED TV Toshiba 32L5069 Series Owner's Manual](#)

(27 pages)

[LED TV Toshiba 43UA3D Series Operating Instructions Manual](#)

(45 pages)

[LED TV Toshiba 50UA3D63DG Operating Instructions Manual](#)

(45 pages)

[LED TV Toshiba 43UA3A63DB Quick Start Manual](#)

(12 pages)

[LED TV Toshiba 43UK3163DB Quick Start Manual](#)

(12 pages)

Related Content for Toshiba 43C350KP

[43UL2063DT Wired Connectivity](#)

Toshiba 43UL2063DT

[QA7D63DG Initial Setup Wizard](#)

Toshiba QA7D63DG

[43UA3D Series Initial Setup Wizard](#)

Toshiba 43UA3D Series

[50QF5D53DB Initial Setup Wizard](#)

Toshiba 50QF5D53DB

[58L9300UC Connecting The Tv To A Home Network With An Internet Connection - Wired](#)

Toshiba 58L9300UC

[40D355 DB Series Language Setup](#)

Toshiba 40D355 DB Series

[55 XA9D Series Initial Setup Wizard](#)

Toshiba 55 XA9D Series

[55UA3D63DB Initial Setup Wizard](#)

Toshiba 55UA3D63DB

This manual is also suitable for:

[43e350kp50c350kp50e350kp55c350kp55e350kp65c350kp...](#) [Show all](#)