

 


# Menu; Using The Menu - Toshiba 43C350KP Owner's Manual



1
Table Of Contents
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29



•

- 


Troubleshooting

•

## Bookmarks





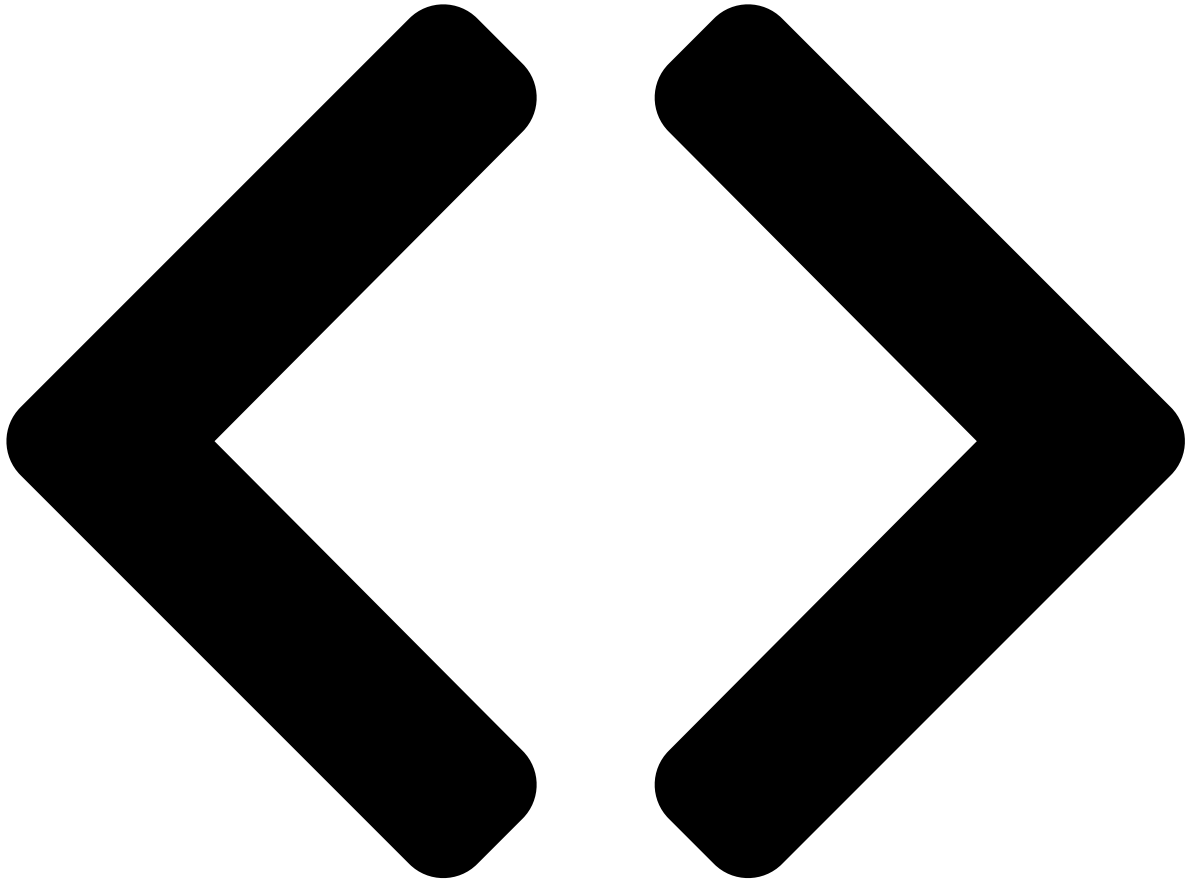




## Using the Menu

1

Press the [  ] button on your remote to enter the Menu in TV mode.

The Menu consists of the following settings:

- Picture
- Sound 
- Channels
- Parental Control
- Teletext
- Subtitle
- EPG (GUIDE)
- HDMI 2.0 Format (only for HDMI mode)
- Audio Language (MTS)
- Audio Only 



- Sleep Timer
- Settings
- Help

2

In each menu, you can:

Press the [ Up / Down / Left / Right ] buttons to select an item,

Press the [ OK ] button to enter the sub-menu or to set on or off,

Press the [ Left / Right ] buttons to adjust the value,

Press the [

]/[

] button to return to the previous menu.

NOTE

The menus in the user manual may vary slightly from the actual screen.

## Picture

### Backlight

Adjust Dynamic Backlight Control and Backlight Level to change the overall brightness of the screen.

- Dynamic Backlight Control: Enhance the contrast ratio between light and dark areas of the picture. You can select On or Off.

NOTE: Some models don't support this function.

- Backlight level: Adjust how bright you want images to appear, lower settings create darker images. The Backlight level is only available when Dynamic Backlight Control select Off.

### Picture Mode

Select a preset picture mode to best suit the content you're viewing.

Once you choose the mode, you can adjust the picture based on the following settings:

### Contrast

Adjust the Contrast level to increase or decrease how bright images appear.

### Brightness

Adjust the Brightness level to generate lighter or darker images.

### Colour

Adjust the colour intensity of the picture for a more vibrant image.

### Tint

Adjust the colours from a green to magenta tint to view the natural skin tones of people on the screen.

### Sharpness

Adjust how sharp or soft edges of images appear.

### Aspect Ratio

Adjust the Aspect Ratio to stretch or zoom in on your picture.

NOTES

- Using the special functions to change the size of the displayed image (e.g. changing the height/width ratio) for the purpose of public display or commercial gain may infringe on copyright laws.
- If the aspect ratio of the selected format is different from the one of the TV transmission or video programme, it can cause a difference in vision.
- When using PC connected via HDMI terminal, the moving image quality may be deteriorated.


### Advanced Settings

Adjust advanced picture settings based on your viewing preference.

- **Overscan:** Change the video size settings to slightly crop the edges of the displayed image.
- **Colour Temperature:** Select a preset colour temperature adjust to Low, Mid-Low, Medium or High the white areas of an image appear.

- **Motion Enhancement:** Reduce seeing afterimages that are left on the screen when viewing fast-moving objects.

NOTE: Some models don't support this function.

- **Noise Reduction:** Improve how clear the picture appears by reducing noise. 

- **Digital Noise Reduction:** Reduce MPEG block noise and provides clearer edge transitions.

NOTE: Some models don't support this function.

- **HDMI Dynamic Range:** Adjust the HDMI signal range to be more suitable for the content. (HDMI mode only)

- **Active Contrast:** Automatically darken dark areas and lighten light areas of images to see more details.

- **Colour Space:** Change the range of colours the TV displays.

NOTE: Some models don't support this function.

### Calibration Settings

Adjust the colour space and Gamma to best suit the content you're viewing.

- **Colour Tuner:** Adjust the Hue, Saturation, Brightness of colour settings and restore colour tuner settings.

- **White Balance:** Adjust the intensity of red, green and blue lights to view the true colours of all images in the picture and make reset.

- **Gamma:** Adjust the Gamma to alter how the TV will respond to the grayscale content. In a dark room choose a Higher number like 2.2. In a brighter area select a Lower number like 2.0. In general, 2.2 is normally recommended.

NOTE: Some models don't support this function.

[Previous Page](#)  
[Next Page](#)

1  
...  
13  
14  
15  
16  
17  
18  
19  
20

Quick Links:

[Tv Rear](#)

[Using the Settings](#)

[Specifications](#)

## Related Manuals for Toshiba 43C350KP

[LED TV Toshiba 32L5660\\* Series Owner's Manual](#)

(60 pages)

[LED TV Toshiba 40L366 \\* Series Owner's Manual](#)

40-55" inches (54 pages)

[LED TV Toshiba 32L221U User Manual](#)

Led google cast tv (99 pages)

[LED TV Toshiba 43UL5A63DB Quick Start Manual](#)

(17 pages)

[LED TV Toshiba 43TL5A Series Operating Instructions Manual](#)

(35 pages)

[LED TV Toshiba 43U5865 Series Owner's Manual](#)

(27 pages)

[LED TV Toshiba 50U5865 Series Owner's Manual](#)

(52 pages)

[LED TV Toshiba 32L5865 Series Owner's Manual](#)

(26 pages)

[LED TV Toshiba 43U5069 Owner's Manual](#)

(29 pages)

[LED TV Toshiba 43U2063DB Quick Start Manual](#)

(17 pages)

[LED TV Toshiba 43U5050 Series Owner's Manual](#)

(28 pages)

[LED TV Toshiba 32L5069 Series Owner's Manual](#)

(27 pages)

[LED TV Toshiba 43UA3D Series Operating Instructions Manual](#)

(45 pages)

[LED TV Toshiba 50UA3D63DG Operating Instructions Manual](#)

(45 pages)

[LED TV Toshiba 43UA3A63DB Quick Start Manual](#)

(12 pages)

[LED TV Toshiba 43UK3163DB Quick Start Manual](#)

(12 pages)

## Related Content for Toshiba 43C350KP

[40D355 DB Series Auto Channel Scan Menu Operation](#)

Toshiba 40D355 DB Series

[55 XA9D Series Live Tv Mode Menu Content](#)

Toshiba 55 XA9D Series

[24L3965EA Using The Picture Menu](#)

Toshiba 24L3965EA

[65 UA32 Series Live Tv Mode Menu Content](#)

Toshiba 65 UA32 Series

[19L4200UOM Chapter 4: Menu Layout And Navigation](#)

Toshiba 19L4200UOM

[L2556DB Quick Menu](#)

Toshiba L2556DB

[Satellite Series Quick Menu](#)

Toshiba Satellite Series

[32L5069 Series Using The Menu Function](#)

Toshiba 32L5069 Series



This manual is also suitable for:

[43e350kp50c350kp50e350kp55c350kp55e350kp65c350kp...](#) [Show all](#)