



# Toshiba 40L1353B Online Manual

Dvb-t & dvb-t2



1
2
Table Of Contents
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46

--

•

[Table of Contents](#)

•

Bookmarks

--

## Quick Links

[1 The Remote Control](#)

[Download this manual](#)





**TOSHIBA** MANUAL

Leading Innovation >>>

40L1353B

40L1354B

LED Backlight LCD TV

DVB-T & DVB-T2

During the life of your TV firmware updates will be made



available  
to ensure that your TV maintains optimum performance.  
You can

download the latest version of firmware from

**[www.toshiba-om.net/firmware.php](http://www.toshiba-om.net/firmware.php)**

\*Some features listed in this document are limited due to  
local

legislation and may not be available in all countries.

"Register your TV online at: [www.toshiba.co.uk/registration](http://www.toshiba.co.uk/registration)"

[Table of Contents](#)

[Next Page](#)

1  
2  
3  
4  
5

# Summary of Contents for Toshiba 40L1353B

[Page 1](#) TV maintains optimum performance. You can download the latest version of firmware from [www.toshiba-om.net/firmware.php](http://www.toshiba-om.net/firmware.php) \*Some features listed in this document are limited due to local legislation and may not be available in all countries. "Register your TV online at: [www.toshiba.co.uk/registration](http://www.toshiba.co.uk/registration)"...

[Page 2](#) New channels are launched on Freeview from time to time along with other updates to the service. So it pays to retune your digital TV periodically to make sure your Digital TV/Radio channels are up to date. To retune your Toshiba Digital TV, please refer to the Re-tune section for guidance.

## [Page 3: Table Of Contents](#)

Digital Cable Manual Search .....16 Configuring Sound Settings .....27 Re-tune Section .....  
17 Configuring Sound Settings .....27 Re-tuning: TOSHIBA Freeview Products ....17 Operating  
Sound Settings Menu Items ..... 27 General Operation .....18 Volume ..... 27 Stereo and  
Bilingual Transmissions....

[Page 4](#) Date/Time .....28 Sources..... 28 Other Settings ..... 28 Using a Conditional  
Access Module ....28 Setting Timers, Setting Date/Time .....29 Timers ..... 29 Setting Sleep  
Timer ..... 29 Setting Programme Timers ..... 29 Configuring Date/Time Settings .....29  
Source Settings, Other Controls .....

## [Page 5: Safety Precautions](#)

Safety Precautions This equipment has been designed and manufactured to meet international safety standards but, like any electrical equip- ment, care must be taken to obtain the best results and for safety to be assured. Please read the points below for your own safety.

## [Page 6: Installation And Important Information](#)

Furthermore, under no circumstances shall Toshiba be liable for any consequential loss and/or damage including but not limited to the following, loss of profit, interruption of business, the loss of recorded data whether caused during normal opera- tion or misuse of the product.

## [Page 7: Important Safety Information](#)

Important safety information • Any function relative to the digital television (with the DVB logo) is available only within the country or area where such signals are transmitted. Verify with the salesperson if it is possible to receive a DVB-T/T2 signal in the zone where you live.

## [Page 8: Removing The Pedestal Stand](#)

(3) After the screws are removed, hold the pedestal stand in place, then remove the pedestal stand and the plastic moulding from the TV by removing away from the TV. NOTE: Extreme care should always be used when removing the pedestal stand to avoid damage to the LCD panel. For 40L1353B and 40L1354B models English - 7 -...

## [Page 9: The Remote Control](#)

The Remote Control Simple at-a-glance reference of your remote control. 1. Standby 20. Green button 2. Image size 21. Picture mode selection 3. Sleep Timer 22. No function 4. Mono/Stereo - Dual I-II / 23. Teletext / Mix (in TXT Current Language mode) (in DVB channels)

## [Page 10: Connecting External Equipment](#)

Connecting External Equipment Before connecting any external equipment, remove the mains plug from the wall socket. Side View COMMON INTERFACE The Common Interface is for a Conditional Access Module (CAM). USB Input HDMI Input LAN Input 5Vdc Sockets Max:500mA RGB/PC USB Input Input SPDIF...

## [Page 11: Connecting An Hdmi ® Or Dvi Device To The Hdmi Input](#)

Connecting an HDMI or DVI Device to the HDMI Input ® To Connect a DVI Device The HDMI inputs on your TV receive digital audio and uncompressed digital video from an HDMI source device Connect an HDMI-to-DVI cable (HDMI type A connector) to the or uncompressed digital video from a DVI (Digital Visual HDMI input socket and audio cables to the RED and WHITE

Interface) source device.

## [Page 12: To Connect A Computer](#)

Connecting a Computer Connecting a USB Memory To Connect a Computer To Connect a USB Flash Drive With either an RGB/PC or an HDMI connection, you can watch • You can connect a USB Flash Drive to your TV by your computer's display on the TV and hear the sound from using the USB input of the TV.

## [Page 13: Power Save Mode](#)

Power Save Mode Environmental Information This television is designed to consume less energy to save environment. You not only help to save the environment but also you can save money by reducing electricity bills thanks to the energy efficiency feature of this TV.

## [Page 14: Controlling The Tv](#)

Controlling the TV A wide variety of external equipment can be connected via the sockets located on the side and back of the TV. Whilst all the necessary adjustments and controls for the TV are made using the remote control, the buttons on the Back of the TV may be used for some functions.

## [Page 15: Initial Installation](#)

Initial Installation Before switching on the TV, put your decoder and media recorder to Standby if they are connected and ensure the aerial is connected to your TV. To set up the TV, use the buttons on the remote control as detailed on page 8.

## [Page 16: Auto Tuning](#)

Initial Installation - Auto Tuning continued 9. If you select Aerial option from the Search Type Auto Tuning screen, the television will search for broadcasts. As new services are broadcast, it will be necessary to 10. The Auto tuning screen will appear and the retune the television in order to view them.

## [Page 17: Manual Tuning, Analogue Fine Tuning](#)

Manual Tuning, Fine Tuning The television can be tuned-in manually using Manual Search feature. Digital Aerial Manual Search The feature is available for service engineers or can be used for direct channel entry if the multiplex channel is known. • Select Manual channel scan from the Install and Retune menu and press OK.

## [Page 18: Re-Tune Section](#)

You must allow the television to complete the search. \* This retune process may affect any saved information stored on your product. Please consult your on-line web manual or contact the Toshiba support as detailed below. TOSHIBA Customer Helpline: 0871 495 0730 TOSHIBA Online Support: [www.toshiba.co.uk/tv-dvd-support...](http://www.toshiba.co.uk/tv-dvd-support...)

## [Page 19: General Operation](#)

General Operation Stereo and Bilingual Transmissions Standby Notifications If the TV switches off while in No Signal mode, the If stereo or dual language broadcasts are transmitted, the word Stereo or Dual will appear on the screen each time following on-screen message will be displayed on the positions are changed, disappearing after a few seconds.

## [Page 20: Channel List, Sorting Programmes, Programme Locking](#)

Channel List, Sorting Programmes, Programme Locking You can view stored channels and sort them by using the Channel List feature. Viewing Channel List • Selected channel is now moved. Deleting a Channel The channel order may be changed to suit your personal preference.

## [Page 21: Viewing Info Banner, Electronic Programme Guide](#)

Viewing Info Banner, Electronic Programme Guide Viewing Info Banner • Press SUBTITLE button to sort channels by a genre. • For information on a highlighted programme, press • Press INFO button. The information screen will INFO button. appear giving details of the channel and programme currently being viewed.

## [Page 22: Language Selection](#)

Language Selection Language Settings Using this menu you can adjust the preferred language settings. • Press MENU button and select Settings by using Left or Right button. • Select Language from setup menu and press OK to view this menu. Press the RETURN button on the remote control to exit.

## [Page 23: Digital Settings - Parental Control, Menu Lock, Set Pin](#)

Digital Settings - Parental Control, Menu Lock, Set PIN You can view or set parental preferences of your TV. Viewing Parental Control Menu Child Lock Press MENU button and select the Settings by using Press MENU button and select settings by using Left or Right button.

## [Page 24: Configuring Picture Settings](#)

Configuring Picture Settings You can configure picture settings of your TV by using Picture Settings menu. Configuring Picture Settings Brightness You can use different picture settings in detail. You Sets the brightness value for the screen. Press can customize current picture mode settings as MENU button and select Picture by using Left or desired.

## [Page 25: Reset](#)

Configuring Picture Settings - continued Dynamic Contrast: You can change contrast rate by Note: The reset function does not reset the settings for using dynamic contrast function. Dynamic contrast Mode, Colour Temp, Noise Reduction, Picture Zoom can be set to one of these options: Low, Medium, and HDMI True Black.

## [Page 26: Changing Picture Format](#)

Changing Picture Format Press SCREEN button repeatedly to select between Auto(\*), 16:9, Subtitle, 14:9, 14:9 Zoom, 4:3 or Cinema. Note: Using the special functions to change the size of the displayed image (i.e. changing the height/width ratio) for the purposes of public display or commercial gain may infringe on copyright laws. Note: You can shift to screen up or down by pressing “...

## [Page 27: Configuring Pc Picture Settings](#)

Configuring PC Picture Settings PC Picture Settings (\*) V Position (\*) While in VGA/PC mode, some items in Picture V (Vertical) Position shifts the image vertically towards menu will be unavailable. Instead, VGA mode settings the top or bottom of the screen. will be added to the Picture Settings while in VGA/ In the PC Position menu press the Down button until PC mode.

## [Page 28: Configuring Sound Settings](#)

Configuring Sound Settings You can configure sound settings of your TV by using Sound Settings menu. Configuring Sound Settings Note: Equalizer menu settings can be changed manually only when the Equalizer Mode is in User. Sound settings can be configured according to your Balance (Only for speaker) personal preferences.

## [Page 29: Settings Menu Operation, Conditional Access](#)

Settings Menu Operation, Conditional Access Configuring Your TV's Settings Other Settings Detailed settings can be configured to suit your Displays other setting options of the TV set. personal preferences. Using a Conditional Access Module Viewing Settings Menu The Common Interface Slot, situated on the side of the Press MENU button and select Settings by using Left television, enables the insertion of a CAM (Conditional or Right button.

## [Page 30: Setting Timers, Setting Date/Time](#)

Setting Timers, Setting Date/Time Timers Editing a Timer • Select the timer you want to edit by pressing Up or To view Timers menu, press MENU button and select Settings by using Left or Right button. Press OK Down button. button to view Settings menu.

## [Page 31: Source Settings, Other Controls](#)

Source Settings, Other Controls Configuring Source Settings Configuring Other Settings - General You can enables or disable selected source options. The You can configure the settings of your TV. Select TV will not switch to the disabled source options when the Settings from main menu and press OK to view the SOURCE button is pressed.



## [Page 32: Blue Background](#)

Other Controls - continued Blue Background • Press OK button to enter Audio Description submenu. If the signal is weak or absent, the TV will automatically • Use Up or Down button to select Audio Description change to a blue screen. To enable this, set Blue setup and then press Left or Right button to set Background to On.

## [Page 33: Manual Start](#)

• You must obtain any required permission from copyright owners to use copyright content. Toshiba cannot and does not grant such permission. • Depending on the file size and amount in your USB memory, it may take some time for loading to view.

## [Page 34: Playing Mp3 Files](#)

USB Media Browser - continued This TV allows you to enjoy photo, music or video files stored on a USB memory Playing MP3 Files Viewing JPEG Files To play mp3 files from a USB memory, you can use To view photo files from a USB Memory, you can use this menu screen.

## [Page 35: Slideshow Feature](#)

USB Media Browser - continued This TV allows you to enjoy photo, music or video files stored on a USB memory Slideshow Feature LANG. (Play Preview): Displays selected file in a small preview screen. You can use this feature to display photos on your TV. RED: Sorts files by name.

## [Page 36: Media Browser Settings](#)

USB Media Browser - continued This TV allows you to enjoy photo, music or video files stored on a USB memory Using MENU button in Media Browser Mode In order to display movie subtitles correctly, you should set a "Movie Subtitle" language. See the section, Pressing MENU button in Media Browser mode "Movie Subtitle"...

## [Page 37: Analogue Only Text Services](#)

• For further information on your particular text system(s), see the broadcast text index page or, consult your local Toshiba dealer. Below is a guide to the functions of the remote control text buttons. Accessing Sub-Pages If a text page has sub-pages, press and enter the sub- page numbers 01,02,03 etc.

## [Page 38: Appendix A: Pc Input Typical Display Modes](#)

Appendix A: PC Input Typical Display Modes The following table is an illustration of some of the typical video display modes. Some, due to the display native resolution, are scaled automatically to enable correct image to be displayed. Your TV may not support different resolutions. Supported resolution modes are listed below. If you switch your PC to an unsupported mode, a warning OSD will appear on the screen.

## [Page 39: Appendix B: Av And Hdmi Signal Compatibility \(Input Signal Types\)](#)

Appendix B: AV and HDMI Signal Compatibility (Input Signal Types) Supported Source Available Signals NTSC 60 EXT-1 (SCART1) RGB 50/60 SECAM EXT-1 NTSC 60 (SCART2) SECAM PAL 50/60 Side AV NTSC 60 SECAM 480i 60Hz 480P 60Hz 576i 50Hz 576P 50Hz YPbPr 720P...

## [Page 40: Appendix C: Pin Information](#)

Appendix C: PIN Information Before connecting any external equipment, turn off all main power switches. If there is no switch, remove the mains plug from the wall socket. Signal information for Mini D-sub 15 pin connector Pin No. Signal name Pin No.

## [Page 41: Appendix D: Supported File Formats For Usb Mode](#)

Appendix D: Supported File Formats for USB Mode Media Extension Format Notes Video Audio Movie dat, mpg, Mpeg1,2 MPEG1/2 Layer 1/2/3, AAC/HEAAC, 1080P@ 30fps 50Mbit/ mpeg AC3/EAC3, LPCM/ADPCM dat, mpg, MPEG2 ,H.264, VC1, AVS, MPEG1/2 Layer 1/2/3, AAC/HEAAC, H.264:1080Px2@25fps mpeg AC3/EAC3, LPCM/ADPCM 1080P@ 50fps MVC: 1080P@ 24fps Other:...

## [Page 42: Specifications And Accessories](#)

365 days. The actual energy consumption will depend on how the television is used.  
Specification is subject to change without notice. A (mm) B (mm) C (mm) D (mm) E (mm) F (mm) G (mm) 40L1353B 934.32 559.84 248.51 97.80 40L1354B English - 41 -...

## [Page 43: License Information](#)

License Information • HDMI, the HDMI logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries. • DVB is a registered trademark of the DVB Project. • [1] EIA/CEA-861-D compliance covers the transmission of uncompressed digital video with high-bandwidth digital content protection, which is being standardized for reception of high-definition video signals.

## [Page 44: Q & A Section](#)

Q & A Section Question Answer "Check the TV is not in standby mode. Why is there no sound or picture? Check the mains plug and all mains connections" Check the volume has not been turned down or that sound mute Why is there a picture but no sound? has not been selected Why is the sound only coming from...

[Page 45](#) EU Conformity Statement This product is carrying the CE-Mark in accordance with the related European Directives. Responsible for CE-Marking is TOSHIBA TELEVISION CENTRAL EUROPE Sp. z o.o., ul. Pokoju 1 Biskupice Podgórze 55-040 Kobierzyce, Poland This product is labeled with the CE Mark in accordance with the related European Directives, notably Low Voltage Directive 2006/95/EC, Electromagnetic Compatibility Directive 2004/108/EC and RoHS Directive 2011/65/EU.

[Page 46](#) If you wish to view the advanced functions but do not have access to a computer or the internet then please contact your nearest owner's manual Helpline number from the numbers shown below. Country name locally Contact Number Österreich 0810 - 144 122 (7,3 ct/min aus dem Festnetz der Telekom Austria, Mobil ggf.

This manual is also suitable for:

40L1354b