



# Toshiba 40D1333B Online Manual

Led backlight lcd tv



1

2

Table Of Contents

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53

---

•

[Table of Contents](#)

•

## Bookmarks

[Download this manual](#)

## Quick Links





**TOSHIBA**  
Leading Innovation >>>

**ONLINE MANIA**

## Table of Contents

[Next Page](#)

1  
2  
3  
4  
5

# Summary of Contents for Toshiba 40D1333B

[Page 2](#) So it pays to retune your digital TV periodically to make sure your Digital TV/Radio channels are up to date. To retune your Toshiba Digital TV, please refer to the Re-tune section for guidance. Alternatively find out more on the dedicated Freeview website: [www.freeview.co.uk/retune...](http://www.freeview.co.uk/retune...)

## [Page 3: Table Of Contents](#)

Digital Cable Manual Search .....16 Volume ..... 27 Re-tune Section ..... 17 Equalizer (Only for speaker) .....27 Re-tuning: TOSHIBA Freeview Products ....17 Balance (Only for speaker) ..... 27 General Operation .....18 Headphone .....27 Stereo and Bilingual Transmissions....18 Sound Mode .....

[Page 4](#) Date/Time .....28 Media Browser Settings .....42 Sources..... 28 Using MENU button in Media Browser Mode ... 42 Other Settings ..... 28 To Close the Media Player ..... 42 Using a Conditional Access Module ....28 Analogue Only Text Services ..... 43 Setting Timers, Setting Date/Time .....

## [Page 5: Safety Precautions](#)

Safety Precautions This equipment has been designed and manufactured to meet international safety standards but, like any electrical equip- ment, care must be taken to obtain the best results and for safety to be assured. Please read the points below for your own safety.

## [Page 6: Installation And Important Information](#)

Furthermore, under no circumstances shall Toshiba be liable for any consequential loss and/or damage including but not limited to the following, loss of profit, interruption of business, the loss of recorded data whether caused during normal opera- tion or misuse of the product.

## [Page 7: Important Safety Information](#)

Important safety information • Any function relative to the digital television (with the DVB logo) is available only within the country or area where such signals are transmitted. Verify with the salesperson if it is possible to receive a DVB-T signal in the zone where you live.

## [Page 8: Removing The Pedestal Stand](#)

(3) After the screws are removed, hold the pedestal stand in place, then remove the pedestal stand and the plastic moulding from the TV by removing away from the TV. NOTE: Extreme care should always be used when removing the pedestal stand to avoid damage to the LCD panel. 40D1333B 40D1334B models English - 7 -...

## [Page 9: The Remote Control \(Tv - Dvd\)](#)

The Remote Control (TV - DVD) Simple at-a-glance reference of your remote control. Standby 20. Green button Standby Repeat 21. Picture mode selection Image size Sleep Timer 22. No function Mono/Stereo - Dual I-II / Current 23. Teletext / Mix (in TXT mode) Language 24.

## [Page 10: Connecting External Equipment](#)

Connecting External Equipment Before connecting any external equipment, remove the mains plug from the wall socket. Side View COMMON INTERFACE The Common Interface is for a Conditional Access Module (CAM). USB Input HDMI Input 5Vdc Sockets Max:500mA RGB/PC USB Input Input SPDIF DIGITAL AUDIO...

## [Page 11: Connecting An Hdmi ® Or Dvi Device To The Hdmi Input](#)

Connecting an HDMI or DVI Device to the HDMI Input ® Connect a DVI Device The HDMI inputs on your TV receive digital audio and uncompressed digital video from an HDMI source device Connect an HDMI-to-DVI cable (HDMI type A connector) to the or uncompressed digital video from a DVI (Digital Visual HDMI input socket and audio cables to the RED and WHITE Interface) source device.

## [Page 12: To Connect A Computer](#)

Connecting a Computer Connecting a DVD Player Connecting to a DVD Player via YPbPr To

Connect a Computer Some DVD players are connected through With either an RGB/PC or an HDMI connection, you can watch your computer's display on the TV and hear the sound from COMPONENT SOCKETS (YPbPr).

### [Page 13: Power Save Mode](#)

Power Save Mode Environmental Information This television is designed to consume less energy to save environment. You not only help to save the environment but also you can save money by reducing electricity bills thanks to the energy efficiency feature of this TV.

### [Page 14: Controlling The Tv](#)

Controlling the TV A wide variety of external equipment can be connected via the sockets located on the side and back of the TV. Whilst all the necessary adjustments and controls for the TV are made using the remote control, the buttons on the Back of the TV may be used for some functions.

### [Page 15: Initial Installation](#)

Initial Installation Before switching on the TV, put your decoder and media recorder to Standby if they are connected and ensure the aerial is connected to your TV. To set up the TV, use the buttons on the remote control as detailed on page 8 5.

### [Page 16: Using Text Button -Text](#)

Note: You can press MENU button to cancel. consult your local Toshiba dealer. After the available stations are stored, Channel List will be displayed on the screen. If you like the sort channels, according to the LCN, please select Yes and then press OK button (if available).

### [Page 17: Auto Tuning](#)

Auto Tuning Manual Tuning, Fine Tuning The television can be tuned-in manually using Manual Search feature. Auto Tuning Digital Aerial Manual Search As new services are broadcast, it will be necessary to The feature is available for service engineers or retune the television in order to view them.

### [Page 18: Re-Tune Section](#)

You must allow the television to complete the search. \* This retune process may affect any saved information stored on your product. Please consult your on-line web manual or contact the Toshiba support as detailed below. TOSHIBA Customer Helpline: 0871 495 0730 TOSHIBA Online Support: [www.toshiba.co.uk/tv-dvd-support...](http://www.toshiba.co.uk/tv-dvd-support...)

### [Page 19: General Operation](#)

General Operation Stereo and Bilingual Transmissions Standby Notifications If the TV switches off while in No Signal mode, the If stereo or dual language broadcasts are transmitted, the word Stereo or Dual will appear on the screen each time following on-screen message will be displayed on the positions are changed, disappearing after a few seconds.

### [Page 20: Channel List, Sorting Programmes, Programme Locking](#)

Channel List, Sorting Programmes, Programme Locking You can view stored channels and sort them by using the Channel List feature. Viewing Channel List • Selected channel is now moved. Deleting a Channel The channel order may be changed to suit your personal preference.

### [Page 21: Viewing Info Banner, Electronic Programme Guide](#)

Viewing Info Banner, Electronic Programme Guide Viewing Info Banner • Press BLUE button to display filtering options. • Press SUBTITLE button to sort channels by a genre. • Press INFO button. The information screen will appear giving details of the channel and programme •...

### [Page 22: Language Selection](#)

Language Selection Language Settings Using this menu you can adjust the preferred language settings. • Press MENU button and select Settings by using Left or Right button. • Select Language from setup menu and press OK to view this menu. Press the RETURN button on the remote control to exit.

## [Page 23: Digital Settings - Parental Control, Menu Lock, Set Pin](#)

Digital Settings - Parental Control, Menu Lock, Set PIN You can view or set parental preferences of your TV. Viewing Parental Control Menu continue. Enter the pin number. Child Lock disables the buttons on the television. All buttons on the remote Press MENU button and select the Settings by using control can still be used.

## [Page 24: Configuring Picture Settings](#)

Configuring Picture Settings You can configure picture settings of your TV by using Picture Settings menu. Configuring Picture Settings Right button. Press Up or Down button to select Brightness. You can use different picture settings in detail. You Sharpness can customize current picture mode settings as desired.

## [Page 25: Reset](#)

Configuring Picture Settings - continued Dynamic Contrast: You can change contrast rate by using dynamic contrast function. Dynamic contrast can be set to one of these options: Low, Medium, High or Off. Colour Temp: Colour Temperature increases the 'warmth' or 'coolness' of the picture by increasing the red or blue tint.

## [Page 26: Changing Picture Format](#)

Changing Picture Format Press SCREEN button repeatedly to select between Auto(\*), 16:9, Subtitle, 14:9, 14:9 Zoom, 4:3 or Cinema. Note: Using the special functions to change the size of the displayed image (i.e. changing the height/width ratio) for the purposes of public display or commercial gain may infringe on copyright laws. Note: You can shift to screen up or down by pressing "...

## [Page 27: Configuring Pc Picture Settings](#)

Configuring PC Picture Settings PC Picture Settings (\*) V Position (\*) While in VGA/PC mode, some items in Picture V (Vertical) Position shifts the image vertically towards menu will be unavailable. Instead, VGA mode settings the top or bottom of the screen. will be added to the Picture Settings while in VGA/ In the PC Position menu press the Down button until PC mode.

## [Page 28: Configuring Sound Settings](#)

Configuring Sound Settings You can configure sound settings of your TV by using Sound Settings menu. Configuring Sound Settings Balance (Only for speaker) Sound settings can be configured according to your This setting is used for emphasizing left or right speaker personal preferences.

## [Page 29: Settings Menu Operation, Conditional Access](#)

Settings Menu Operation, Conditional Access Configuring Your TV's Settings Other Settings Detailed settings can be configured to suit your Displays other setting options of the TV set. personal preferences. Using a Conditional Access Module Viewing Settings Menu The Common Interface Slot, situated on the side of the Press MENU button and select Settings by using Left television, enables the insertion of a CAM (Conditional or Right button).

## [Page 30: Setting Timers, Setting Date/Time](#)

Setting Timers, Setting Date/Time Timers • When finished with editing, press GREEN button to save. You can press MENU button to cancel. To view Timers menu, press MENU button and select Deleting a Timer Settings by using Left or Right button. Press OK button to view Settings menu.

## [Page 31: Source Settings, Other Controls](#)

Source Settings, Other Controls Configuring Source Settings Configuring Other Settings - General You can enables or disable selected source options. The You can configure the settings of your TV. Select TV will not switch to the disabled source options when the Settings from main menu and press OK to view the SOURCE button is pressed.

## [Page 32: Blue Background](#)

Other Controls - continued Blue Background • Press OK button to enter Audio Description submenu. If the signal is weak or absent, the TV will automatically • Use Up or Down button to select Audio Description change to a blue screen. To enable this, set Blue setup and then press

Left or Right button to set Background to On.

### [Page 33: Dvd Mode](#)

DVD Mode This television has a built-in DVD module. The following instructions are for correct operation of the DVD. • Multi-Audio (up to 8) support (according to disc • Warning: Risk of exposure to radiation from content). class 1/class 3b visible and invisible laser beams. •...

### [Page 34: Dvd - Control Buttons On The Tv](#)

DVD Mode General Operation DVD - Control buttons on the TV 1. Disc loader 2. Play / Pause ( ) button Plays / pauses the disc. When DVD menu (root menu) is active, this button functions as "button select" (selects the highlighted item in menu) if this is not prohibited by the disc).

[Page 35](#) DVD Mode You can operate DVD, movie CD, music or picture CD's content by using the buttons on your remote control. Below are main functions of commonly used remote control buttons. Buttons on the Movie Picture Music Remote Control Playback Playback Playback Playback...

### [Page 36: How To Watch A Dvd](#)

Mode General Operation Notes on DVD Playback How to watch a a. No sound will be heard during Rapid advance or NOTE: DVD mode cannot be accessed unless a DVD is Rapid reverse. inserted or a DVD control button is pressed. b.

### [Page 37: Dvd Mode Configuration](#)

DVD Mode General Operation DEFAULT DVD Mode Configuration If you choose RESET and press SELECT, the factory- 1. While in DVD source, press DISPLAY button to presets are loaded. Parental level and parental access DVD Setup menu. This is only possible if password does not change.

### [Page 38: The Dvd Picture Quality Is Poor](#)

DVD Mode Troubleshooting & Tips The DVD picture quality is poor Notice 1. Make sure the DVD disc surface is not damaged This product incorporates copyright protection (no scratches, fingerprints etc.). technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright 2.

### [Page 39: Appendix A: Dvd Mode Supported File Formats](#)

Appendix A: DVD Mode Supported file formats Media File Format Supported Extension (Maximum resolution/Bit rate etc.) Video Audio MPEG1 MPEG Layer .mpg/.dat/. 1/2/3 MPEG2 MPEG2 XviD/3ivx PCM/MP3 XviD Version up to:1.1.2 Movie MPEG4 PCM/MP3 .avi MS ISO PCM/MP3 Support SP and ASP MPEG4 Sample Rate: 8K ~ 48KHz Music...

### [Page 40: Usb Media Browser](#)

• You must obtain any required permission from copyright owners to use copyright content. Toshiba cannot and does not grant such permission. • Depending on the file size and amount in your USB memory, it may take some time for loading to view.

### [Page 41: Playing Mp3 Files](#)

USB Media Browser - continued This TV allows you to enjoy photo, music or video files stored on a USB memory Playing MP3 Files Viewing JPEG Files To play mp3 files from a USB memory, you can use To view photo files from a USB Memory, you can use this menu screen.

### [Page 42: Slideshow Feature](#)

USB Media Browser - continued This TV allows you to enjoy photo, music or video files stored on a USB memory Slideshow Feature LANG. (Play Preview): Displays selected file in a small preview screen. You can use this feature to display photos on your TV. RED: Sorts files by name.

### [Page 43: Media Browser Settings](#)

USB Media Browser - continued This TV allows you to enjoy photo, music or video files stored on a USB memory Using MENU button in Media Browser Mode In order to display movie subtitles correctly, you should set a "Movie Subtitle" language. See the section, Pressing MENU button in



Media Browser mode "Movie Subtitle"...

### [Page 44: Analogue Only Text Services](#)

• For further information on your particular text system(s), see the broadcast text index page or, consult your local Toshiba dealer. Below is a guide to the functions of the remote control text buttons. Accessing Sub-Pages If a text page has sub-pages, press and enter the sub- page numbers 01,02,03 etc.

### [Page 45: Appendix C: Pc Input Typical Display Modes](#)

Appendix C: PC Input Typical Display Modes The following table is an illustration of some of the typical video display modes. Some, due to the display native resolution, are scaled automatically to enable correct image to be displayed. Your TV may not support different resolutions. Supported resolution modes are listed below. If you switch your PC to an unsupported mode, a warning OSD will appear on the screen.

### [Page 46: Appendix D: Av And Hdmi Signal Compatibility \(Input Signal Types\)](#)

Appendix D: AV and HDMI Signal Compatibility (Input Signal Types) Supported Source Available Signals NTSC 60 EXT-1 (SCART1) RGB 50/60 SECAM EXT-1 NTSC 60 (SCART2) SECAM PAL 50/60 Side AV NTSC 60 SECAM 480I 60Hz 480P 60Hz 576I 50Hz 576P 50Hz YPbPr 720P...

### [Page 47: Appendix E: Pin Information](#)

Appendix E: PIN Information Before connecting any external equipment, turn off all main power switches. If there is no switch, remove the mains plug from the wall socket. Signal information for Mini D-sub 15 pin connector Pin No. Signal name Pin No.

### [Page 48: Appendix F: Supported File Formats For Usb Mode](#)

Appendix F: Supported File Formats for USB Mode Media Extension Format Notes Video Audio Movie dat, mpg, Mpeg1,2 MPEG1/2 Layer 1/2/3, AAC/HEAAC, 1080P@ 30fps 50Mbit/ mpeg AC3/EAC3, LPCM/ADPCM dat, mpg, MPEG2 ,H.264, VC1, AVS, MPEG1/2 Layer 1/2/3, AAC/HEAAC, H.264:1080Px2@25fps mpeg AC3/EAC3, LPCM/ADPCM 1080P@ 50fps MVC: 1080P@ 24fps Other:...

### [Page 49: Specifications And Accessories](#)

365 days. The actual energy consumption will depend on how the television is used. Specification is subject to change without notice. A (mm) B (mm) C (mm) D (mm) E (mm) F (mm) G (mm) 40D1333B 934.32 559.84 248.51 97.80 40D1334B English - 48 -...

### [Page 50: License Information](#)

License Information • HDMI, the HDMI logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries. • DVB is a registered trademark of the DVB Project. • [1] EIA/CEA-861-D compliance covers the transmission of uncompressed digital video with high-bandwidth digital content protection, which is being standardized for reception of high-definition video signals.

### [Page 51: Q & A Section](#)

Q & A Section Question Answer "Check the TV is not in standby mode. Why is there no sound or picture? Check the mains plug and all mains connections" Check the volume has not been turned down or that sound mute Why is there a picture but no sound? has not been selected Why is the sound only coming form...

[Page 52](#) EU Conformity Statement This product is carrying the CE-Mark in accordance with the related European Directives. Responsible for CE-Marking is TOSHIBA TELEVISION CENTRAL EUROPE Sp. z o.o., ul. Pokoju 1 Biskupice Podgórne 55-040 Kobierzyce, Poland This product is labeled with the CE Mark in accordance with the related European Directives, notably Low Voltage Directive 2006/95/EC, Electromagnetic Compatibility Directive 2004/108/EC and RoHS Directive 2011/65/EU.

This manual is also suitable for:

[40d1334b](#)