

Power Save Mode; Environmental Information - Toshiba 40D1333B Online Manual

Led backlight lcd tv

1

2

Table Of Contents

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53

•

[Table of Contents](#)

•

Bookmarks



Power Save Mode

Environmental Information

English

This television is designed to consume less energy to save environment. You not only can save the environment but also you can save money by reducing electricity bills thanks to the energy efficiency feature

of this TV. To reduce energy consumption, you should take the following steps:

You can use Power Save Mode setting, located in the Picture Settings menu. If you set Power Save Mode as

Eco, the TV will switch to energy-saving mode and luminance level of TV set will be decreased to optimum

level. Note that some picture settings will be unavailable to be changed when the TV is in Power Save Mode.

If Picture Off is selected, "Screen will be off in 3 seconds." message will be displayed on the screen. Select

CEED and press OK to continue. The screen will be off in 15 seconds. If you disable Power Save Mode,

Picture mode will be automatically set to Dynamic.

When the TV is not in use, please switch off or disconnect the TV from the mains plug. This will also reduce

energy consumption.

Disconnect power when going away for longer time.

It is highly recommended to activate Power Save Mode setting to reduce your annual power consumption. And

also it is recommended to disconnect the TV from the mains plug to save energy more when you do not use.

Please help us to save environment by following these steps.

Power Save Mode

Eco

Repair Information

Please refer all servicing to qualified personnel. Only qualified personnel must repair the TV.

Please contact

your local dealer, where you have purchased this TV for further information.

English - 12 -

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
10
11
12
13
14
15
16
17

Related Products for Toshiba 40D1333B

[Toshiba 40RV525U - 40" LCD TV](#)

[Toshiba 40RV52R](#)

[Toshiba 40E220U](#)

[Toshiba 40RV525RZ](#)

[Toshiba 40FT1U](#)

[Toshiba 40LV713B](#)

[Toshiba 40L5200LP](#)

[Toshiba 40L1333DG](#)

[Toshiba 40AV700E](#)

[Toshiba 40LV800AZ](#)

[Toshiba 40L544 DG Series](#)

[Toshiba 40L1347DG](#)

[Toshiba 40L5443DG](#)

[Toshiba 40L365 Series](#)

[Toshiba 40PB10ZE](#)

[Toshiba 40S51UN](#)

This manual is also suitable for:

[40d1334b](#)