



# Playing Mp3 Files; Viewing Jpeg Files - Toshiba 40D1333B Online Manual

Led backlight lcd tv



1
2
Table Of Contents
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53

---

•

[Table of Contents](#)

•

## Bookmarks







This TV allows you to enjoy photo, music or video files stored on a USB memory

### Playing MP3 Files

To play mp3 files from a USB memory, you can use the menu screen.

English  
Navigate menu

Play (

button): Starts the playback.

- Stop (

button) : Stops playback.

- Pause (

button) : Pauses the selected playback.




- RED button: Sorts files by Title, Artist or Album.
- Loop/Shuffle (GREEN button): Press once to disable Loop. Press again to disable both Loop and Shuffle. Press once more to enable only Shuffle. Press again to enable all. You can follow the disabled options with the change of the icons.
- 0-9 (Numeric buttons): The TV will jump to the file starting with the letter you input via the numeric buttons on your remote control.

- Play This (OK button) : Plays the selected file.
- Previous/Next (Left/Right buttons) : Jumps to previous or next file to play.
- Yellow button: Change viewing style
- BLUE button: Changes media options.

Note: If the Viewing Style is set to Folder in Media Browser Settings, Music folder will be displayed as sorted and there is no need to sort files again by pressing RED button.

## USB Media Browser -

English 40 -  
continued

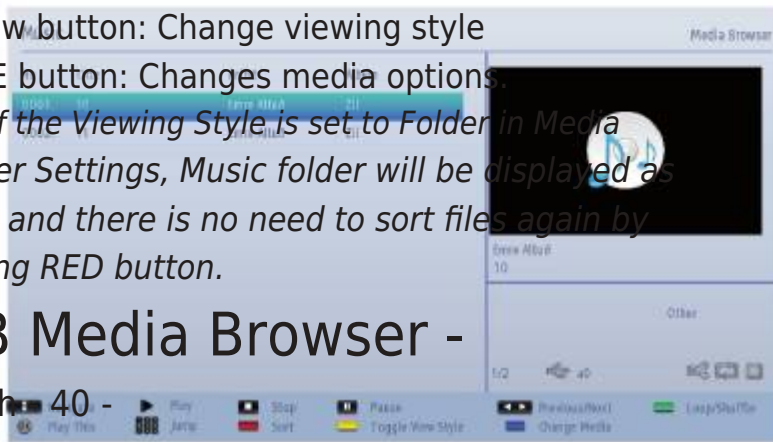

### Viewing JPEG Files

To view photo files from a USB Memory, you can use this menu screen. When you select Photos from the main options, available image files will be filtered and listed on this screen.

If you select a subtitle file and press OK button, you can select or deselect that subtitle file. The following menu will be displayed while playing a video file:

- Jump (Numeric buttons): Jump to selected file using the numeric buttons.
- OK: Views the selected picture in full screen.

.

/

: Navigate menu  
• Slideshow (button): Starts the slideshow using all images.

- GREEN button: Views images in thumbnails.
- RED button: Sorts files by date.



- YELLOW button: Change viewing style
- BLUE button: Changes media options.

[Table of Contents](#)

[Previous Page](#)  
[Next Page](#)

1  
...  
38  
39  
40  
41  
42  
43  
44  
45

## Related Products for Toshiba 40D1333B

[Toshiba 40RV525U - 40" LCD TV](#)

[Toshiba 40RV52R](#)

[Toshiba 40E220U](#)

[Toshiba 40RV525RZ](#)

[Toshiba 40FT1U](#)

[Toshiba 40LV713B](#)

[Toshiba 40L5200LP](#)

[Toshiba 40L1333DG](#)

[Toshiba 40AV700E](#)

[Toshiba 40LV800AZ](#)

[Toshiba 40L544 DG Series](#)

[Toshiba 40L1347DG](#)

[Toshiba 40L5443DG](#)

[Toshiba 40L365 Series](#)

[Toshiba 40PB10ZE](#)

[Toshiba 40S51UN](#)

This manual is also suitable for:

[40d1334b](#)