



Whirlpool AKT 920 Product Description Sheet

1
2
3
4

--

 
•

Bookmarks

--

[Download this manual](#)

Quick Links

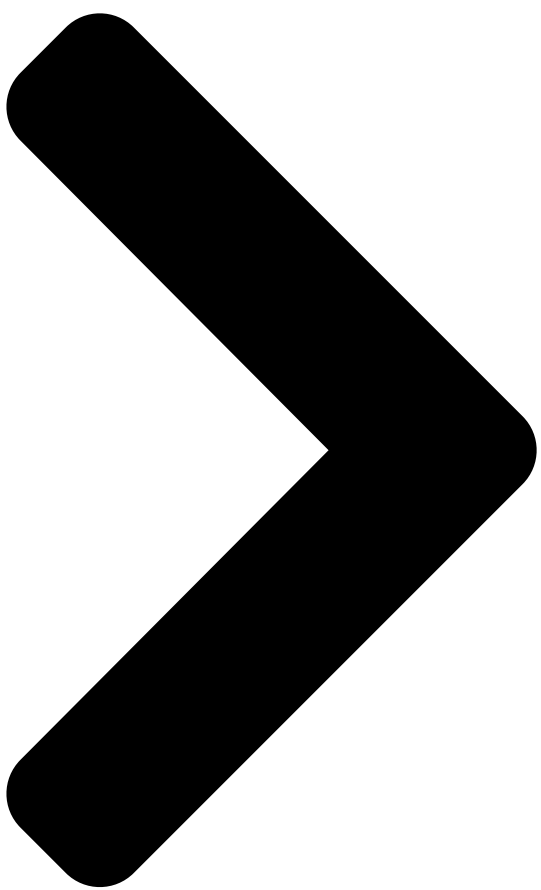



LIGHTING THE BURNERS

- To ignite one of the burners, turn the relative knob anti-clockwise to the maximum flame setting
- Press the knob against the control panel to ignite the burner
- After the burner has ignited, keep the knob pressed for about 5 seconds to allow the thermocouple to warm up. This burner safety device shuts off the gas supply to the burner if the flame goes out accidentally (because of sudden draught, an interruption in the gas delivery, boiling over of liquids, etc.).
- The device must not be pressed for more than 15 sec. If, after that time has elapsed, the burner does not remain lit, wait at least one minute before trying to light it again.
- The burner might go out when the knob is released. This means that the thermocouple has not warmed up enough. In this case, repeat the operations described above.

PRATICAL ADVICE FOR USING THE BURNERS
For better burner performance, please stick to the following rules:

- Use pots and pans that fit the burners (see table on the right).
 - Only use flat-bottomed pots and pans.
 - Use the correct amount of water for cooking foods and keep the pot covered.
 - In the case of pans with convex bottoms (WOK), use the support grille provided, which should be positioned only on the 4 ring burner.
- Due to continued product development, Whirlpool reserves the right to change specifications or model availability without notice.

5019 319 62097

PRODUCT DESCRIPTION SHEET

1. Removable panstand grids
2. Auxiliary burner
3. Fish kettle burner
4. Rapid burner
5. Semi-rapid burner
6. 4 ring burner (WOK)
7. 4 ring burner control knob
8. Auxiliary burner control knob
9. Fish kettle burner control knob
10. Rapid burner control knob
11. Semi-rapid burner control knob

SYMBOLS

- Tap closed
- Maximum flame
- Minimum flame
- .

Burner

Pot Ø

Auxiliary

from 8 to 14 cm

semi-rapid

from 16 to 22 cm

Rapid

from 24 to 26 cm

4 rings

from 24 to 26 cm

Fish kettle (23 x 8 cm)

31 x 16 cm

To get full satisfaction from the hob, please read these instructions carefully and keep them for future consultation.

DIMENSIONS AND DISTANCES TO BE MAINTAINED (mm)

NOTE: In case of installation of a hood above the cooktop, please refer to the hood instructions for the correct distance.

NG

BURNER

Pressure

Injector

(kPa)

Front RHS (Semi-rapid)

 
1.00

 
Rear RHS (Rapid)

1.00

Front LHS (4 rings WOK)

1.00

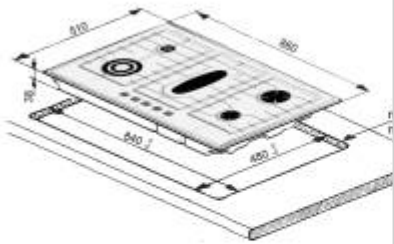

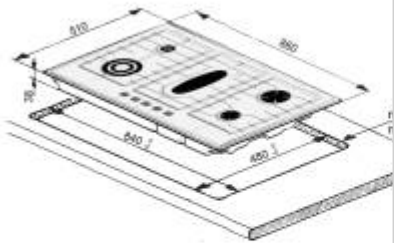

Rear LHS (Auxiliary)
1.00
Middle HS (Fish kettle)



1.00
ELECTRIC SUPPLY: 230 -240 V - 50 Hz
ULPG

Rate
Pressure
Injector

(mm)
MJ/h
(kPa)

(mm)

1.15

7.0

2.75

0.60

1.60

12.5

2.75

1.00

1.75

14.8

2.75

1.00

0.85

4.0

2.75

0.55

1.60

13.0

2.75

0.95

AU

Rate

MJ/h

 
 
 
5.0

15.0

15.1

4.0

11.5

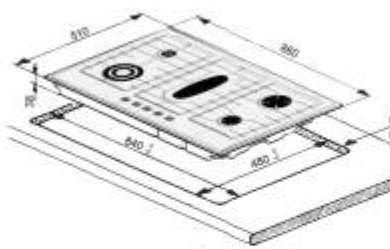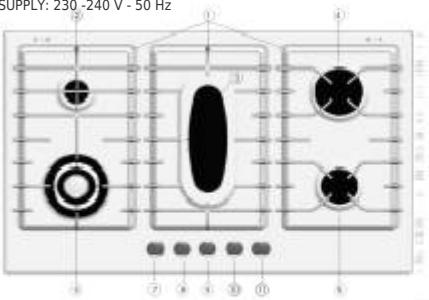

[Next Page](#)

1
2
3
4

Related Manuals for Whirlpool AKT 920

[Dishwasher Whirlpool DU920PFGGB4 Use And Care Manual](#)

(76 pages)

[Dishwasher Whirlpool 920 Series Use And Care Manual](#)

Whirlpool use and care guide dishwasher 920, 929 (76 pages)

[Dishwasher Whirlpool DU920PGQ1 Use And Care Manual](#)

(76 pages)

[Dishwasher Whirlpool DU920QWDB5 Use And Care Manual](#)

(36 pages)

[Dishwasher Whirlpool 920 Series Use And Care Manual](#)

(33 pages)

[Dishwasher Whirlpool DU920QWDQ4 Use And Care Manual](#)

(33 pages)

[Dishwasher Whirlpool DP920QWDB3 Use And Care Manual](#)

(29 pages)

Summary of Contents for Whirlpool AKT 920

[Page 1](#) ELECTRIC SUPPLY: 230 -240 V - 50 Hz the support grille provided, which should be positioned only on the 4 ring burner. Due to continued product development, Whirlpool reserves the right to change specifications or model availability without notice. 5019 319 62097...

[Page 2](#) 20 mm from the bottom of the hob. In the case that you ROOM VENTILATION intend to install an oven beneath the hob, make sure that it is manufactured by Whirlpool and equipped with a cooling system. The manufacturer declines all liability if another brand oven is installed beneath the To ensure correct operation of the appliance, the room size in which it is to be installed shall be in accordance with AS5601.

[Page 3](#) INSTALLATION ELECTRICAL CONNECTION • The electrical connections must comply with GAS CONNECTION local regulations. • The data relevant to the voltage and power Check the "gas type" sticker attached to the hotplate. Details of the injector sizes used are recorded on the data plate Earth absorption are indicated on the rating plate.

[Page 4](#) Manufacturer: food spills (water, sauce, coffee, etc.) should be wiped away before they dry. Whirlpool Europe S.r.l. Clean with warm water and neutral detergent, and then dry with a soft cloth or chamois. Remove baked-on dirt with Viale G. Borghi, 27 specific cleaners for stainless steel surfaces.

This manual is also suitable for:

Akt 922