



Asus SDRW-S1 LITE User Manual

External usb dvd writer with sound card

1

2

Table Of Contents

3

4

5

6

7

8

9

10

11

12

13

14

15

16



-

[Table of Contents](#)

-


Troubleshooting

•

Bookmarks

[Download this manual](#)

Quick Links

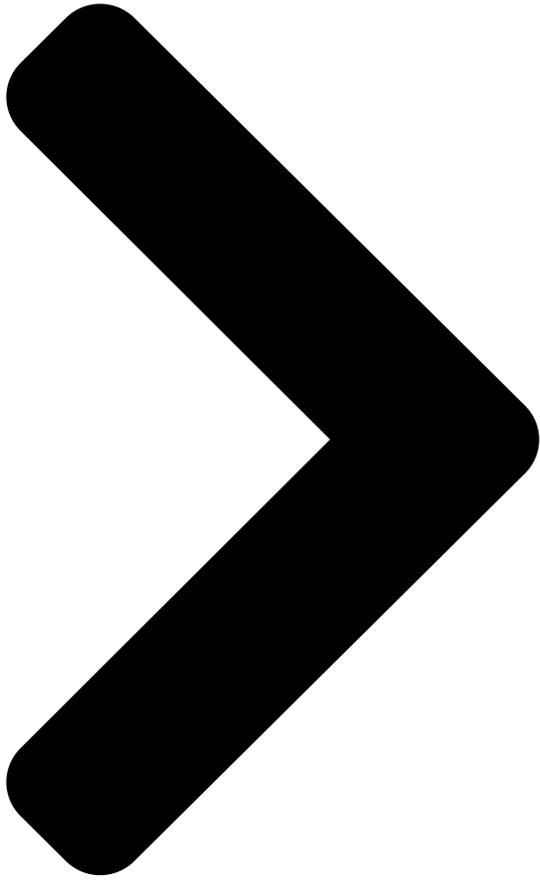

SDRW-S1 LITE[®]

External USB DVD Writer with Sound Card

User Guide

Table of Contents

[Next Page](#)

1
2
3
4
5

Related Manuals for Asus SDRW-S1 LITE

[Blu-ray Drive Asus SDRW-S1 Quick Start Manual](#)

External usb dvd / blu-ray writer with sound card (124 pages)

[DVD Drive Asus SDRW-S1 LITE Quick Start Manual](#)

External usb dvd writer with sound card (29 pages)

Summary of Contents for Asus SDRW-S1 LITE

[Page 1](#) SDRW-S1 LITE External USB DVD Writer with Sound Card User Guide...

[Page 2](#) Product warranty or service will not be extended if: (1) the product is repaired, modified or altered, unless such repair, modification or alteration is authorized in writing by ASUS; or (2) the serial number of the product is defaced or missing.

[Page 3: Table Of Contents](#)

On Windows® OS9 On Mac OS 11 Using your device
Installing CyberLink software on Windows® OS12 Burning files to disc on Windows® OS
.....13 Playing a disk and burning files on Mac OS14 Troubleshooting ASUS
SDRW-S1 LITE...

[Page 4: Introduction](#)

Introduction Overview The ASUS SDRW-S1 LITE is a DVD writer that has a built-in sound card that provides 7.1-channel audio output and a headphone amplifier. It delivers clear and precise sound for those who seek truly immersive audio and video entertainment experiences.

[Page 5: Specifications Summary](#)

Cirrus CS4398 x1 Sample Rate and Resolution Analog Playback Sample Rate and Resolution
44.1/48/96/192kHz @ 16/24bit S/PDIF Digital Output 44.1/48/96/192kHz @ 16/24bit ASIO 2.2
Driver Support 44.1/48/96/192kHz @ 16/24bit Others Interface USB 2.0 Dimensions 210 x 169 x
44 mm (L x W x H) Weight 590g ASUS SDRW-S1 LITE...

[Page 6: Getting To Know Your Device](#)

Toslink out port systems, AV receivers. Gain switch Pre-set low gain, you can switch to high gain when using high impedance headphone. USB port Connects to your computer using a USB 2.0 cable. DC in Connects to the adapter. ASUS SDRW-S1 LITE...

[Page 7: Setting Up Your Device](#)

3. On the next screen, click and follow the on-screen instructions to complete the installation. 4. After the installation is complete, restart your computer. NOTES: • The driver works only when you connect SDRW-S1 LITE to a desktop PC or notebook PC. • The version and contents of the support CD are subject to change without notice. • The driver is for Windows® operating system only. Driver installation is not required for Mac OS. ASUS SDRW-S1 LITE...

[Page 8: Step 3: Connecting Output Devices](#)

Step 3: Connecting output devices There are three options to connect output devices.
Connecting stereo headphones Connecting powered analog speaker systems Connecting 2-channel speakers Connecting 7.1 or 5.1-channel speakers 7.1-channel speakers 5.1-channel speakers ASUS SDRW-S1 LITE...

[Page 9: Step 4: Configuring The Audio Settings](#)

Follow these steps to configure the audio settings: 1. Go to Control Panel and click Sound. 2. Select ASUS XONAR S1 LITE and click Set Default to set ASUS XONAR S1 LITE as the default

audio output. ASUS SDRW-S1 LITE...

[Page 10](#) 3. If you want to connect your device to multi-channel speakers, click Configure to set up your speaker. 4. Choose the appropriate configuration according to the type of your speaker. 5. Follow the on-screen instructions to complete the setup. ASUS SDRW-S1 LITE...

[Page 11: On Mac Os](#)

On Mac OS Follow these steps to configure the audio settings: 1. Click Go on the control bar then select Utilities. 2. Double-click Audio MIDI Setup. ASUS SDRW-S1 LITE...

[Page 12: Using Your Device](#)

2. Insert the bundled driver CD into the optical drive bezel. 3. On the AutoPlay window, click Run setup.exe. 4. On the next screen, click and follow the on-screen instructions to complete the installation. 5. After the installation is complete, restart your computer. ASUS SDRW-S1 LITE...

[Page 13: Burning Files To Disc On Windows® Os](#)

2. Click Burn data to CD/DVD from the AutoPlay window. 3. Click an icon to create a data disc. NOTE: Click on the right-upper corner of the Power2Go screen to see the detailed instructions on how to use Power2Go 8. ASUS SDRW-S1 LITE...

[Page 14: Playing A Disk And Burning Files On Mac Os](#)

2. Double-click the disc icon to play the disc. To eject the disc, right-click the disc icon then select Eject [Disc Name]. NOTE: The Eject button does not work on Mac OS. ASUS SDRW-S1 LITE...

[Page 15](#) 2. A disc icon will be created on your desktop. 3. Click on the disc icon to open the disc burning application. 4. Drag the files that you wish to burn into the application. 5. Click Burn. NOTES: • Mac OS supports DVD burning and playback. • Does not support BOOTCAMP INSTALL Windows® OS. ASUS SDRW-S1 LITE...

[Page 16: Troubleshooting](#)

Troubleshooting 1. I cannot install the driver in my PC. a) Ensure that you have connected SDRW-S1 LITE properly to the USB port of your computer and powered it on. b) Ensure that your computer has Windows® 10/ Windows® 8.1/ Windows® 8/ Windows® 7 installed. c) Restart your computer. 2. My computer failed to detect the external optical drive.