 


TOSHIBA

Toshiba 32D153*DB Starting Manual

1
Table Of Contents
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29



•

•

Bookmarks

[Download this manual](#)

Quick Links



This document is to provide you with a get you started guide to your

TOSHIBA
Leading Innovation >>>

It is expected that during the life of your TV firmware updates will

be made available to ensure that your TV maintains optimum

performance. You can download the latest version of firmware from

TOSHIBA www.toshiba-om.net/firmware.php

Some features listed in this document are limited due to local legislation and may not be available in all countries.

If you wish to view the complete manual for this Toshiba TV,

"Register your TV online at:

www.toshiba-europe.com/registration"

Toshiba estimates that the initiative of making the advanced functions available online

will save over 100.000 trees per year (6.5 Million kg Co2).

If you wish to view the advanced functions but do not have access to a computer or

the internet then please contact your local Helpline number whose Contact details are

QUICK START GUIDE

32D153*DB / 32W153*DB

LED Backlight LCD TV

Toshiba TV.

you can do so by visiting

www.toshiba-om.net

shown at the back of this book.

0333 222 7111

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba 32D153*DB

[LCD TV Toshiba 32W153 DB Series Online Manual](#)

Led backlight lcd tv (55 pages)

[Hd led tv Toshiba 26EL933 Specifications](#)

Slim (3 pages)

Summary of Contents for Toshiba 32D153*DB

[Page 1](#) Some features listed in this document are limited due to local legislation and may not be available in all countries. If you wish to view the complete manual for this Toshiba TV, you can do so by visiting www.toshiba-om.net 0333 222 7111 "Register your TV online at: www.toshiba-europe.com/registration"...

[Page 2: Table Of Contents](#)

Freeview Section21 Connecting an HDMI or DVI Device to the HDMI ® Re-tuning: TOSHIBA Freeview TV 21 Input..... 9 Specifications and Accessories22 To Connect an HDMI Device9 License Information23 Connect a DVI Device.....9 Q &...

[Page 3: Safety Precautions](#)

Safety Precautions This equipment has been designed and manufactured to meet international safety standards but, like any electrical equipment, care must be taken to obtain the best results and for safety to be assured. Please read the points below for your own safety. They are of a general nature, intended to help with all electronic consumer products.

[Page 4: Installation And Important Information](#)

4:3 outlines. This is not a defect of the LCD TV and is not covered under the manufacturer's warranty. Regular use of other size modes will prevent permanent retention. Exclusion Clause Toshiba shall under no circumstances be liable for loss and/or damage to the product caused by: fire; earthquake;...

[Page 5: Important Safety Information](#)

Important safety information • Any function related to the digital television (with the DVB logo) is available only within the country or area where such signals are transmitted. Verify with the salesperson if it is possible to receive a DVB - T/C signal in the area where you live.

[Page 6: Fitting Or Removing The Pedestal Stand](#)

(4) After the screws are removed, hold the stand in place, then remove the stand and the plastic moulding from the TV. Note: Extreme care should always be used when removing the stand to avoid damage to the LCD panel. 32D153*DB / 32W153*DB models English - 6 -...

[Page 7: The Remote Control \(Tv - Dvd\)](#)

The Remote Control (TV - DVD) Simple at-a-glance reference of remote control. 15. Rapid reverse Standby Search forward Standby 16. No function Numeric buttons Numeric buttons 17. Pause Pause TV-AV / Channel list / Switches among broadcast types 18. Play Play Mute Mute...

[Page 8: Connecting External Equipment](#)

Connecting External Equipment Before connecting any external equipment, remove the mains plug from the wall socket. (*) Number of these inputs may change according to the model of your TV. Before running first time installation, any connected HDMI (High-Definition Multimedia Interface) is ®...

[Page 9: Connecting An Hdmi ® Or Dvi Device To The Hdmi Input](#)

Connecting an HDMI or DVI Device to the HDMI Input ® Connect a DVI Device The HDMI inputs on your TV receive digital audio and uncompressed digital video from an HDMI source Connect an HDMI-to-DVI cable (HDMI type A device or uncompressed digital video from a DVI connector) to the HDMI input socket and the separate (Digital Visual Interface) source device.

[Page 10: Connecting A Computer](#)

Connecting a Computer Connecting a USB Memory To Connect a Computer To Connect a USB Flash Drive With either an RGB/PC or an HDMI connection, you • You can connect a USB Flash Drive to your TV by can watch your computer's display on the TV and hear using the USB input the TV.

[Page 11: Controlling The Tv](#)

Controlling the TV A wide variety of external equipment can be connected via the sockets located on the side and back of the TV. Whilst all the necessary adjustments and controls for the TV are made using the remote control, the buttons on the Back of the TV may be used for some functions.

[Page 12: Initial Installation](#)

Initial Installation Before switching on the TV, put your decoder and media recorder to Standby if they are connected and ensure the aerial is connected to your TV. To set up the TV, use the buttons on the remote control as detailed on page IMPORTANT: Ensure that the aerial is connected and...

[Page 13](#) Initial Installation - continued You can select Network, Frequency, Network Note: You can press MENU button to cancel. ID and Search Step from this screen. For While the search continues a message will appear, highlighting lines you see, use Up or Down button. asking whether you want to sort channels according You can set Search Step as 8000 kHz or 1000 to the LCN(*).

[Page 14: Dvd Mode](#)

DVD Mode If your television has a built-in DVD module. The following instructions are for correct operation of the integrated DVD unit. • Multi-Audio (up to 8) support (according to disc Warning: Risk of exposure to radiation from • content). class 1/class 3b visible and invisible laser beams.

[Page 15: How To Watch A Dvd](#)

DVD Mode General Operation How to watch a DVD Notes on DVD Playback Note: DVD mode cannot be accessed unless a DVD is a. No sound will be heard during Rapid advance or inserted or a DVD control button is pressed. Rapid reverse.

[Page 16: Dvd Mode Configuration](#)

DVD Mode General Operation DVD Mode Configuration DOWNMIX 1. While in DVD source, press "MYBUTTON1 - " This mode can be selected when the digital audio button to access DVD Setup menu. This is only output of the TV is used. possible if there is no playback.

[Page 17: Dvd Mode Configuration](#)

DVD Mode General Operation DVD Mode Configuration DOWNMIX 1. While in DVD source, press "MYBUTTON1 - " This mode can be selected when the digital audio button to access DVD Setup menu. This is only output of the TV is used. possible if there is no playback.

[Page 18: The Dvd Picture Quality Is Poor](#)

DVD Mode Troubleshooting & Tips The DVD picture quality is poor Notice 1. Make sure the DVD disc surface is not damaged This product incorporates copyright protection (no scratches, fingerprints etc.). technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright 2.

[Page 19: Appendix A: Dvd Mode Supported File Formats](#)

Appendix A: DVD Mode Supported file formats Format Supported File Media Extension (Maximum resolution/Bit rate etc.) Video Audio MPEG Layer MPEG1 .mpg/ .dat/ 1/2/3 .vob MPEG2 MPEG2 Movie XviD/ 3ivx PCM/MP3 XviD Verson up to: 1.1.2 MPEG4 PCM/MP3 .avi MS ISO

PCM/MP3 Support SP and ASP MPEG4...

[Page 20](#) DVD Mode You can operate DVD, movie CD, music or picture CD's content by using the buttons on your remote control. Below are the main functions of commonly used remote control buttons. Buttons on Movie Picture the Remote Music Playback Playback Playback Playback...

[Page 21: Freeview Section](#)

TV periodically to make sure your Digital TV/Radio channels are up to date. To retune your Toshiba Digital TV, please refer to the Re-tune section below for guidance. Alternatively find out more on the Freeview website: www.freeview.co.uk/retune...

[Page 22: Specifications And Accessories](#)

365 days. The actual energy consumption will depend on how the television is used. Specification is subject to change without notice. A (mm) B (mm) C (mm) D (mm) E (mm) F (mm) G (mm) 32D153*DB 736.00 452.00 230.00 97.00 487.00 32W153*DB 736.00 452.00 230.00...

[Page 23: License Information](#)

For more detailed information about the collection and recycling programmes available in your country, please visit our website (www.toshiba.eu/recycling) or contact your local city office or the shop where you purchased the product.

[Page 24: Q & A Section](#)

Q & A Section Question Answer Check the TV is not in standby mode. Why is there no sound or picture? Check the mains plug and all mains connections Check the volume has not been turned off or sound mute has Why is there a picture but no sound? not been selected Why does the sound come only from...

[Page 25](#) Restriction of Chemicals), entered into force on 1 June 2007, with phased deadlines to 2018. Toshiba will meet all REACH requirements and is committed to provide our customers with information about the presence in our articles of substances included on the candidate list according to REACH regulation.

[Page 26: Warranty Card](#)

(12) months (Warranty Period), provided that any claims under 1. Any System not manufactured by or for Toshiba, or sold this Limited Warranty must be applied for within the Warranty to an end-user in a country not covered under this war- Period.

[Page 27: Warranty Card](#)

Toshiba will arrange pick-up of the defective have been advised of the possibility of such damages or of any claim by any third party. Any liability of Toshiba or its sup- unit from your location, repair it and return it back to plier which is not excluded shall be limited to the purchase your location.

[Page 28: Warranty Card](#)

Toshiba product. The latest terms and conditions of the Toshiba Limited Warranty can be found at our website: www.toshiba-europe.com/services...

[Page 29](#) This owner's manual is designed to show you how to setup and operate the most commonly used functions. If you want to view advanced functions, you can do so by visiting www.toshiba-om.net Alternatively, you may wish to get further support from your local helpline or website shown below.

This manual is also suitable for:

[32w153*db](#)