

TOSHIBA

Toshiba 32PB10E Owner's Manual

1	
Table Of Contents	
2	
3	
4	
5	
6	
7	
8	
9	
10	
11	
12	
13	
14	
15	
16	
17	

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36

--

•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks

--

Quick Links

[1 Connecting an Aerial](#)

[2 Tv Front and Side Panel Controls](#)

[3 Tv Back Panel Connections](#)

[4 Troubleshooting](#)

[5 Specifications](#)

[Download this manual](#)



O
TOSHIBA
WNER'S Leading Innovation >>>

LCD Colour TV

32PB10E

32PB10T
TOSHIBA

Leading Innovation >>>

32PB10V

32PB10ZE

40PB10E

40PB10T

HDMI™
HIGH-DEFINITION MULTIMEDIA INTERFACE

DOLBY
DIGITAL

DLN

40PB10ZE

©2011 TOSHIBA CORPORATION
All Rights Reserved

M

ANUAL

Owner's Record

You will find the model number and serial number on the back of the TV. Record these numbers in the spaces provided below. Refer to them whenever you call upon your TOSHIBA dealer regarding this product.

TOSHIBA

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Summary of Contents for Toshiba 32PB10E

[Page 1](#) You will find the model number and serial number on the back of the TV. Record these numbers in the spaces 40PB10V provided below. Refer to them whenever you call upon your TOSHIBA dealer regarding this product. 40PB10ZE Model number: Serial number: ©2011 TOSHIBA CORPORATION...

[Page 2: Table Of Contents](#)

The TV may drop or fall off, which may cause an injury or damage. Welcome to Toshiba • Thank you for purchasing this Toshiba LCD Colour TV. This manual will help you use the exciting features of your new TV.

[Page 3: Introduction / Getting Started](#)

Introduction / Getting started • Make sure to hold the plug, when 3) Never stand or climb on the TV. unplugging the AC power cord. • Educate children about the dangers of • Never use other cord except for supplied climbing on furniture to reach the TV or its AC power cord, and never use the supplied controls.

[Page 4](#) Introduction / Getting started 8) Never place the TV in an area exposed to high humidity levels, such as in a bathroom 1) Never place hot objects or open flame or close to a humidifier. sources, such as lighted candles or This may cause a fire or an electric shock.

[Page 5](#) Introduction / Getting started • The Mains plug or an appliance coupler is used as the disconnect device, therefore the disconnect device shall remain readily operable. 2) When a malfunction occurs, or if smoke or an unusual odor comes from the TV, turn off the TV and remove the power plug from the outlet immediately.

[Page 6](#) • Toshiba is not liable for any damage caused by neglect of the instructions described in the owner's manual. • Toshiba is not liable for any damage caused by Important information misuse or malfunction through simultaneous use of this product and the connected 1) About LCD screen equipment.

[Page 7: Connecting An Aerial](#)

• If the remote control does not operate correctly, depend upon your particular area. or if the operating range becomes reduced, Your Toshiba dealer or service personnel can replace both batteries with new ones. best advise you on which aerial to use in your •...

[Page 8: Tv Back Panel Connections](#)

Power cord * * Make sure to insert the plugs firmly, when plugging the AC power cord into the TV set end Point the and wall outlet end. brightness sensor Introduction / Getting started * Make sure to hold the plug, when unplugging (- page 18).

[Page 9: Learning About The Remote Control](#)

Introduction / Getting started 19 MENU (- page 11) 12 o PC/HDMI 1 (AUDIO) (input terminal) — PC audio input terminal is shared with HDMI 20 When using the Media Player (analogue audio input terminal, and their use (- pages 29, 30) can be configured in the SETUP menu (- 21 Teletext control buttons (Four coloured pages 25, 26).

[Page 10: Turning The Tv On](#)

Introduction / Getting started Turning the TV on Press v or w to select the menu language (English, Chinese (CS), Malay, Thai, Vietnamese, Russian, Arabic, Persian or Switching on the TV French). Connect the power cord to a wall outlet, the Press Q, to display the Location menu (- 1 power indicator lights in red (standby mode).

[Page 11: Using The Quick Menu](#)

Introduction / Getting started Displaying the menu chart Closing the Quick Setup menu, press EXIT. Note: PICTURE The Quick Setup menu can also be display at any time from the SETUP menu. PICTURE Using the Quick Menu Picture Settings 3D Colour Management Base Colour Adjustment Active Backlight Control Press QUICK to display the Quick Menu and...

[Page 12: Watching Tv Programmes](#)

Introduction / Getting started Switching between two positions Notes: • In the video input mode (o1, o2 and HDMI), You can switch two positions without entering Auto Tuning and Manual Tuning are not actual position number each time. available. Instead, Manual Settings appears in the SETUP menu (- page 14).

[Page 13](#) Introduction / Getting started Auto Tuning A : Automatic (factory set), P : PAL, S : SECAM, 4 : NTSC 4.43 (MHz), 3 : NTSC 3.58 (MHz) From the SETUP menu, press s or r to If the colour of a certain channel is select Auto Tuning.

[Page 14: Selecting The Video Input Source To View](#)

Introduction / Getting started Setting the Location Press Q. TV (analogue aerial input), You can select either Home or Store mode. VIDEO1 (o(1), standard video input), Home is recommended for normal home use. VIDEO2 (o(2) COMPONENT / VIDEO Select Store when using a TV for displaying in a INPUT, standard or component video input), shop, etc.

[Page 15: Using The Tv's Features](#)

Using the TV's features Cinema Picture adjustment When watching "all sides panel format" films/ video tapes, this setting will eliminate or reduce • Most of the picture controls and functions are the black bars on all the sides of the screen available.

[Page 16](#) Using the TV's features Dot by Dot Picture Position "Dot by Dot" is a non-scaling display. Depending Horizontal Position on the input signal format, the picture is Vertical Position Reset displayed with side panels and/or bars at the top and bottom (i.e. VGA input source). Press v or w to adjust the settings as desired.

[Page 17](#) Using the TV's features Press v or w to select On or Off. Press Q, then press s or r to select Picture Mode. Note: When a DVD movie with subtitle is playing back, Picture Settings this mode may not work correctly. Picture Mode Dynamic Backlight...

[Page 18: Sound Adjustment](#)

Using the TV's features Adjusting the Colour Management Press v or w to select On or Off. You can adjust the picture colour quality by selecting from 6 base colour adjustments : Red, Sound adjustment Green, Blue, Yellow, Magenta or Cyan. From the PICTURE menu, press s or r to Setting the MTS (Multi-channel TV Sound) select 3D Colour Management.

[Page 19](#) Using the TV's features Using the Advanced Sound Settings Bass Boost helps to create rich bass. Stereo Voice Enhancement helps to emphasize dialogue. It will be easier to hear voices over Selecting the bilingual programmes other background audio. From the SOUND menu, press s or r to When a bilingual programme is received, select Advanced Sound Settings, and then j Dual appears.

[Page 20: Other Features Settings](#)

Using the TV's features Activating Blue Screen AV Connection PC/HDMI 1 Audio With the Blue Screen function On, the screen HDMI 1 Audio Digital will automatically turn blue and the sound will be Digital Audio Output Auto muted (except for PC input) when no signal is being received.

[Page 21: Teletext](#)

Using the TV's features In Auto mode, this displays the main subjects Press v or w to adjust the settings as available and their relevant page numbers. required. In List mode, you will see the page numbers currently stored on the each colour button. Teletext Note: If you press...

[Page 22](#) For further information on your particular text To reveal concealed text: system(s), see the broadcast teletext index page Some pages cover topics such as quizzes and or consult your local Toshiba dealer. jokes. To discover the solutions, press Using List mode To hold a wanted page:...

[Page 23: Connecting Your Tv](#)

Connecting your TV (2) COMPONENT / VIDEO INPUT Back connections AUDIO L /MONO VIDEO Connection example DVD video player White Yellow (with component Component video mode: video outputs) Use terminals Y, P , L and R. Set Top Box (2) COMPONENT / VIDEO INPUT TV back

view AUDIO L /MONO...

[Page 24: Connecting Hdmi Or Dvi Devices](#)

Connecting your TV Connecting an amplifier equipped with a • This TV may not be compatible with features and/or specifications that may be added in the Dolby Digital decoder future. • This TV is only operable with L-PCM and Dolby Amplifier equipped with Digital on 32/44.1/48 kHz.

[Page 25: Selecting The Pc/Hdmi 1 Audio Mode](#)

Connecting your TV Connecting an HDMI device Selecting the PC/HDMI 1 Audio mode One HDMI cable (type A connector) You can select PC audio or HDMI audio when TV back view using this function. COMPONENT / VIDEO INPUT From the SETUP menu, and then press s or VIDEO r to select AV Connection.

[Page 26: Connecting A Computer](#)

Connecting your TV To connect a PC to the HDMI terminal on the Connecting a computer To connect a PC to the RGB/PC terminal on When connecting a PC to the HDMI terminal on the TV, use an HDMI-to DVI adapter cable and the TV: analogue audio cables.

[Page 27: Using The Pc Settings](#)

Reset You must obtain any required permission from copyright owners to download or use copyrighted content. TOSHIBA cannot and Press s or r to select an option you want to does not grant such permission. adjust. Press v or w to adjust the settings as required.

[Page 28](#) Connecting your TV Auto Start: The initial highlighted position will be on the top left thumbnail in the Multi View. Insert USB device into the USB socket on the Press s, r, v or w to move the highlight left side of the TV. A prompt will appear. in one window.

[Page 29](#) Selecting subtitle and audio languages Notes: • During Single View and Slide Show, you can • Press repeatedly to select your preferred SUBTITLE display a photo list on the screen from the Play subtitle language. List in the Quick Menu, and then press s or •...

[Page 30](#) Connecting your TV Setting the repeat mode: ABOUT DIVX VIDEO: DivX is a digital video ® format created by DivX, Inc. This is an official DivX Certified device that plays DivX video. Press QUICK to open the Quick Menu. Visit www.divx.com for more information and Press v or w to select Off, All or 1.

[Page 31: Reference Section](#)

Reference section APPENDIX Media Player Supported Formats Media Media File Video/Audio Note Player Format Extension codec JPEG .jpg Data compatibility: JPEG Exif ver 2.2 .jpeg Maximum viewable resolution: .bmp <JPEG> 15360 × 8640 (Base-line) Photo 1024 × 768 (Progressive) <BMP> 9600 ×...

[Page 32](#) Reference section Media Media File Video/Audio Note Player Format Extension codec .mov Video) MPEG-4 part2 H.264(MPEG-4 AVC) Audio) MPEG-1/2 Layer3 MPEG-2/4 LC AAC MPEG-4 HE-AAC .mp4 Video) .m4v MPEG-4 part12 H.264(MPEG-4 AVC) Audio) MPEG-1/2 Layer3 MPEG-2/4 LC AAC MPEG-4 HE-AAC .asf Video) .wmv...

[Page 33: Troubleshooting](#)

Reference section Media Media File Video/Audio Note Player Format Extension codec Flash .flv Video) Video Sorenson (FLV1) H.263(FLV1) H.264(MPEG-4 AVC) Audio) MPEG-1/2 Layer3 MPEG-2/4 LC AAC L-PCM ADPCM 3GPP .3gp Video) Movie MPEG-4 part2 H.264(MPEG-4 AVC) Audio) MPEG-2/4 LC AAC Motion .avi Video)

[Page 34: Broadcast System](#)

Reference section Broadcast system The brightness of the screen comes down, or flickers of the screen are Broadcast transmission systems of each caused, or some parts of the screen do country or region not light up. • When you just buy and start to use this TV, a flickering may be caused in the screen.

[Page 35: Specifications](#)

LCD colour TV Visible size (diagonal) 32" : 80.0 cm Model 40" : 101.6 cm 32PB10E, 32PB10T, 32PB10V, 32PB10ZE, Number of pixels 40PB10E, 40PB10T, 40PB10V, 40PB10ZE 32" : 1366 (H) dots × 768 (V) dots Power source 40" : 1920 (H) dots × 1080 (V) dots...

[Page 36](#) Reference section Trademark Information • THIS PRODUCT IS LICENSED UNDER THE VC-1 PATENT PORTFOLIO LICENSE FOR • HDMI, the HDMI logo, and High-Definition THE PERSONAL AND NON COMMERCIAL Multimedia Interface are trademarks or USE OF A CONSUMER TO (i) ENCODE registered trademarks of HDMI Licensing LLC VIDEO IN COMPLIANCE WITH THE in the United States and other countries.

This manual is also suitable for:

32pb10t32pb10v32pb10ze40pb10e40pb10t40pb10v ... [Show all](#)