



Toshiba 32D3753DB Operating Instructions Manual

With remote control

1	
Table Of Contents	
2	
3	
4	
5	
6	
7	
8	
9	
10	
11	
12	
13	
14	
15	
16	
17	

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42

--

-

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks

--

Quick Links

[1 Table of Contents](#)

[2 Tv Control Switch & Operation](#)

[3 Features](#)

[4 General Tv Operation](#)

[5 Troubleshooting & Tips](#)

[Download this manual](#)



OPERATING INSTRUCTIONS
TOSHIBA
32D3753DB

COLOUR TELEVISION WITH REMOTE
CONTROL

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba 32D3753DB

[Colour television Toshiba 32L1753DB Operating Instructions Manual](#)

Colour television with remote control (29 pages)

[Colour television Toshiba 32W3753DB Operating Instructions Manual](#)

With remote control (37 pages)

[Colour television Toshiba 43L1753DB Operating Instructions Manual](#)

Colour television with remote control (29 pages)

Summary of Contents for Toshiba 32D3753DB

[Page 1](#) OPERATING INSTRUCTIONS 32D3753DB COLOUR TELEVISION WITH REMOTE CONTROL...

[Page 2: Table Of Contents](#)

DVD Mode34 Contents Overview of the Remote Control37 Safety Information2 General DVD Operation (depending on model) ...38 Mains Supply2 Markings on the Product.....2 Environmental Information.....4 Features6 Accessories Included.....6 Standby Notifications6 TV Control Switch & Operation.....6 Inserting the Batteries into the Remote7 Connect Power7 Antenna Connection7...

[Page 3: Safety Information](#)

- Do not place any heat sources such as electric Safety Information heaters, radiators, etc. near the TV set.
- Do not place the TV on the floor and inclined CAUTION surfaces.
- To avoid danger of suffocation, keep plastic bags RISK OF ELECTRIC SHOCK out of the reach of the babies, children and domestic DO NOT OPEN...

[Page 4](#) Hazardous Live Terminal: The marked WALL MOUNTING WARNINGS terminal(s) is/are hazardous live under normal operating conditions. • Read the instructions before mounting your TV Caution, See Operating Instructions: The on the wall. marked area(s) contain(s) user replaceable • The wall mount kit is optional. You can obtain from coin or button cell batteries.

[Page 5: Environmental Information](#)

Environmental Information This television is designed to be environment friendly. To reduce energy consumption, you can follow these steps: If you set the Energy Saving to Minimum, Medium, Maximum or Auto the TV will reduce the energy consumption accordingly. If you like to set the Backlight to a fixed value set as Custom and adjust the Backlight (located under the Energy Saving setting) manually using Left or Right buttons on the remote.

[Page 6](#) Restriction of Chemicals), entered into force on 1 June 2007, with phased deadlines to 2018. Toshiba will meet all REACH requirements and is committed to provide our customers with information about the presence in our articles of substances included on the candidate list according to REACH regulation.

[Page 7: Features](#)

Features Standby Notifications • Remote controlled colour TV If the TV does not receive any input signal (e.g. from an aerial or HDMI source) for 5 minutes, it will go • Fully integrated digital terrestrial/cable TV (DVB-T-T2/C) into standby. When you next switch-on, the following •...

[Page 8: Inserting The Batteries Into The Remote](#)

Operation with the Remote Control Notification Press the Menu button on your remote control to TRADEMARK ACKNOWLEDGMENT display main menu screen. Use the directional buttons The terms HDMI and High-Definition Multimedia to select a menu tab and press OK to enter. Use the

Interface, and the HDMI Logo are trademarks or directional buttons again to select or set an item.

[Page 9: Specification](#)

Wireless LAN Transmitter Specifications This product contains technology subject to certain intellectual property rights of Microsoft. Use or distribution of this technology outside of this product Max Output Frequency Ranges Power is prohibited without the appropriate license(s) from Microsoft. 2400 - 2483,5 MHz (CH1-CH13) <...

[Page 10: Remote Control](#)

Remote Control Standby: Switches On / Off the TV Numeric buttons: Switches the channel, enters a number or a letter in the text box on the screen. Quick Menu: Displays a list of menus for quick access Mute: Completely turns off the volume of the TV Volume +/- Menu: Displays TV menu Navigation buttons: Helps navigate menus, content...

[Page 11: Connections](#)

Connections Connector Type Cables Device NOTE: When connecting a device via the YPbPr or the Scart Side AV input, you must use Connection a connection adapter cable. (back) See the illustrations on the left side. You can use YPbPr to VGA cable to enable YPbPr signal via Connection VGA input.

[Page 12: Switching On/Off](#)

channels of it will be listed on the top of the Channel Switching On/Off List. When finished, press OK to continue. To Switch the TV On You can activate Store Mode option at this point. Connect the power cord to a power source such as a This option will configure your TV's settings for store wall socket (220-240V AC, 50 Hz).

[Page 13: Media Playback Via Usb Input](#)

Recorded programmes are split into 4GB partitions. Media Playback via USB Input If the writing speed of the connected USB disk is not You can connect 2.5" and 3.5" inch (hdd with external power sufficient, the recording may fail and the timeshifting supply) external hard disk drives or USB memory stick to your feature may not be available.

[Page 14: Watching Recorded Programmes](#)

Watching Recorded Programmes Media Browser Menu Select Recordings from the Media Browser menu. You can play photo, music and movie files stored on a Select a recorded item from the list (if previously USB disk by connecting it to your TV. Connect a USB recorded).

[Page 15: Cec And Cec Rc Passthrough](#)

CEC and CEC RC Passthrough E-Manual (if available) You can find instructions for your TV's features in This function allows to control the CEC-enabled the E-Manual. devices, that are connected through HDMI ports by To use E-Manual, press to the Info button while main using the remote control of the TV.

[Page 16: Tv Menu Contents](#)

TV Menu Contents System - Picture Menu Contents You can change the picture mode to suit your preference or requirements. Picture mode can Mode be set to one of these options: Cinema, Game(optional), Sports, Dynamic and Natural. Contrast Adjusts the light and dark values on the screen. Brightness Adjusts the brightness values on the screen.

[Page 17](#) System - Sound Menu Contents Volume Adjusts the volume level. Equalizer Selects the equalizer mode. Custom settings can be made only when in User mode. Balance Adjusts whether the sound comes from the left or right speaker. Sets headphone volume. Headphone Please ensure before using headphones that the headphone volume is set to a low level, to prevent damage to your hearing.

[Page 18](#) System - Settings Menu Contents Conditional Access Controls conditional access modules when available. Language You may set a different language depending on the broadcaster and the country. Enter correct password to change parental settings. You can easily adjust Menu Lock, Maturity Lock, Child Lock or Guidance in this menu. You can also set a new PIN or change the Default CICAM PIN using the related options.

[Page 19](#) To hear the TV audio from the connected compatible audio device set as Amplifier. Speakers You can use the remote control of the TV to control the volume of the audio device. Press OK to open the Smart Remote menu screen. Using this screen you can discover Smart Remote and connect the remote controller devices to your TV wirelessly.

[Page 20: General Tv Operation](#)

Default CICAM PIN: This option will appear as greyed General TV Operation out if no CI module is inserted into the CI slot of the Using the Channel List TV. You can change the default PIN of the CI CAM The TV sorts all stored stations in the Channel List.

[Page 21](#) Rec./Stop (Record button): The TV will start to Make sure that your TV is connected to your home record the selected event. You can press again to network in order to use the catch-up services. For stop the recording. further information regarding this matter and other IMPORTANT: Connect a USB disk to your TV while the TV requirements for Freeview Play services refer to the is switched off.

[Page 22: Teletext Services](#)

Teletext Services Troubleshooting & Tips Press the Text button to enter. Press again to activate Tv will not turn on mix mode, which allows you to see the teletext page Make sure the power cord is plugged in securely to a and the TV broadcast at the same time.

[Page 23: Pc Input Typical Display Modes](#)

PC Input Typical Display Modes AV and HDMI Signal Compatibility The following table is an illustration of some of the Source Supported Signals Available typical video display modes. Your TV may not support all resolutions. SECAM Index Resolution Frequency NTSC4.43 640x350 85Hz (SCART)

[Page 24: Supported Video File Formats For Usb Mode](#)

Supported Video File Formats for USB Mode Extension Video Codec SPEC (Resolution) & Bit Rate .dat, vob MPEG1/2 1080P@30fps - 40 Mbps MPEG1/2, .mpg, .mpeg MPEG4 MPEG1/2, H.264, H.264: 1080Px2@30fps - 62.5 Mbps, 1080P@60fps - 62.5 Mbps MVC: .ts, .trp, .tp AVS, MVC 1080P@30fps - 62.5 Mbps Other: 1080P@30fps - 40Mbps .mp4, .mov,...

[Page 25: Supported Audio File Formats For Usb Mode](#)

Supported Audio File Formats for USB Mode Extension Audio Codec Bit Rate Sample rate MPEG1/2 Layer1 32Kbps ~ 448Kbps .mp3, MPEG1/2 Layer2 8Kbps ~ 384Kbps 16KHz ~ 48KHz MPEG1/2 Layer3 8Kbps ~ 320Kbps MPEG1/2 Layer1 32Kbps ~ 448Kbps MPEG1/2 Layer2 8Kbps ~ 384Kbps 16KHz ~ 48KHz MPEG1/2 Layer3...

[Page 26: Supported Subtitle File Formats For Usb Mode](#)

Extension Audio Codec Bit Rate Sample rate MPEG1/2 Layer1 32Kbps ~ 448Kbps MPEG1/2 Layer2 8Kbps ~ 384Kbps 16KHz ~ 48KHz MPEG1/2 Layer3 8Kbps ~ 320Kbps .wav LPCM 64Kbps ~ 1.5Mbps 8KHz ~ 48KHz IMA-ADPCM, 384Kbps 8KHz ~ 48KHz MS-ADPCM G711 A/mu-law 64Kbps ~ 128Kbps 8KHz MPEG1/2 Layer3...

[Page 27: Supported Dvi Resolutions](#)

Supported DVI Resolutions When connecting devices to your TV's connectors by using DVI converter cable(DVI to HDMI cable - not supplied), you can refer to the following resolution information. 56Hz 60Hz 66Hz 70Hz 72Hz 75Hz 640x400 p 640x480 p p p...

[Page 28: Connectivity](#)

and display the result when complete. Connectivity Advanced Settings Wired Connectivity Highlight Advanced Settings and press the OK button. On the next screen you can change the IP To Connect to a Wired Network and DNS settings of the TV. Highlight the desired one •...

[Page 29](#) • The location where the transmission is most effective • If the connection is established correctly, you will be differs depending on the usage environment. able to access the shared files from your mobile device via the Media Browser of your TV. •...

[Page 30](#) menu. Select the menu option and press the OK Connectivity Troubleshooting button to open the related menu. Using this menu Wireless Network Not Available you can discover

and connect the devices that use the same wireless technology and start to use them. •...

[Page 31: Nero Mediahome Installation](#)

Note: There may be some PC's which may not be able to Using Audio Video Sharing Network Service utilize the Audio Video Sharing feature due to administrator Audio Video Sharing feature uses a standard that eases and security settings (such as business PC's). the viewing process of digital electronics and makes For best home network streaming with this TV, the Nero them more convenient to use on a home network.

[Page 32: Internet Portal](#)

Press the Exit button to exit iPlayer. Press the Return Internet Portal /Back button for going back to the previous screen. HINT: A broadband internet connection is required Note: "Episode is unavailable" message may be displayed for high quality viewing. You must set the country on the screen if a problem occurs during the playback.

[Page 33: Internet Browser](#)

All sites on the internet might not be supported. Internet Browser According to the site; content problems may occur. To use the internet browser, enter the portal first. Then In some circumstances video contents might not be launch the Internet application on the portal. able to be played.

[Page 34](#) EPG: You can view the broadcast schedules of Note: For some functions an internet connection may be required. selected channel lists through this tab. You can also navigate through channels by pressing on the selected FollowMe TV Feature (if available) channel on the EPG grid.

[Page 35: Contents Dvd Mode](#)

4. Smart Center app.(to be found on online • After playing, store the disc in its case. application stores based on Android and iOS On cleaning platforms) • Before playing, clean the disc with a cleaning cloth. 5. Router modem Wipe the disc from the center out.

[Page 36](#) General Playback DVD Troubleshooting Poor picture quality (DVD) Basic Play 1. Press the Standby button • Make sure the DVD disc surface is not damaged. 2. Please insert a disc into the loader. (Scratch, fingerprint etc.) The disc will be automatically loaded and play will •...

[Page 37](#) Disc Types Compatible with This Unit Disc Types Recording Disc Max. Playing Characteristics Types Size Time (Logos) • DVD contains excellent sound and video Single- Audio due to Dolby Digital and MPEG-2 System. sided; 240 min. 12 cm • Various screen and audio functions can Double- be easily selected through the on screen Video...

[Page 38: Overview Of The Remote Control](#)

Overview of the Remote Control 1. Standby 2. Numeric buttons 3. Mute 4. Volume Up / Down 5. TV Menu 6. Navigation buttons 7. OK / Select 8. Display time / DVD menu 9. Coloured buttons; Red button - Zoom Green button - Repeat Yellow button - Root Blue button - Title...

[Page 39: General Dvd Operation \(Depending On Model\)](#)

General DVD Operation (depending on model) You can operate DVD, movie CD, music or picture CD's content by using the proper buttons on your remote control. Below are main functions of commonly used remote control buttons. Buttons DVD Playback Movie Playback Picture Playback Music Playback Play...

[Page 40](#) Find out all you need to know about the latest, trend-setting TV technology on our website. www.toshiba-tv.com You can review your TV user manual online or download as you like English - 39 -...

[Page 41](#) Product Fiche Commercial Brand: TOSHIBA Model No. 32D3753DB Energy efficiency class Visible screen size 32 inches 81 cm (diagonal,approx.) (inch/cm) On mode average power 31,0 W consumption (Watt) Annual energy consumption 45,0 kWh (kWh/annum) Standby power consumption 0,50 W (Watt)

