

Tv Menu Contents - Toshiba 32D3753DB Operating Instructions Manual

With remote control

1
Table Of Contents
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42

•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks



7 Menu Contents

System - Picture Menu Contents	
Mode	
Contrast	
Brightness	
Sharpness	
Colour	
Energy Saving	
Backlight	
Advanced Settings	

Dynamic Contrast

Noise Reduction

Colour Temp

White Point

Picture Zoom

Film Mode

Skin Tone

Colour Shift

HDMI Full Range

PC Position

Autoposition

H Position

V Position

Dot Clock

Phase

Reset

While in VGA (PC) mode, some items in Picture menu will be unavailable. Instead, VGA mode settings will be added to the Picture

Settings while in PC mode.

You can change the picture mode to suit your preference or requirements. Picture mode can be set to one of these options: Cinema, Game(optional), Sports, Dynamic and Natural.

Adjusts the light and dark values on the screen.

Adjusts the brightness values on the screen.

Sets the sharpness value for the objects displayed on the screen.

Sets the colour value, adjusting the colours.

For setting the Energy Saving to Custom, Minimum, Medium, Maximum, Auto, Screen Off or Off.

Note: Available options may differ depending on the selected Mode.

This setting controls the backlight level. The backlight function will be inactive if the Energy Saving is set to an option other than Custom.

You can change the dynamic contrast ratio to desired value.

If the signal is weak and the picture is noisy, use the Noise Reduction setting to reduce the amount of noise.

Sets the desired colour temperature value. Cool, Normal, Warm and Custom options are available.

If the Colour Temp option is set as Custom, this setting will be available. Increase the 'warmth' or 'coolness' of the picture by pressing Left or Right buttons.

Sets the desired image size format.

Films are recorded at a different number of frames per second to normal television programmes.

Turn this feature on when you are watching films to see the fast motion scenes clearly.

Skin tone can be changed between -5 and 5.

Adjust the desired colour tone.

While watching from a HDMI source, this feature will be visible. You can use this feature to enhance the picture.

Appears only when the input source is set to VGA/PC.

Automatically optimizes the display. Press OK to optimize.

This item shifts the image horizontally to the right hand side or left hand side of the screen.

This item shifts the image vertically towards the top or bottom of the screen.

Dot Clock adjustments correct the interference that appear as vertical banding in dot intensive presentations like spreadsheets or paragraphs or text in smaller fonts.

Depending on the input source(computer etc.) you may see a hazy or noisy picture on the screen. You can use phase to get a clearer picture by trial and error.

Resets the picture settings to factory default settings (except Game mode).

English - 15 -

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

[1](#)
[...](#)
[13](#)
[14](#)
[15](#)
[16](#)
[17](#)
[18](#)
[19](#)
[20](#)

Quick Links:

[Table of Contents](#)

[Tv Control Switch & Operation](#)

[Features](#)

[General Tv Operation](#)

[Troubleshooting & Tips](#)

Related Manuals for Toshiba 32D3753DB

[Colour television Toshiba 32L1753DB Operating Instructions Manual](#)

Colour television with remote control (29 pages)

[Colour television Toshiba 32W3753DB Operating Instructions Manual](#)

With remote control (37 pages)

[Colour television Toshiba 43L1753DB Operating Instructions Manual](#)

Colour television with remote control (29 pages)

Related Content for Toshiba 32D3753DB

[32L1753DB Tv Control Switch & Operation](#)

Toshiba 32L1753DB