

Features; Accessories Included; Standby Notifications; Tv Control Switch & Operation - Toshiba 32D3753DB Operating Instructions Manual

With remote control

1
Table Of Contents
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42

--

•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks



Features


- Remote controlled colour TV
- Fully integrated digital terrestrial/cable TV (DVB-T-T2/C)
- HDMI inputs to connect other devices with HDMI sockets
- USB input
- OSD menu system
- Scart socket for external devices (such as DVD Players, PVR, video games, etc.)
- Stereo sound system
- Teletext

- Headphone connection
 - Automatic programming system
 - Manual tuning
 - Automatic power down after up to eight hours.
 - Sleep timer
 - Child lock
 - Automatic sound mute when no transmission.
 - NTSC playback
 - AVL (Automatic Volume Limiting)
 - PLL (Frequency Search)
 - PC input
 - Game Mode (Optional)
 - Picture off function
 - Programme recording
 - Programme timeshifting
 - Ethernet (LAN) for Internet connectivity and service
 - 802.11 a/b/g/n built in WIFI Support
 - Audio Video Sharing
-
- Remote Control
 - Batteries: 2 x AAA
 - Quick Start Guide
 - Side AV Connection Cable

If the TV does not receive any input signal (e.g. from an aerial or HDMI source) for 5 minutes, it will go into standby. When you next switch-on, the following message will be displayed: "TV switched to stand-by mode automatically because there was no signal for a long time." Press OK to continue.

If the TV is on and it isn't being operated for a while it will go into standby. When you next switch-on, the following message will be displayed. "TV switched to standby mode automatically because there was no signal for a long time." Press OK to continue.

1. Up direction
2. Down direction

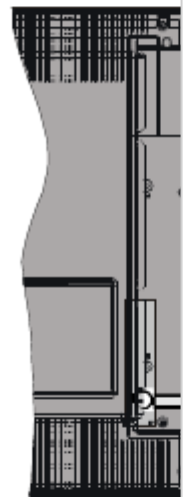

3 Volume / Info / Sources List selection and

Standby-On switch

The Control button allows you to control the Volume / Programme / Source and Standby-On functions of the TV.

To change volume: Increase the volume by pushing the button up. Decrease the volume by pushing the button down.

To change channel: Press the middle of the button, the information banner will appear on the screen. Scroll through the stored channels by pushing the button up or down.

To change source: Press the middle of the button twice(for the second time in total), the source list will appear on the screen. Scroll through the available sources by pushing the button up or down.


To turn the TV off: Press the middle of the button down and hold it down for a few seconds, the TV will turn into standby mode.

Notes:

- If you turn the TV off, this cycle starts again beginning with the volume setting.
- Main menu OSD cannot be displayed via control button.

English - 6 -

[Table of Contents](#)

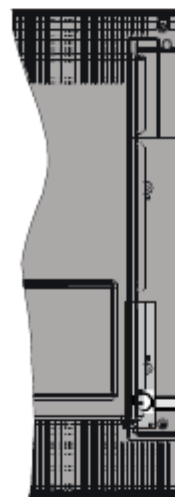

[Previous Page](#)
[Next Page](#)

1
...
4
5
6
7
8
9
10
11

Quick Links:

[Table of Contents](#)

[Tv Control Switch & Operation](#)

[Features](#)

[General Tv Operation](#)

[Troubleshooting & Tips](#)

Related Manuals for Toshiba 32D3753DB

[Colour television Toshiba 32L1753DB Operating Instructions Manual](#)

Colour television with remote control (29 pages)

[Colour television Toshiba 32W3753DB Operating Instructions Manual](#)

With remote control (37 pages)

[Colour television Toshiba 43L1753DB Operating Instructions Manual](#)

Colour television with remote control (29 pages)

Related Content for Toshiba 32D3753DB

[32L1753DB Features](#)

[Toshiba 32L1753DB](#)