

Before You Proceed; Motherboard Overview - Asus PRIME H410M-D Manual

1
2
Table Of Contents
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28



•

•

Bookmarks



Product introduction

1.1

Before you proceed

Take note of the following precautions before you install motherboard components or change

any motherboard settings.

- Unplug the power cord from the wall socket before touching any component.

- Before handling components, use a grounded wrist strap or touch a safely grounded

object or a metal object, such as the power supply case, to avoid damaging them due to static electricity.

Before you install or remove any component, ensure that the ATX power supply is switched off or the power cord is detached from the power supply. Failure to do so may cause severe damage to the motherboard, peripherals, or components.

1.2

Motherboard overview

Place this side towards the rear of the chassis

Unplug the power cord before installing or removing the motherboard. Failure to do so can cause you physical injury and damage motherboard components.

ASUS PRIME H410M-D




KBMS_USB56
EATX12V
HDMI
U32G1_34
LAN_USB78
AUDIO
2280
2260
Realtek
8111H
Super
I/O
PCIEX1_1

COM_DEBUG
ALC
PCIEX1_2
887
AAFP

20.1cm(7.9in)

CPU_FAN
DIGI
+VRM
LGA1200
M.2(SOCKET3)
PCI SATA
M.2
V
X
2242
PCIEX16
Intel
®
H410
128Mb
BIOS
SATA6G_4
SATA6G_3
SATA6G_2
USB910
CLRTC

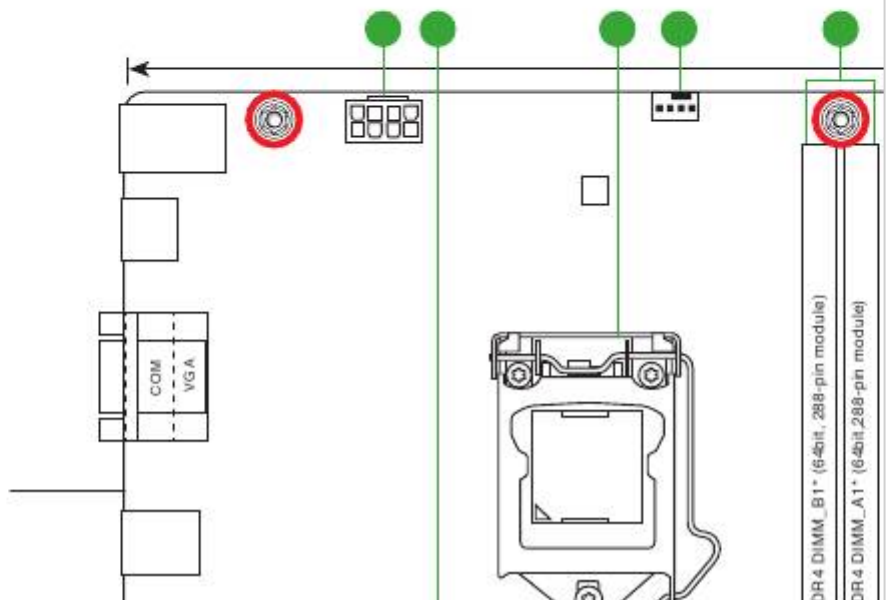

1

CHA_FAN
SPEAKER

SATAGG_1
F_PANEL



1-1

Table of Contents

[Previous Page](#)
[Next Page](#)

1
...
6
7
8
9
10
11
12
13

Quick Links:

[Prime H410M-D Specifications Summary](#)

[Motherboard Overview](#)

[Bios Setup Program](#)

Related Manuals for Asus PRIME H410M-D

[Motherboard Asus PRIME H410M-A Manual](#)

(28 pages)

[Motherboard Asus PRIME H410M-ACSM Manual](#)

(28 pages)

[Motherboard Asus Prime H410M-R User Manual](#)

(28 pages)

[Motherboard Asus 90MB13H0-M0EAYC Manual](#)

(28 pages)

[Motherboard Asus PRIME H410M-E Manual](#)

(28 pages)

[Motherboard Asus Prime H410M-CS Manual](#)

(28 pages)

[Motherboard Asus Prime H410M-F Manual](#)

(28 pages)

[Motherboard Asus PRIME H410M-K R2.0 Manual](#)

(32 pages)

[Motherboard Asus H410M-K R2.0 Quick Start Manual](#)

(2 pages)

[Motherboard Asus PRIME H410M-K R2.0 Quick Start Manual](#)

(2 pages)

[Motherboard Asus PRIME H410I-PLUS Manual](#)

(30 pages)

[Motherboard Asus PRIME H410M-K Quick Start Manual](#)

(2 pages)

[Motherboard Asus PRIME H410M-K Manual](#)

(28 pages)

[Motherboard Asus Pro H410T Manual](#)

(28 pages)

[Motherboard Asus TUF GAMING H470-PRO Manual](#)

(62 pages)

[Motherboard Asus Prime H470M-PLUS Manual](#)

(32 pages)

Related Content for Asus PRIME H410M-D

[PRIME B760M-F D4 Before You Proceed](#)

Asus PRIME B760M-F D4

[PRIME A620-PLUS WIFI6 Before You Proceed](#)

Asus PRIME A620-PLUS WIFI6

[Z790 GAMING WIFI7 Before You Proceed](#)

Asus Z790 GAMING WIFI7

[PRIME X299-A Series Before You Proceed](#)

Asus PRIME X299-A Series

[A620M-AYW WIFI Before You Proceed](#)

Asus A620M-AYW WIFI

[PRIME H610T2-CSM D4 Before You Proceed](#)

Asus PRIME H610T2-CSM D4

[ROG RAMPAGE V EDITION 10 Before You Proceed](#)

Asus ROG RAMPAGE V EDITION 10

[Q170A-IM-A Before You Proceed](#)

Asus Q170A-IM-A