



Whirlpool COOLVOX Quick Start Manual

Kitchen sound system

1
2
3
4
5
6
7
8
9
10
11

--

•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks

--

Quick Links

[1 Setup and Operation](#)

[Download this manual](#)



Quick Start Guide /Quick Start Guide (FR)

W10687103A



[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Whirlpool COOLVOX

[Stereo System Whirlpool COOLVOX Quick Start Manual](#)

Kitchen sound system (12 pages)

Summary of Contents for Whirlpool COOLVOX

[Page 1](#) Quick Start Guide /Quick Start Guide (FR) W10687103A...

[Page 2](#) All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed. (FR) COOLVOX™ KITCHEN SOUND SYSTEM SAFETY Votre sécurité et celle des autres est très importante.

[Page 3: Parts And Features](#)

PARTS AND FEATURES A. Status LED B. Power/Pair Amber - Standby Mode C. Volume Blinking Blue - Pairing Mode Solid Blue - Connected Designed for the top of the refrigerator; low profile to fit Drivers: Four Odyssey mid-range to high-range speakers and underneath cabinets.

[Page 4: Setup And Operation](#)

The Status LED (A) will glow solid blue when the sound system is properly paired with your Bluetooth device. You are now ready to play your music through CoolVox. Use the controls of your Bluetooth-enabled device to start, stop, or pause the audio.

[Page 5: Troubleshooting](#)

Mobile Device is not Bluetooth paired Pair the BlueTooth source. See "Set Up and Operation." The CoolVox™ sound system is available for pairing when the Status LED (A) flashes blue. Pairing is accomplished when the Status LED glows constant blue.

[Page 6](#) Bluetooth audio sources only Cannot charge mobile No USB jack or docking port The CoolVox™ sound system does not offer a USB port or any device from CoolVox™ provision for charging or powering mobile devices. sound system Volume too high or low Adjust volume levels on CoolVox™ ...

[Page 7](#) WHIRLPOOL 1 YEAR WARRANTY Working with Anna Carl to create content of the Warranty...

[Page 8: Important Safety Instructions](#)

IMPORTANT SAFETY INSTRUCTIONS FOR ALL PRODUCTS: particular installation. If this equipment does CAUTION cause harmful interference to radio or television reception, which can be determined by turning RISK OF ELECTRIC SHOCK. DO NOT OPEN. the equipment off and on, the user is encouraged to try to correct the interference by one or more of 1.

[Page 9](#) IMPORTANT SAFETY INSTRUCTIONS In the European Union and other locations, it is FOR CD/DVD/BLU-RAY DISC This product must not be disposed of or dumped illegal to dispose of any battery with household with your other household waste. You are liable PLAYERS: trash.

[Page 10: Consignes De Sécurité Importantes](#)

CONSIGNES DE SÉCURITÉ IMPORTANTES Tous les produits : invitons l'utilisateur à tenter de corriger le problème en prenant MISE EN GARDE l'une ou plusieurs des mesures suivantes : • Réorienter ou déplacer l'antenne de réception; RISQUE D'ÉLECTROCUTION NE PAS OUVRIR. •...

[Page 11](#) CONSIGNES DE SÉCURITÉ IMPORTANTES Lecteurs CD/DVD/Blu-ray Disc du retrait de la batterie. Si, pour quelque raison que ce soit, vous devez remplacer ce type de batterie,

adressez-vous à un centre de services autorisé. Dans l'Union européenne et dans d'autres régions, il est illégal de jeter les piles ou accumulateurs usagés avec les Ce produit ne doit pas être jeté...