



Sound bar speaker system

```
Table Of Contents
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
```

•

Table of Contents



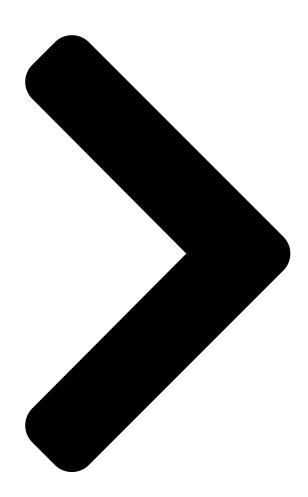


Table of Contents

- 1 Table of Contents
- 2 Introduction
- 3 Safety Icons Used in this Manual
- 4 Sound Bar Speaker System Controls
- 5 Remote Control
- 6 Sound Bar Speaker System Placement

- 7 Sound Bar Speaker System Connections
- 8 Troubleshooting
- 9 Maintenance
- 10 Specifications

Download this manual



Sound Bar Speaker System User's Guide: SB93719S-SW

If you need assistance:

Toshiba's Support Web site support.toshiba.com

Toshiba Canada Sup Call Toshiba Customer Suppo Within the United States at (800)

Outside the United States at (949) 583-3050
From Canada at (2002@@4Ing Innovation >>>>

For more information see "Troubleshooting" on page 17 in this guide.			
Owner ^l 's Record			
The model number and serial number are on the back and underside of your Sound			
Bar. Record these numbers in the spaces below. Refer to these numbers whenever			
you communicate with your Toshiba dealer about this Sound Bar.			
Model name			
Serial number			
SB93719S-SW_IB.indd 1			
1			
2012/6/19 12:31:58			
Table of Contents			

Next Page
1 2
2 3
4
4 5

Related Manuals for Toshiba SB93719S-SW

Speaker System Toshiba SSC5300 Owner's Manual

Toshiba sst6200, ssc5300 speaker svstems owner's manual (7 pages)

Speaker System Toshiba SSW1020 Owner's Manual

Toshiba ssw1020: user guide (7 pages)

Speaker System Toshiba SBX4250KN User Manual

Soundbar sbx4250kn (20 pages)

Speaker System Toshiba SBX4250KN Specification

Sound bar speaker system (2 pages)

Speaker System Toshiba SBX4250 Brochure

Sound bar speaker system (2 pages)

Speaker System Toshiba SoundStrip SBX5065KU User Manual

Sound bar speaker system (20 pages)

Speaker System Toshiba SBM1W User Manual

Mini 3d sound bar & subwoofer (402 pages)

Speaker System Toshiba SBK1 User Manual

3d sound bar (352 pages)

Toshiba TY-SBX1020 - Bluetooth Soundbar Manual

(article)

Toshiba TY-ASC402 - Wireless Sound System Manual

(article)

Speaker System Toshiba SB3950E1 User Manual

40w soundbar speaker system (176 pages)

Speaker System Toshiba ABX3250KN User Manual

Audio base speaker system (20 pages)

Speaker System Toshiba SBX5065KC User Manual

Sound bar speaker system (20 pages)

Summary of Contents for Toshiba SB93719S-SW

rage 1 The model number and serial number are on the back and underside of your sound					
Bar. Record these numbers in the spaces below. Refer to these numbers whenever you					
communicate with y	our Toshiba dealer about this Sound Bar. M	lodel			
name	Serial number	SB93719S-			
SW IB.indd 1					
_					
Page 2: Table C	of Contents				
	n6 Safety icons used in this ma 7 Remote control8 Sound B	•			

Page 3 TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT OF AC POWER UTLET, THEN FULLY INSERT. CHANGES OR MODIFICATIONS MADE TO THIS EQUIPMENT, NOT EXPRESSLY APPROVED BY TOSHIBA, OR PARTIES AUTHORIZED BY TOSHIBA, COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

Maintenance14 Specifications

Page 4 Interference and recommendations, TOSHIBA believes Bluetooth ® wireless This

equipment has been tested and found to comply with the technology is safe for use by

Page 5 OR INDIRECTLY FROM ANY TECHNICAL OR TYPOGRAPHICAL ERRORS OR OMISSIONS CONTAINED HEREIN OR FOR DISCREPANCIES BETWEEN THE PRODUCT AND THE MANUAL. IN NO EVENT SHALL TOSHIBA BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL, SPECIAL, OR EXEMPLARY DAMAGES, WHETHER BASED ON TORT, CONTRACT OR OTHERWISE, ARISING OUT OF OR IN CONNECTION WITH THIS MANUAL OR ANY OTHER INFORMATION CONTAINED HEREIN OR THE USE THEREOF.

Page 6: Introduction

Introduction Safety icons This guide contains safety instructions that must be observed to avoid potential hazards that could result in personal injuries, damage to your equipment, or loss of data. These safety cautions have been classified according to the seriousness of the risk, and icons highlight these instructions as follows: Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

Page 7: Sound Bar Speaker System Controls

Subwoofer (Sample Illustration) Subwoofer connections Item: Description: Functions: Bass port Subwoofer Speaker WIRELESS LINK button Press to pair the subwoofer with the Sound Bar. WIRELESS LINK indicator The indicator is red when the wireless link is activated. POWER switch Switch to turn ON/OFF the subwoofer. Power cord Connects to a standard AC outlet to supply power to the subwoofer.

Page 8: Remote Control

Remote control Item: Description: Operation: MUTE Press to turn the sound off. Press again to cancel. Press to turn the HDMI ® CEC on/off. VOLUME Press to adjust the volume level. Press to go to the last track or advance PRE/NEXT to the next track in Bluetooth ®...

Page 9 Installing the batteries Install the batteries (AAAx2), matching the polarity indicated inside the battery compartment of the remote control. 1 Open the battery cover. (Sample Illustration) Remote control - Opening the battery cover 2 Insert batteries. Make sure to match the polarity marks (+ / -) on the batteries to the marks indicated in the battery compartment.

Page 10: Sound Bar Speaker System Placement

Sound Bar speaker system placement The Sound Bar can be placed freestanding on a table or mounted on a wall. For the best surround sound experience, place your subwoofer as shown below. Place the subwoofer at least 11.8" (300mm) away from the TV. 300mm Sound Bar Subwoofer...

Page 11: Sound Bar Speaker System Connections

Sound Bar speaker system connections Connecting to a switching power supply (AC Adapter). If you are not going to use the unit for an extended period of time, disconnect the switching power supply (AC Adapter) from the wall outlet. Whenever the switching power supply (AC Adapter) is plugged in to a wall outlet, the switching power supply (AC Adapter) will draw some power, even when the unit is turned off.

<u>Page 12</u> 1. Press the INPUT button to select Bluetooth ® mode until the display is shown "BT". 2. Once the Sound Bar is detected of your Bluetooth ® enable device. Select the "Toshiba Soundbar" on your device. 3. Enter the PIN code.

Page 13: Troubleshooting

Troubleshooting Problem: Solution: The unit does not switch on. Make sure it is plugged in. Turn the subwoofer power switch to ON. No sound from the subwoofer Move the subwoofer closer to the Sound Bar. Ensure the subwoofer is turned on. Turn the subwoofer power switch to ON.

Page 14: Maintenance

Maintenance Servicing Please refer to relevant topics in "Troubleshooting & Maintenance" on page 13 & 14 before returning the product. If this unit becomes inoperative, do not try to correct the problem by yourself. There are no user- servicable parts inside. Turn off, unplug the power plug, and please call our helpline to locate an Authorized Service Center.

Page 15: Specifications

Specifications These models comply with the specifications listed below. Designs and specifications are subject to change without notice. These models may not be compatible with features and/or specifications that may be added in the future. Subwoofer: Power requirements AC 120 60Hz Power output 150 watts (at 3 ohms, 100Hz/THD10%)

Page 16 SB93719S-SW_IB.indd 16 2012/6/19 12:32:00...