



# Central Processing Unit (Cpu) - Asus ROG STRIX H370-F GAMING User Manual



1
2
Table Of Contents
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67

68  
69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96

--

•

[Table of Contents](#)

•

## Bookmarks







### 1.1.3

## Central Processing Unit (CPU)

The motherboard comes with a surface mount LGA1151 socket designed for the 8th Generation Intel Core™ processor.


®

Ensure that you install the correct CPU designed for LGA1151 socket only. DO NOT install a CPU designed for LGA1150, LGA1155 and LGA1156 sockets in the LGA1151 socket.

•  
•  
•  
•

1-4

Ensure that all power cables are unplugged before installing the CPU. Upon purchase of the motherboard, ensure that the PnP cap is on the socket and

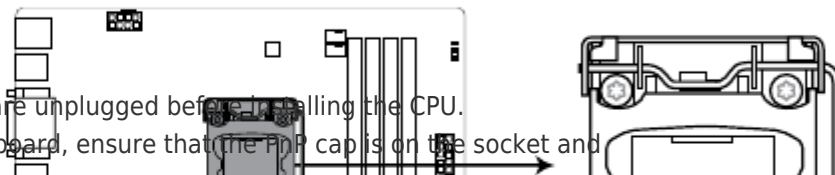

the socket contacts are not bent. Contact your retailer immediately if the PnP cap is missing, or if you see any damage to the PnP cap/socket contacts/motherboard components. ASUS will shoulder the cost of repair only if the damage is shipment/transit-related.

Keep the cap after installing the motherboard. ASUS will process Return Merchandise Authorization (RMA) requests only if the motherboard comes with the cap on the LGA1151 socket.

The product warranty does not cover damage to the socket contacts resulting from incorrect CPU installation/removal, or misplacement/loss/incorrect removal of the PnP cap.

## Chapter 1: Product Introduction

[Table of Contents](#)

1  
...  
17  
18  
19  
20  
21  
22  
23  
24

Quick Links:

[Motherboard Layout](#)

[System Memory](#)

[Onboard Leds](#)

[DIMM Installation](#)

## Related Manuals for Asus ROG STRIX H370-F GAMING

[Motherboard Asus Rog Strix H370-I Gaming Manual](#)

(89 pages)

[Motherboard Asus PRIME H370-PLUS Quick Start Manual](#)

(2 pages)

[Motherboard Asus PRIME B360-PLUS Manual](#)

(28 pages)

[Motherboard Asus PRIME H370-PLUS Manual](#)

(36 pages)

[Motherboard Asus TUF H370-PRO GAMING Manual](#)

(40 pages)

[Motherboard Asus PRIME H370-A Quick Start Manual](#)

(2 pages)

[Motherboard Asus PRIME H370-A Manual](#)

(36 pages)

[Motherboard Asus H370 MINING MASTER Manual](#)

(25 pages)

[Motherboard Asus PRIME H370M-PLUS Manual](#)

(40 pages)

[Motherboard Asus PRIME H370M-PLUS User Manual](#)

(40 pages)

[Motherboard Asus TUF H310-PLUS GAMING Manual](#)

(27 pages)

[Motherboard Asus TUF H310M-PLUS GAMING R2.0 Manual](#)

(27 pages)

[Motherboard Asus PRIME H310M-D R2.0 Manual](#)

(27 pages)

[Motherboard Asus PRIME H310M-E R2.0 Manual](#)

(28 pages)

[Motherboard Asus PRIME H310M-K R2.0 Manual](#)

(27 pages)

[Motherboard Asus H310A-EM-A Manual](#)

Industrial motherboard (77 pages)

## Related Content for Asus ROG STRIX H370-F GAMING

[WS X299 SAGE Central Processing Unit \(Cpu\)](#)

Asus WS X299 SAGE

[Pro A620M-C-CSM Central Processing Unit \(Cpu\)](#)

Asus Pro A620M-C-CSM

[PRIME H310M-A R1.0 Central Processing Unit \(Cpu\)](#)

Asus PRIME H310M-A R1.0

[TUF GAMING B650-E WIFI Central Processing Unit \(Cpu\)](#)

Asus TUF GAMING B650-E WIFI

[H110M-P/DVI Central Processing Unit \(Cpu\)](#)

Asus H110M-P/DVI

[PRIME X570-PRO Central Processing Unit \(Cpu\)](#)

Asus PRIME X570-PRO

[M3N-H/HDMI Central Processing Unit \(Cpu\)](#)

Asus M3N-H/HDMI

[EX-B660M-V5 D4 Central Processing Unit \(Cpu\)](#)

Asus EX-B660M-V5 D4