



# Creating A Raid Driver Disk; Creating A Raid Driver Disk In Windows - Asus ROG STRIX H370-F GAMING User Manual



1
2
Table Of Contents
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67

68  
69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96

--

•

[Table of Contents](#)

•

## Bookmarks







## Exiting the Intel

To exit the utility:

1.

From the utility main menu, select 5. Exit, and then press <Enter>. The following warning message appears:

2.

Press <Y> to exit or press <N> to return to the utility main menu.

## 4.2

## Creating a RAID driver disk

### 4.2.1



# Creating a RAID driver disk in Windows

To install the RAID driver for Windows

1.

During the OS installation, click Load Driver to allow you to select the installation media containing the RAID driver.

2.

Insert the support USB drive with RAID driver into the USB port, and then click **Browse**.

3.

Click the name of the device you've inserted, go to Drivers > RAID, and then select the RAID driver for the corresponding OS version. Click OK.

4.

Follow the succeeding screen instructions to complete the installation.

To set up a Windows driver for your optical drive.

4-10

## Rapid Storage Technology Option ROM utility

®

[CONFIRM EXIT]

®

®

UEFI operating system under RAID mode, ensure to load the UEFI

OS:

®

Chapter 4: RAID Support

[Table of Contents](#)

[Previous Page](#)  
[Next Page](#)

1  
...  
87  
88  
89  
90  
91  
92  
93  
94

Quick Links:

[Motherboard Layout](#)

[System Memory](#)

[Onboard Leds](#)

[DIMM Installation](#)

## Related Manuals for Asus ROG STRIX H370-F GAMING

[Motherboard Asus Rog Strix H370-I Gaming Manual](#)

(89 pages)

[Motherboard Asus PRIME H370-PLUS Manual](#)

(36 pages)

[Motherboard Asus PRIME H370-PLUS Quick Start Manual](#)

(2 pages)

[Motherboard Asus PRIME B360-PLUS Manual](#)

(28 pages)

[Motherboard Asus TUF H370-PRO GAMING Manual](#)

(40 pages)

[Motherboard Asus PRIME H370-A Quick Start Manual](#)

(2 pages)

[Motherboard Asus PRIME H370-A Manual](#)

(36 pages)

[Motherboard Asus H370 MINING MASTER Manual](#)

(25 pages)

[Motherboard Asus PRIME H370M-PLUS Manual](#)

(40 pages)

[Motherboard Asus PRIME H370M-PLUS User Manual](#)

(40 pages)

[Motherboard Asus TUF H310-PLUS GAMING Manual](#)

(27 pages)

[Motherboard Asus TUF H310M-PLUS GAMING R2.0 Manual](#)

(27 pages)

[Motherboard Asus PRIME H310M-D R2.0 Manual](#)

(27 pages)

[Motherboard Asus PRIME H310M-E R2.0 Manual](#)

(28 pages)

[Motherboard Asus PRIME H310M-K R2.0 Manual](#)

(27 pages)

[Motherboard Asus H310A-EM-A Manual](#)

Industrial motherboard (77 pages)

## Related Content for Asus ROG STRIX H370-F GAMING

[ROG STRIX X399-E GAMING Creating A Raid Driver Disk](#)

Asus ROG STRIX X399-E GAMING

[TUF X299 MARK 2 Creating A Raid Driver Disk](#)

Asus TUF X299 MARK 2

[M2N-X Creating A Raid Driver Disk](#)

Asus M2N-X

[WS C422 SAGE/10G Creating A Raid Driver Disk](#)

Asus WS C422 SAGE/10G

[90MB0U00-M0EAY0 Creating A Raid Driver Disk](#)

Asus 90MB0U00-M0EAY0

[Pro WS X299 SAGE II Creating A Raid Driver Disk](#)

Asus Pro WS X299 SAGE II

[WS C422 PRO Creating A Raid Driver Disk](#)

Asus WS C422 PRO

[WS X299 SAGE/10G Creating A Raid Driver Disk](#)

Asus WS X299 SAGE/10G