

Wps - Asus RT-AC2900 User Manual

 
Wireless-ac 2900 dual band gigabit router

1
2
Table Of Contents
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140



•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks



4.1.2 WPS

WPS (Wi-Fi Protected Setup) is a wireless security standard that allows you to easily connect devices to a wireless network.

You

can configure the WPS function via the PIN code or WPS button.

NOTE: Ensure that the devices support WPS.

To enable WPS on your wireless network:

1. From the navigation panel, go to Advanced Settings >

Wireless > WPS tab.

2. In the Enable WPS field, move the slider to ON.

3. WPS uses 2.4GHz by default. If you want to change the frequency to 5GHz, turn OFF the WPS function, click Switch Frequency in the Current Frequency field, and turn WPS ON again.

57

[Table of Contents](#)

[Previous Page](#)

[Next Page](#)

[1](#)
[...](#)
[54](#)
[55](#)
[56](#)
[57](#)
[58](#)
[59](#)
[60](#)
[61](#)

Quick Links:

[Your Wireless Router](#)

[Router Setup](#)

[Logging into the Web Gui](#)

Related Manuals for Asus RT-AC2900

[Network Router Asus RT-AC2900 Quick Start Manual](#)

Wireless dual band gigabit router (84 pages)

[Network Router Asus RT-AC2600 Quick Start Manual](#)

Wireless-ac2600 dual band gigabit router (15 pages)

[Network Router Asus RT-AC2600 User Manual](#)

Wireless-ac2600 dual band gigabit router (104 pages)

[Network Router Asus RT-AC2400 Quick Start Manual](#)

Wireless-ac2400 dual band gigabit router (224 pages)

[Network Router ASUS RT-AC66U Quick Start Manual](#)

Dual band 3x3 802.11ac gigabit router (136 pages)

[Network Router Asus RT-AC68U Quick Start Manual](#)

(196 pages)

[Network Router Asus RT-AC68U Setup Manual](#)

(7 pages)

[Network Router Asus RT-AC87U Quick Start Manuals](#)

Dual band 4x4 wireless-ac 2400 gigabit router (158 pages)

[Network Router Asus RT-AC56U User Manual](#)

Dual band 2x2 802.11ac (30 pages)

[Network Router Asus RT-AC88U User Manual](#)

Wireless-ac 3100 dual band gigabit router (135 pages)

[Network Router Asus RT-AC1900P Manual](#)

3x3 wireless-ac 1900 (39 pages)

[Network Router Asus RT-AC66U B1 Quick Start Manual](#)

Wireless-ac1750 dual band gigabit router (230 pages)

[Network Router Asus RT-AC66U B1 Quick Start Manual](#)

Wireless-ac1750 dual band gigabit router (180 pages)

[Network Router Asus RT-AC66U B1 User Manual](#)

Wireless-ac 1750 dual band gigabit router (127 pages)

[Network Router Asus RT-AC57U Quick Start Manual](#)

Wireless-ac1200 dual band gigabit router (78 pages)

[Network Router Asus RT-AC750 User Manual](#)

Dual-band wireless-ac750 router (129 pages)

Related Content for Asus RT-AC2900

[RT-N12E/C1 Wps](#)

Asus RT-N12E/C1

[RT-N10 LX Setting Up The Wi-Fi Protected Setup \(Wps\)](#)

Asus RT-N10 LX

[RT-AX3000P Wps](#)

Asus RT-AX3000P

[TUF GAMING AX4200 Wps](#)

Asus TUF GAMING AX4200

[RT-AX86U PRO Wps](#)

Asus RT-AX86U PRO

[RT-AX86S Wps](#)

Asus RT-AX86S

[XD4R Wps](#)

Asus XD4R

[RT-AC58U Wps](#)

Asus RT-AC58U