 




Asus Eee PC MK90H Quick Start Manual

1
2
3
4
5
6
7
8
9
10
11

Table Of Contents



•


[Table of Contents](#)

•

Bookmarks

Quick Links

[Download this manual](#) See also: [User Manual](#)

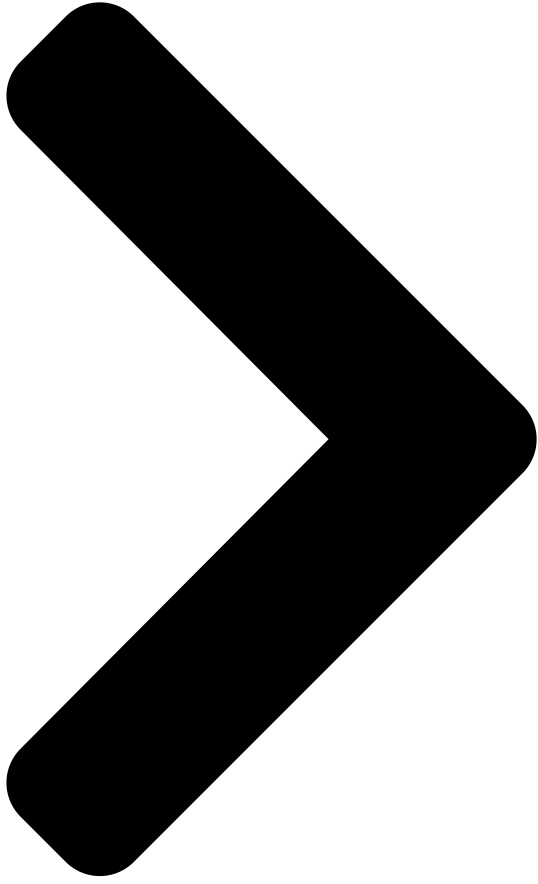

E4889

netpal

Quick Start Guide

15G06Q162100



net

Table of Contents

[Next Page](#)

1
2
3
4
5

Related Manuals for Asus Eee PC MK90H

[Laptop Asus Eee PC MK90H User Manual](#)

User manual (68 pages)

[Laptop Asus MK90H-BLU002X - Eee PC Disney User Manual](#)

User manual (68 pages)

[Laptop Asus Eee PC 4G Linux Quick Use Manual](#)

(15 pages)

[Laptop Asus Eee PC 900SD XP User Manual](#)

Windows xp edition (56 pages)

[Laptop Asus Eee PC 900HD XP User Manual](#)

(80 pages)

[Laptop Asus Eee PC R252B Manual](#)

Windows 7 edition (64 pages)

[Laptop Asus Eee PC X101CH User Manual](#)

Windows 7 edition (60 pages)

[Laptop Asus 1015E E-Manual](#)

(98 pages)

[Laptop ASUS Notebook PC E-Manual](#)

Notebook pc (102 pages)

[Laptop Asus Notebook PC Hardware User Manual](#)

Notebook pc (76 pages)

[Laptop Asus G53SW User Manual](#)

Notebook pc (116 pages)

[Laptop Asus M8 User Manual](#)

Notebook pc (102 pages)

[Laptop Asus X453MA Series E-Manual](#)

(112 pages)

[Laptop ASUS NOTEBOOK PC User Manual](#)

Notebook pc (102 pages)

[Laptop Asus G73JH User Manual](#)

Notebook pc (30 pages)

[Laptop Asus Eee PC 4G Surf User Manual](#)

Windows xp edition (78 pages)

Summary of Contents for Asus Eee PC MK90H

[Page 1: Quick Start Guide](#)

E4889 netpal Quick Start Guide 15G06Q162100...

[Page 2: Safety Precautions](#)

Safety Precautions The following safety precautions will increase the life of the Disney Netpal. Follow all precautions and instructions. Except as described in this manual, refer all servicing to qualified personnel. Disconnect the AC power before cleaning. Wipe the Disney Netpal using a clean cellulose sponge or chamois cloth dampened with a solution of nonabrasive detergent and a few drops of warm water and remove any extra moisture with a dry cloth.

[Page 3: Powering On Your Disney Netpal](#)

Powering on your Disney Netpal These are only quick instructions for using your Disney Netpal. Connect the AC power adapter Turn ON the Disney Netpal • When you open the display panel, do not force it down to the table or else the hinges may break! Never lift the Disney Netpal by the display panel! •...

[Page 4: First-Time Startup](#)

First-time Startup For the first time you start your Disney Netpal, the Windows wizard will launch automatically and lead you through setting up your preferences and some basic information. Follow the wizard instructions to finish the initialization: The Welcome message appears.

[Page 5: Parental Control](#)

Disney Netpal, including programs which they can and cannot use and a safe environment for your children when they go online. For service and support, visit our multi-language web site at <http://support.asus.com>. Setting the master password and creating an account Double-click the Parental Control icon on the desktop to start the program.

[Page 6: Wireless Network Connection](#)

Wireless network connection Double-click the crossed wireless network icon Notification area. If the wireless connection icon does not show in the Notification area. Activate the wireless LAN function by pressing (<Fn> + <F2>) before configuring a wireless network connection. Select the wireless access point you want to connect to from the list and click Connect to build the connection.

[Page 7: Wired Network Connection](#)

Wired network connection To establish a wired network, follow the instructions below: Using a dynamic IP: Right-click the network icon with a yellow warning triangle Windows® taskbar and select Open Network Connections. Right-click Local Area Connection and select Properties. Click Internet Protocol (TCP/IP) and click Properties.

[Page 8](#) Using a static IP: Repeat the step 1-3 of Using a dynamic IP to start the static IP network configuration. Click Use the following IP address. Enter the IP address, Subnet mask and Gateway from your service provider. If needed, enter the preferred DNS Server address and alternative address.

[Page 9](#) Connecting removable devices You can connect removable devices based on your needs. Memory Card Slot microSD SD Adapter USB Port (2.0/1.1) USB External Optical Disk Drive USB Flash Memory Disk MMC (Multimedia Card) MMC Plus RS-MMC (Reduced Size) (with MMC adapter) SD (Secure Digital) MiniSD (with SD adapter) USB External Hard Disk Drive...

[Page 10: Wlan Setup Faq](#)

For more information and advanced wireless network configuration, please visit <http://livesupport.asus.com/eeewirelessxphowto.html>. Ensure that the wireless LAN function is enabled before configuring a wireless network connection. If not, press <Fn> + <F2> to activate the wireless LAN function.

This manual is also suitable for:

[Mk90h-blu002x - eee pc disneyDisney netpal](#)