

Left Side - Asus F5GL Hardware Manual

1	
Table Of Contents	
2	
3	
4	
5	
6	
7	
8	
9	
10	
11	
12	
13	
14	
15	
16	
17	

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71


--	--

•

•

Bookmarks

--

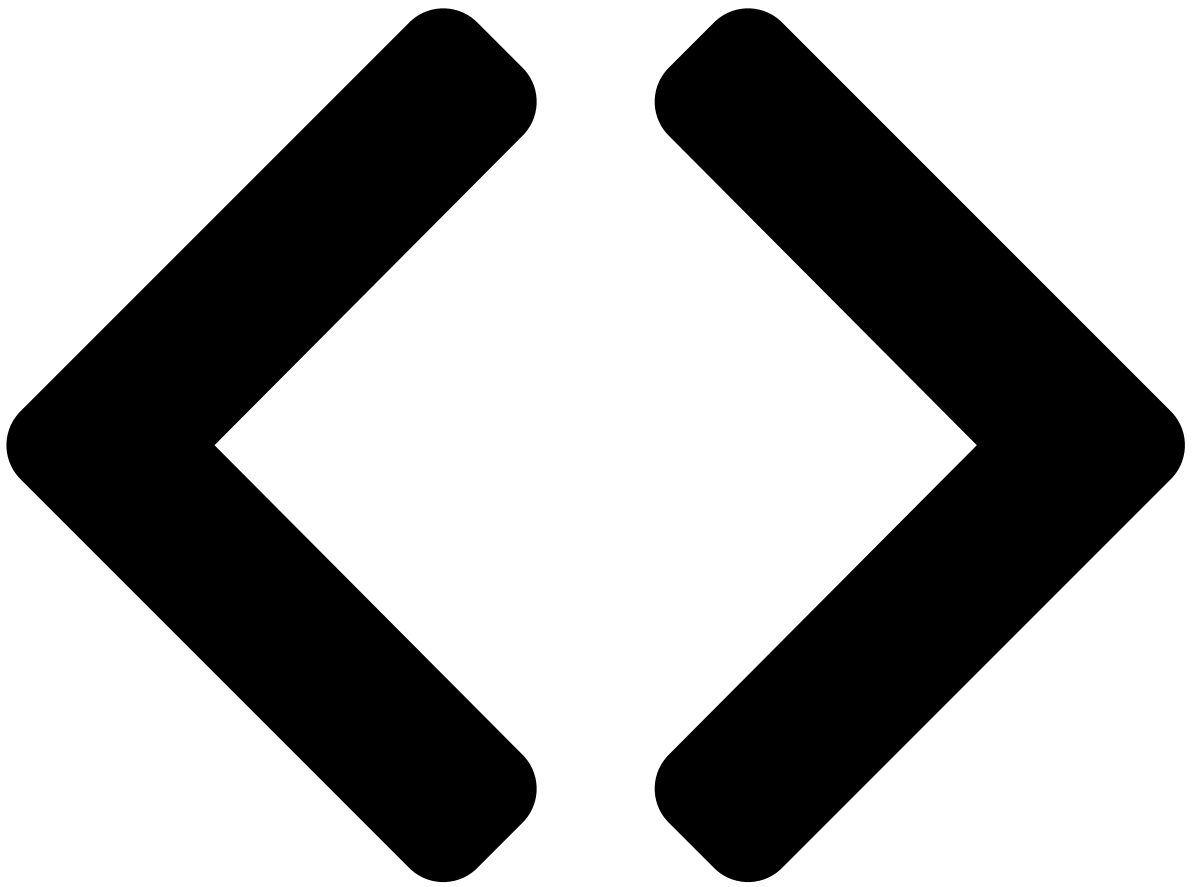


2

Knowing the Parts

Left Side

Refer to the diagram below to identify the components on this side of the Notebook PC.

LAN Port

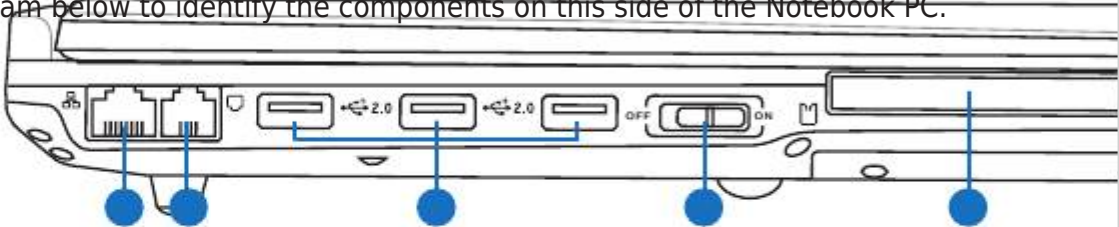

The RJ-45 LAN port with eight pins is larger than the RJ-11 modem port and supports a standard Ethernet cable for connection to a local network. The built-in connector allows convenient use without additional adapters.

Modem Port (on selected models)

The RJ-11 modem port with two pins is smaller than the RJ-45 LAN port and supports a standard telephone cable. The internal modem supports up to 56K V.90 transfers. The built-in connector allows convenient use without additional adapters.

IMPORTANT! The built-in modem does not support the voltage used in digital phone systems. Do not connect the modem port to a digital phone system or else damage will occur to the Notebook PC.

USB Port (2.0/1.1)

2.0

The USB (Universal Serial Bus) port is compatible with USB 2.0 or USB 1.1 devices such as keyboards, pointing devices, cameras, hard disk drives, printers, and scanners connected in a series up to 12Mbps/sec (USB 1.1) and 480Mbps/sec (USB 2.0). USB allows many devices to run simultaneously on a single computer, with some peripherals acting as additional plug-in sites or hubs. USB supports hot-swapping of devices so that most peripherals can be connected or disconnected without restarting the computer.

Wireless Switch

Enables or disables the built-in wireless LAN and Bluetooth (selected models). When enabled, the wireless status indicator will light. Windows software settings are necessary before use.

16

EXPRESS



(continued on next page)

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
13
14
15
16
17
18
19
20

Related Manuals for Asus F5GL

[Laptop Asus F5M Manual](#)

(70 pages)

[Software Asus A3Ac User Manual](#)

(8 pages)

[Laptop Asus F50GX Hardware Manual](#)

(88 pages)

[Laptop Asus X75A User Manual](#)

(116 pages)

[Laptop Asus R403C User Manual](#)

User's manual for english edition (116 pages)

[Laptop Asus A550CA E-Manual](#)

User's manual for english edition (128 pages)

[Laptop Asus A550DP E-Manual](#)

User's manual for english edition (110 pages)

[Laptop Asus A552EA E-Manual](#)

X552 series 15.6"; x452 series 14.0" (128 pages)

[Laptop Asus A451CA E-Manual](#)

User's manual for english edition (114 pages)

[Laptop Asus F5Z Hardware User Manual](#)

Asus f5z notebook (85 pages)

[Laptop Asus X553M User Manual](#)

(9 pages)

[Laptop Asus E502M E-Manual](#)

(114 pages)

[Laptop Asus X552W E-Manual](#)

(118 pages)

[Laptop Asus X540L E-Manual](#)

(112 pages)

[Laptop Asus X555B E-Manual](#)

(116 pages)

[Laptop Asus VivoBook F512DA Series Tips And Frequently Asked Questions](#)

(2 pages)

Related Content for Asus F5GL

[VivoBook Pro N580GD Left Side](#)

Asus VivoBook Pro N580GD

[ROG G703GXR EV002T Left Side](#)

Asus ROG G703GXR EV002T

[ExpertBook P5440FA Left Side](#)

Asus ExpertBook P5440FA

[Zenlock 14 UM431DA-AM005T Left Side](#)

Asus Zenlock 14 UM431DA-AM005T

[NovaGo TP370QL-4G64G Left Side](#)

Asus NovaGo TP370QL-4G64G

[ExpertBook B9450FA Left Side](#)

Asus ExpertBook B9450FA

[S530FN-EJ313T Left Side](#)

Asus S530FN-EJ313T

[FA506QM Left Side](#)

Asus FA506QM

This manual is also suitable for:

F5sIF5srPro50srPro50vPro50viPro55g| ... [Show all](#)