

Bios Setup Program - Asus PRIME H370-PLUS Manual

1
2
Table Of Contents
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36

--

•

[Table of Contents](#)

•

Bookmarks



2.2

BIOS setup program

Use the BIOS Setup program to update the BIOS or configure its parameters. The BIOS screens include navigation keys and brief online help to guide you in using the BIOS Setup program.

Entering BIOS Setup at startup

To enter BIOS Setup at startup:

-

Press <Delete> or <F2> during the Power-On Self Test (POST). If you do not press <Delete> or <F2>, POST continues with its routines.

Entering BIOS Setup after POST

To enter BIOS Setup after POST:

- Press <Ctrl>+<Alt>+ simultaneously.
 - Press the reset button on the system chassis.
 - Press the power button to turn the system off then back on. Do this option only if you failed to enter BIOS Setup using the first two options.
- Using the power button, reset button, or the <Ctrl>+<Alt>+ keys to force reset from a running operating system can cause damage to your data or system. We recommend you always shut down the system properly from the operating system.

• The BIOS setup screens shown in this section are for reference purposes only, and may not exactly match what you see on your screen.

Visit the ASUS website at www.asus.com to download the latest BIOS file for this

• motherboard.

• Ensure that a USB mouse is connected to your motherboard if you want to use the mouse to control the BIOS setup program.

• If the system becomes unstable after changing any BIOS setting, load the default settings to ensure system compatibility and stability. Select the Load Optimized Defaults item under the Exit menu or press hotkey <F5>.

• If the system fails to boot after changing any BIOS setting, try to clear the CMOS and reset the motherboard to the default value. See section 1.2.1 Layout contents for information on how to erase the RTC RAM

BIOS menu screen

The BIOS setup program can be used under two modes: EZ Mode and Advanced Mode. You can change modes from the Exit menu or from the Exit/Advanced Mode button in the EZ

Mode/Advanced Mode screen.

2-5

ASUS PRIME H370-PLUS

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
23
24
25
26
27
28
29
30

Quick Links:

[Motherboard Overview](#)

Related Manuals for Asus PRIME H370-PLUS

[Motherboard Asus PRIME B360-PLUS Manual](#)

(28 pages)

[Motherboard Asus PRIME H370-PLUS Quick Start Manual](#)

(2 pages)

[Motherboard Asus Rog Strix H370-I Gaming Manual](#)

(89 pages)

[Motherboard Asus ROG STRIX H370-F GAMING User Manual](#)

(96 pages)

[Motherboard Asus TUF H370-PRO GAMING Manual](#)

(40 pages)

[Motherboard Asus PRIME H370-A Quick Start Manual](#)

(2 pages)

[Motherboard Asus PRIME H370-A Manual](#)

(36 pages)

[Motherboard Asus H370 MINING MASTER Manual](#)

(25 pages)

[Motherboard Asus PRIME H370M-PLUS Manual](#)

(40 pages)

[Motherboard Asus PRIME H370M-PLUS User Manual](#)

(40 pages)

[Motherboard Asus PRIME H310M-A R1.0 Instruction Manual](#)

(29 pages)

[Motherboard Asus H310T-A R2.0 Manual](#)

(26 pages)

[Motherboard Asus PRIME H310M-K Manual](#)

(27 pages)

[Motherboard Asus PRIME H310M-C R2.0 Manual](#)

(28 pages)

[Motherboard Asus PRIME H310M-D R2.0 Manual](#)

(27 pages)

[Motherboard Asus PRIME H310M-A R2.0 Manual](#)

(29 pages)

Related Content for Asus PRIME H370-PLUS

[PRIME X299-A Series Bios Setup Program](#)

Asus PRIME X299-A Series

[ROG RAMPAGE V EDITION 10 Bios Setup Program](#)

Asus ROG RAMPAGE V EDITION 10

[Q170A-IM-A Bios Setup Program](#)

Asus Q170A-IM-A

[Z13PE-D16 Bios Setup Program](#)

Asus Z13PE-D16

[WS X299 SAGE Bios Setup Program](#)

Asus WS X299 SAGE

[Pro A620M-C-CSM Bios Setup Program](#)

Asus Pro A620M-C-CSM

[PRIME H310M-A R1.0 Bios Setup Program](#)

Asus PRIME H310M-A R1.0

[TUF GAMING B650-E WIFI Bios Setup Program](#)

Asus TUF GAMING B650-E WIFI

This manual is also suitable for:

Prime h370-plus/csm