



Toshiba T750E-R Operation Manual

Wireless earphone

1
2

--

•

Bookmarks

[Download this manual](#)

Quick Links



RZE-BT750E

Operation Manual

Thank you for purchasing this product.
To use this product safely, read and understand this operation manual thoroughly before using it. After reading this manual, please use the product only as instructed and use when necessary.

Safety precautions

The information you need to prevent danger to the user and other people as well as property damage is described below. "Description of signs" shows different categories of the degree of danger or damage that may occur due to wrong handling. "Description of symbols" shows the meaning of the symbols.

Important notes

- This book is only a guide for user's operation, not a criterion for configuration.
- Only use attachments/accessories specified by the manufacturer.
- The lightning flash is intended to alert the user to the presence of dangerous voltage within the product's enclosure, and touching the internal components may result in a risk of electric shock to persons.
- The exclamation mark is intended to alert the user to the presence of important operating instructions.
- To reduce the risk of electric shock or fire, do not open the cover. Refer servicing to qualified service personnel.

Description of signs

Indicates that there is a risk of death or serious injury.
Indicates that there is a risk of property damage.

Description of symbols

Indicates "Prohibition" or "You must not"
Indicates "Mandatory Action" or "Do as follows"
Indicates "Warning" or "Caution"
Indicates "Information" with pictures and text.

What to do in the case of an abnormality

- Stop using the device immediately in case of an abnormality or failure.
- Remove the USB cable immediately when water or any foreign object enters the interior of the device. It may cause a fire or electric shock. Remove the USB cable immediately, and contact your dealer for a repair.

Usage

- Do not use this product while riding a bicycle or driving a car or motorbike. Surrounding sounds may not be heard clearly, which may cause a traffic accident.
- Besides during driving, do not use the product in places where surrounding sounds cannot be heard, such as railroad crossing, train platforms, roadways, or construction sites to avoid traffic accident.

Do not disassemble, modify, or repair the product.

- Do not disassemble, modify, or repair the product.
- Do not leave in places where children can reach.
- Small children might swallow ear pieces by mistake and cause injury.

Do not expose the product to water, rain, or moisture.

- Do not expose the product to water, rain, or moisture.
- Do not raise the volume level for a long time as it may affect your hearing.

When using the product while walking, turn down the volume until surrounding sounds can be heard clearly.

- Otherwise, it may cause a traffic accident.

Notes on usage

About handling

- Do not use the product while using the product.
- Do not place the product either in sunlight or in places near a heater, or in direct sunlight.
- Do not leave the product in places where the temperature is high.

About static electricity precautions

When wearing the earphone, you may feel the sound and stimulus caused by static electricity. In dry weather seasons or places where static electricity likely occurs, you can reduce it by avoiding wearing clothes of chemical fiber.

About maintenance

- Wipe with a dry, soft cloth.
- If the ear piece gets dirty, remove it from the earphone and wash it with diluted neutral detergent by hand.
- Never use alcohol, benzene, or acetone to clean this product. Doing so may cause the product's surface to deteriorate.

201104c1_RZE-BT750E_EN

CAUTION

Rechargeable battery (Lithium polymer ion)

- To reduce the risk of electric shock or product damage.
- Do not attempt to remove the battery by yourself. It is built-in and is not rechargeable.
- Do not heat, disassemble, or short-circuit the battery. Doing so may cause the battery and power supply to generate heat, rupture, or ignite.
- Charge the battery within an ambient temperature between 5 and 35 degrees Celsius. Otherwise, the electric insulation might leak, battery performance might deteriorate and the battery life might be shortened.

- Do not continue charging the battery if it does not return full charge within the specified charging time. Overcharging may cause the battery to become hot, rupture, or ignite.
- Do not expose the battery to excessive heat such as under the sun or near the fire or the fire.
- Overheat, leakage, or rupture may occur, resulting in burns or injury.
- If you touch the battery fluid, rinse it off with water and consult with the doctor. If the battery fluid spills over the device, wipe it off without touching the fluid.
- If you leave the unit unused for a long period of time, the built-in rechargeable battery will be in an over discharge state due to self discharge, and the charging capacity may deteriorate or the battery may be no longer rechargeable. Even if you are not using the unit, charge the battery once or twice a year for 3 hours each time.

Important Safety Instructions

- Read these instructions.
- Keep these instructions.
- 5028700
- Follow all warnings.
- Follow all instructions.
- Do not use this apparatus near water with the Micro USB cover open.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- Unplug this product during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled on or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

FCC Statement:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference to residential environments. This equipment generates, uses, and can radiate radio frequency energy and, if not used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IC-CANADA:

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. This Class (B) digital apparatus complies with Canadian ICES-003.
Cet appareil s'accorde avec Industrie Canada licence-exempte RSS standard. (1) cet appareil ne peut pas causer d'interférence, et (2) cet appareil doit accepter de l'interférence, y compris l'interférence qui peut causer un fonctionnement indésirable de l'appareil.
Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

California Prop 65 Warning:

This product contains chemicals, including lead, known to the State of California to cause cancer and birth defects or other reproductive harm. Wash hands after handling.

Disclaimer

 
 
 
 
- Toshiba shall not be responsible for any damage caused by an earthquake, thunderstorm, flood damage, fire for which Toshiba is not responsible, acts of a third party, other accidents, or damages caused by the user's willful acts or negligence, misuse, or use in abnormal conditions.
- Toshiba shall not be responsible for any damage caused by failure to observe the information described in the operation manual.

Disposal


- When disposing of this device, please refer to the instructions on the back of the device.
- When disposing of the battery, make a request to a recycle agency for disposal.
- This product contains a built-in lithium ion rechargeable battery. There is a risk of injury due to fire, explosion, or leakage if the battery is not handled, repaired, or disposed of properly. Dispose of the battery in accordance with local ordinances or regulations. Do not disassemble, crush or burn the battery, or expose it to fire or high temperatures.

This unit is designed for use with Bluetooth® wireless devices compatible with the HFP, HSP, SPK, A2DP and AVRCP profiles. The device does not support the following Bluetooth profiles: L2CAP, HOGP, and HOGP. For more information, please refer to the user manual or technical support website.

CAUTION

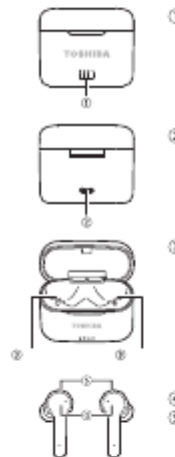

CAUTION

 

Frequently used

This unit uses the 2.4 GHz frequency band. However other wireless devices may use 2.4 GHz frequency bands as well and may cause interference with each other. To avoid interference, please refrain from the use of the unit at the same time with other wireless devices.

Certification of this device

This unit conforms to frequency restrictions and has received certification based on frequency laws, so a wireless device is not necessary.

However, the following actions are prohibited:

Usage restrictions

- Wireless transmission and/or use with all Bluetooth® equipped devices is not guaranteed.
- A device featuring the Bluetooth® function is required to conform to the Bluetooth® standard specified by Bluetooth SIG, and be authenticated. Even if the connected device conforms to the above mentioned Bluetooth® standard, some devices may not be connected or work correctly, depending on the features or specifications of the device.

Range of use

Use this device within an unobstructed 10 m range. The range of use or perimeter may be shortened depending on any obstructions, devices causing interference, other people in the room, or the construction of the building. Please note that the range mentioned above is not guaranteed.

The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and are used under license.

Note

- This unit may receive radio interference caused by mobile telephones during use. If such interference occurs, please increase separation between this unit and the mobile telephone.



Charging case

Charging status indicator for the case

(Front view)

Charging case

Type-C USB charging socket

(Rear view)

Charging case

Charging port

(Compartment)

Left

Right

Earbuds

Multi-function buttons (Touch sensor)

(Left and Right)

Earbud status indicator



The earbuds and the charging case use lithium-ion polymer batteries. Charge them fully beforehand.

Charging the earbuds

Place each earbud in the charging case in the right position and close the case.

When charging the earbuds using the charging case, the charging status indicator for the earphones (RED) is turned ON and the charging status indicator on the charging case (LED) is turned on. When the earphones are fully charged, the charging indicator for the earphones and the charging case turns OFF.

Note

- When the remaining battery becomes low, red indicator flashes every 5 seconds and "low battery" message appears. Immediately charge the battery. Otherwise, the power runs out if you keep using without charging.
- If the charging pin of the charging port in the charging case or the charging plate of the earbuds is dirty, charging may not start. In that case, clean it with dry and soft cloth or cotton swabs. If you push the charging port too hard while cleaning, the pin may be bent. Clean lightly and slowly.

Charging the Charging Case

- Charging with commercially available wireless charger

1

Connect the wireless charger to a power source.

2

Place the wireless charger on a level surface or other location recommended by the manufacturer.

3

Put the charging case vertically on the center of the wireless charger or manufacturer recommended place.

- To improve charging efficiency, put the charging case on the center of the wireless charger or the manufacturer recommended place.

Caution

- Please use the wireless charger that is compatible with Qi standard.
- The charging case does not start charging when it is lying on or putting upside down on the wireless charger.

4

The charging case starts charging a few seconds after you put it on the wireless charger. When the charging starts, the charging status indicator for the case turns on and flash during the charging.

Note

- The charging status indicator for the case (4 LEDs) shows the current battery capacity level (such as 25, 50, 75 or 100 %).
- Please refer to the instruction manual of your wireless charger for further instructions.
- Charging with the supplied USB cable

1

Insert the supplied USB cable into the Type-C USB charging socket on the charging case.

2

Connect the USB cable to a USB port of your computer or a mobile USB charger.

The charging status indicator flash during the charging.

Check the left and right, wear the ear piece in your ears.

- The one marked with "R" is for the right ear, and the one marked with "L" is for the left ear.

• After use, take them off from your ears slowly.

Caution

Pressing the earphones strongly or taking them off from your ears roughly may hurt your eardrum. Put on or take off the earphones slowly.

- If the ear pieces are not fitting properly, they may not fit clearly. To enjoy better sounds, replace the ear pieces with the size that fits your ears.
- At the time of purchase, L size pieces are mounted. If they do not fit your ears, choose the best size from the provided ear pieces and replace them.
- The sizes of the ear pieces are S, M and L (mounted at the time of factory shipment).

How to take off the ear pieces

Press the earphone with a hand and take off the ear piece with the other hand by twisting it together with its shaft.

Note

- If the ear piece is difficult to take off, wrapping it with a dry soft cloth makes it easier.

How to mount ear pieces

Push the ear piece into the protrusion of the earphone and make sure it does not come off easily.

Caution

- Mount ear pieces firmly into the product. Ear pieces might come off and be left in your ears. If the ear pieces are left in your ears, contact a doctor.

2020/11/04

2020/11/04

 
L

8:40:26


8:40:26




CAUTION



WARNING

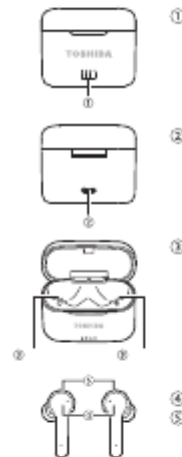 

CAUTION

 

[Next Page](#)

1

2

Related Manuals for Toshiba T750E-R

[Headphone Toshiba RZE-BT700E User Manual](#)

True wireless stereo sweat-resistant bluetooth 4.1 earphones built-in microphone

(6 pages)

[Headphone Toshiba RZE-BT1050E Instruction Manual](#)

(4 pages)

[Headphone Toshiba RZE-BT900E Operation Manual](#)

Wireless earphone (2 pages)

[Headphone Toshiba RZE-BT31E Operation Manual](#)

Wireless earphone (2 pages)

[Headphone Toshiba RZE-BT166H Operation Manual](#)

(6 pages)

[Headphone Toshiba RZE-BT700E Operation Manual](#)

Wireless earphone, bluetooth (2 pages)

[Headphone Toshiba RZE-BT900E Operation Manual](#)

Wireless earphone (4 pages)

Summary of Contents for Toshiba T750E-R

[Page 1](#) • Do not place the product either in wet, humid, dusty smoky, steamy places, near a heater, or in direct sunlight. • Toshiba shall not be responsible for any damage caused by failure to observe the information • Do not leave the product where it gets extremely hot such as in a car.

[Page 2](#) Power ON and OFF Note • Operations may vary depending on your smartphone. • To pause, press the function button of right earphone once. □ Auto Power ON/OFF • To track down, press the function button of the left earphone twice. To track up, press the The earphones are turned on automatically when you take them out from the charging case. function button of the right earphone twice. A “Power On” message is heard, and the Blue and Red indicator flash for left earphone. In • To reduce the volume, press the function button of the left earphone three times. To increase the volume, press the function button of the right earphone three times.