

Ez Mode - Asus Prime H270-PRO Manual

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19

20

21

22

23

24

25

26

27

28

29

30

31

32

33

34

35

36

37

Table Of Contents

38

--


-

[Table of Contents](#)

•

Bookmarks

--

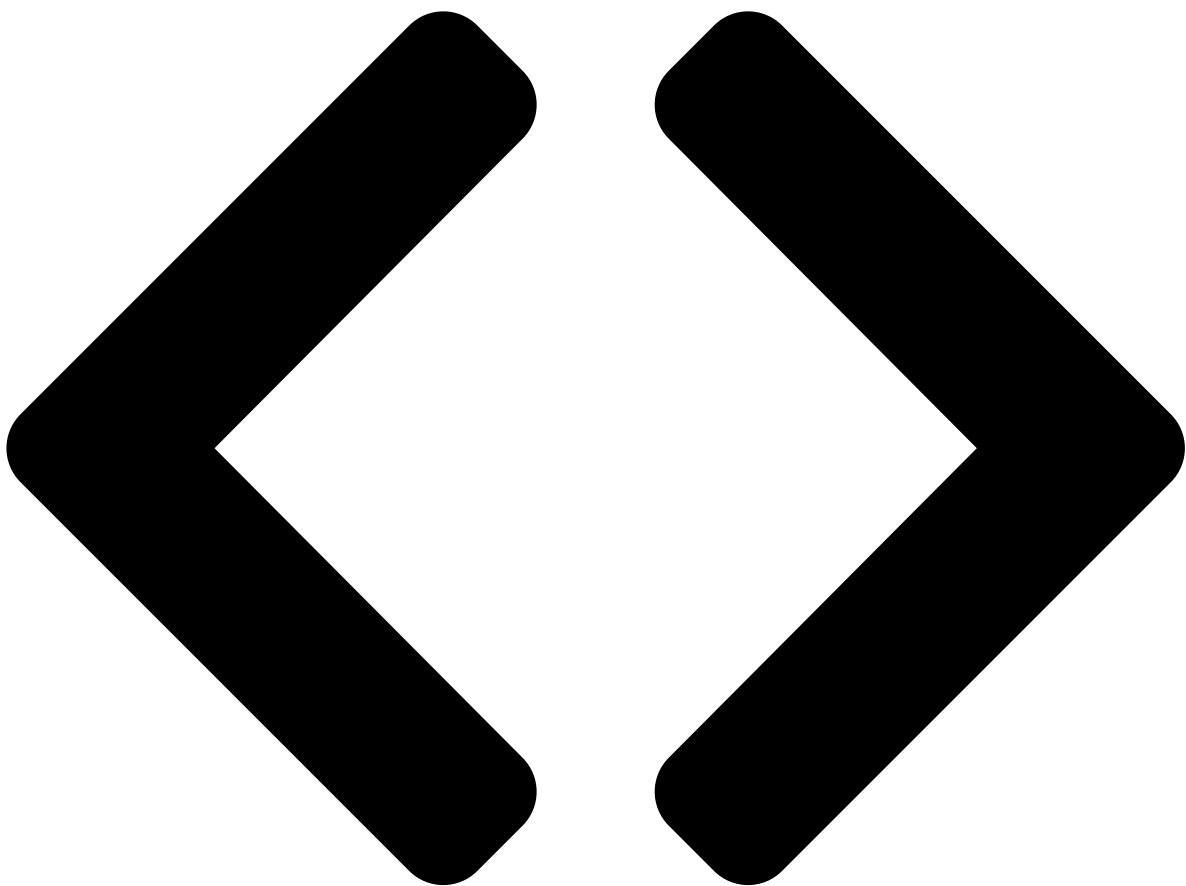

2.2.1

EZ Mode

By default, the EZ Mode screen appears when you enter the BIOS setup program.

The EZ

Mode provides you an overview of the basic system information, and allows you to select the

display language, system performance mode, fan profile and boot device priority.

To access

the Advanced Mode, click Advanced Mode(F7) or press <F7>.

The default screen for entering the BIOS setup program can be changed. Go to the Setup Mode item in the Boot menu.

Displays the CPU/motherboard temperature, CPU voltage output, CPU/chassis fan speed, and SATA information

Enables or disables the Intel Rapid Storage Technology

Displays the CPU Fan's speed.

Click the button to manually

The boot device options vary depending on the devices you installed to the system.

2-7

Selects the display language of the BIOS setup program

tune the fans

Loads optimized default settings

Displays the system properties of the selected mode. Click <Enter> to switch EZ System Tuning modes

Creates storage RAID and configures system overclocking

Shows the

bootable devices

Saves the

and resets

system

Displays

Advanced


menus

Searches

Selects the

device p

ASUS PR

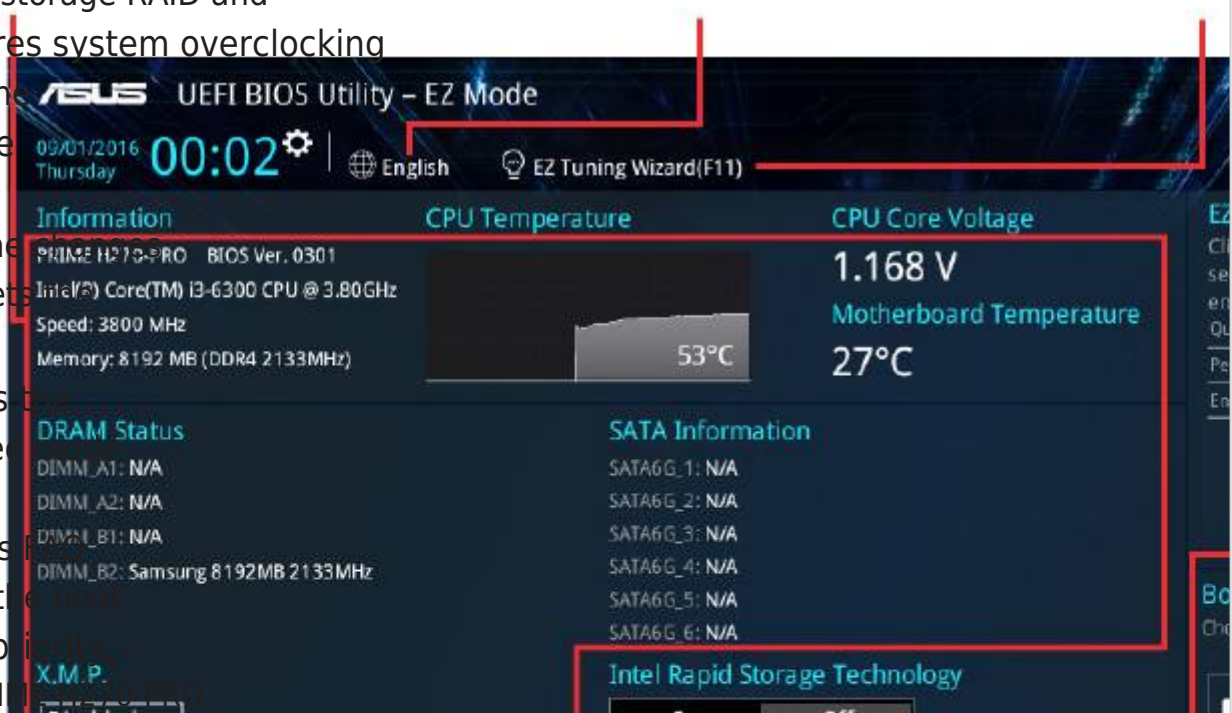

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
25
26
27
28
29
30
31
32

Quick Links:

[Motherboard Overview](#)

[Connectors/Jumpers/Slots/Led](#)

[Layout Contents](#)

[System Memory](#)

Related Manuals for Asus Prime H270-PRO

[Motherboard Asus Prime H270-Plus User Manual](#)

(36 pages)

[Motherboard Asus STRIX H270F GAMING User Manual](#)

(113 pages)

[Motherboard Asus STRIX H270F GAMING Manual](#)

(113 pages)

[Motherboard Asus STRIX H270F GAMING Quick Start Manual](#)

(2 pages)

[Motherboard Asus STRIX H270I GAMING Manual](#)

(75 pages)

[Motherboard Asus PRIME H270M-PLUS Quick Start Manual](#)

(2 pages)

[Motherboard Asus PRIME H270M-PLUS Manual](#)

(37 pages)

[Motherboard Asus H81-PLUS User Manual](#)

H81-plus user's manual (73 pages)

[Motherboard ASUS H81M-V3 User Manual](#)

(50 pages)

[Motherboard Asus Rog Strix H370-I Gaming Manual](#)

(89 pages)

[Motherboard Asus PRIME H410M-D Manual](#)

(28 pages)

[Motherboard Asus Prime H510M User Manual](#)

(34 pages)

[Motherboard Asus PRIME H310M-K Manual](#)

(27 pages)

[Motherboard Asus TUF H310M-PLUS GAMING R2.0 Manual](#)

(27 pages)

[Motherboard Asus PRIME H310M-DASH Manual](#)

(27 pages)

[Motherboard Asus PRIME H610T2-CSM D4 User Manual](#)

(33 pages)

Related Content for Asus Prime H270-PRO

[PRIME X570-PRO Ez Mode](#)

Asus PRIME X570-PRO

[STRIX Z270F GAMING Ez Mode](#)

Asus STRIX Z270F GAMING

[B450M-A/CSM Ez Mode](#)

Asus B450M-A/CSM

[MAXIMUS VII HERO Ez Mode](#)

Asus MAXIMUS VII HERO

[STRIX Z270H GAMING Ez Mode](#)

Asus STRIX Z270H GAMING

[PRIME B250M-J Ez Mode](#)

Asus PRIME B250M-J

[H110M-K X Ez Mode](#)

Asus H110M-K X

[PRIME H310M-C/PS R2.0 Ez Mode](#)

Asus PRIME H310M-C/PS R2.0