



Exit Menu; Load Optimized Defaults;  
Save Changes & Reset; Discard  
Changes And Exit - Asus Prime H270-  
PRO Manual



1  
2  
3  
4  
5  
6  
7  
8  
9  
10  
11  
12  
13  
14  
15  
16  
17  
18

19

20

21

22

23

24

25

26

27

28

29

30

31

32

33

34


35

36

37

Table Of Contents

 38



•

[Table of Contents](#)

•

## Bookmarks








## 2.3

### Exit menu

The Exit menu items allow you to load the optimal default values for the BIOS items, and save or discard your changes to the BIOS items.

Load Optimized Defaults

This option allows you to load the default values for each of the parameters on the Setup menus. When you select this option or if you press <F5>, a confirmation window

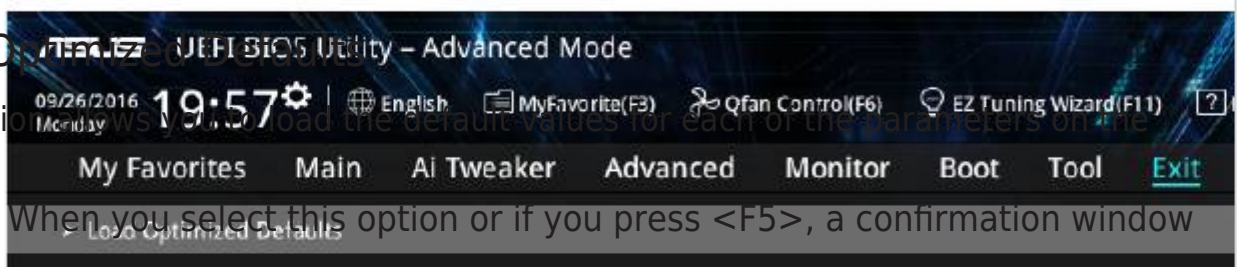

appears.

Select OK to load the default values.

### Save Changes & Reset

Once you are finished making your selections, choose this option from the Exit menu to

ensure the values you selected are saved. When you select this option or if you press <F10>,

a confirmation window appears. Select OK to save changes and exit.

### Discard Changes & Exit

This option

When you

select the

to discard

changes

### Launch EFI Shell from USB drives

This option


allows you to attempt to launch the EFI Shell application (shellx64.efi)

from one of

the available USB devices.

2-11

ASUS PRIME H270-PRO

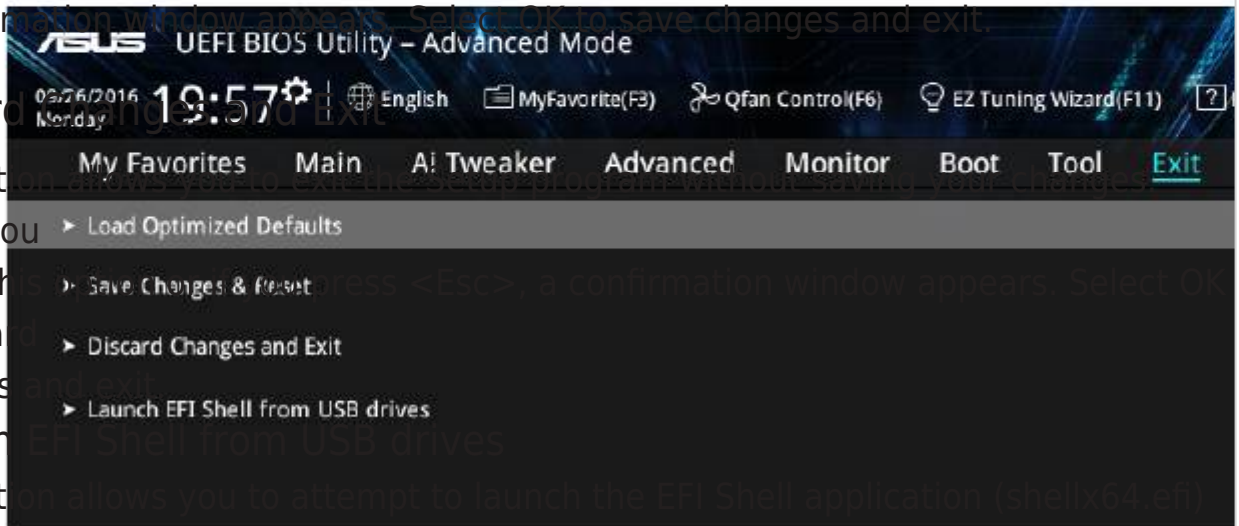

[Table of Contents](#)

[Previous Page](#)  
[Next Page](#)

1  
...  
29  
30  
31  
32  
33  
34  
35  
36

Quick Links:

[Motherboard Overview](#)

[Connectors/Jumpers/Slots/Led](#)

[Layout Contents](#)

[System Memory](#)

## Related Manuals for Asus Prime H270-PRO

[Motherboard Asus Prime H270-Plus User Manual](#)

(36 pages)

[Motherboard Asus STRIX H270F GAMING User Manual](#)

(113 pages)

[Motherboard Asus STRIX H270F GAMING Manual](#)

(113 pages)

[Motherboard Asus STRIX H270F GAMING Quick Start Manual](#)

(2 pages)

[Motherboard Asus STRIX H270I GAMING Manual](#)

(75 pages)

[Motherboard Asus PRIME H270M-PLUS Quick Start Manual](#)

(2 pages)

[Motherboard Asus PRIME H270M-PLUS Manual](#)

(37 pages)

[Motherboard Asus H81-PLUS User Manual](#)

H81-plus user's manual (73 pages)

[Motherboard ASUS H81M-V3 User Manual](#)

(50 pages)

[Motherboard Asus Rog Strix H370-I Gaming Manual](#)

(89 pages)

[Motherboard Asus PRIME H410M-D Manual](#)

(28 pages)

[Motherboard Asus Prime H510M User Manual](#)

(34 pages)

[Motherboard Asus PRIME H310M-K Manual](#)

(27 pages)

[Motherboard Asus TUF H310M-PLUS GAMING R2.0 Manual](#)

(27 pages)

[Motherboard Asus PRIME H310M-DASH Manual](#)

(27 pages)

[Motherboard Asus PRIME H610T2-CSM D4 User Manual](#)

(33 pages)

## Related Content for Asus Prime H270-PRO

[ROG RAMPAGE V EDITION 10 Exit Menu](#)

Asus ROG RAMPAGE V EDITION 10

[Q170A-IM-A Exit Menu](#)

Asus Q170A-IM-A

[Z13PE-D16 Exit Menu](#)

Asus Z13PE-D16

[WS X299 SAGE Exit Menu](#)

Asus WS X299 SAGE

[Pro A620M-C-CSM Exit Menu](#)

Asus Pro A620M-C-CSM

[PRIME H310M-A R1.0 Exit Menu](#)

Asus PRIME H310M-A R1.0

[H110M-P/DVI Exit Menu](#)

Asus H110M-P/DVI

[PRIME X570-PRO Exit Menu](#)

Asus PRIME X570-PRO