



Toshiba 13J2KCVRG-T Owner's Manual

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64

•

[Table of Contents](#)


-

Troubleshooting

•

Bookmarks

Available languages

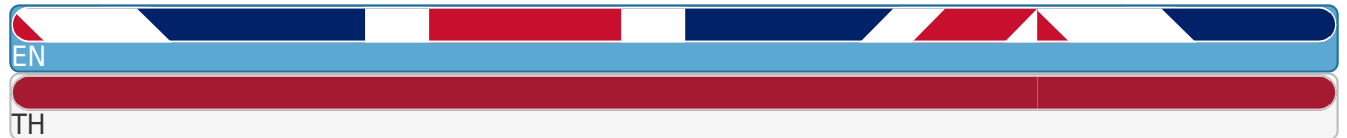

Quick Links

[Download this manual](#)



OWNER'S MANUAL



AIR CONDITIONER (SPLIT TYPE) **TOSHIBA**

For general public use

Indoor unit

RAS-10, 13J2KCVRG-T

Outdoor unit

RA\$-10, 13J2ACVRG-T

1122350201

1122350201_00_S03_182x257_64p_S_p70_190208.indd 1
2/23/2019 11:05:04 AM



[Table of Contents](#)

[Next Page](#)

- 1
- 2
- 3
- 4
- 5

Chapters

English 2

□□ 32

Related Manuals for Toshiba 13J2KCVRG-T

[Air Conditioner Toshiba RAS-10 Installation Manual](#)

(32 pages)

[Air Conditioner Toshiba 16N3KVP Series Owner's Manual](#)

(105 pages)

[Air Conditioner Toshiba RAS-B10 Series Installation Manual](#)

(68 pages)

[Air Conditioner Toshiba RAS-10 Owner's Manual](#)

(48 pages)

[Air Conditioner Toshiba RAS-10 Installation Manual](#)

(28 pages)

[Air Conditioner Toshiba RAS-B07 Installation Manual](#)

Air conditioner (split type) (20 pages)

[Air Conditioner Toshiba RAS-B10 Owner's Manual](#)

Split type; r32 or r410a inverter (20 pages)

[Split air conditioner Toshiba RAS-05 Installation Manual](#)

(16 pages)

[Air Conditioner Toshiba RAS-B10 SERIES Installation Manual](#)

(10 pages)

[Air Conditioner Toshiba RAS-10 Owner's Manual](#)

Split type (8 pages)

[Air Conditioner Toshiba RAS-B10 Owner's Manual](#)

(8 pages)

[Air Conditioner Toshiba RAS-B10 Owner's Manual](#)

Split type (6 pages)

[Air Conditioner Toshiba RAS-10 NAH Series Owner's Manual](#)

(5 pages)

[Air Conditioner Toshiba RAS-10 Series Owner's Manual](#)

Indoor and outdoor unit (5 pages)

[Air Conditioner Toshiba RAS-10 Owner's Manual](#)

(4 pages)

[Air Conditioner Toshiba RAS-10SKVP2 Series Owner's Manual](#)

Split type (3 pages)

Summary of Contents for Toshiba 13J2KCVRG-T

[Page 2: Table Of Contents](#)

CONTENTS	PRECAUTIONS FOR SAFETY	DISPLAY	
.....	REMOTE CONTROLLER PREPARATION	AUTOMATIC	
OPERATION	COOLING / FAN ONLY / DRY OPERATION	AIR
VOLUME	Hi-POWER OPERATION	ECO OPERATION
.....	PLASMA ION	COMFORT SLEEP	
.....	WEEKLY TIMER OPERATION		

[Page 3: Precautions For Safety](#)

PRECAUTIONS FOR SAFETY Read the precautions in this This appliance is filled manual carefully before operating with R32. the unit. ● Keep this manual where the operator can easily find it. ● Read the precautions in this manual carefully before operating the unit. ● This appliance is intended to be used by expert or trained users in shops, in light industry and on farms, or for commercial use by lay persons.

[Page 4](#) PRECAUTIONS FOR SAFETY (continued) ● Children should be supervised to ensure that they do not play with the appliance. ● Do not use any refrigerant different from the one specified (R32) for complement or replacement. Otherwise, abnormally high pressure may be generated in the refrigeration cycle, which may result in a failure or explosion of the product or an injury to your body.

[Page 5: Display](#)

DISPLAY Indoor unit display Temporary operation 1 Wi-Fi access (White) In case of the misplaced or discharged remote 2 ECO (White) control 3 PURE (White) Pressing the RESET button, the unit can start 4 Timer (White) or stop without using the remote control. 5 Operation mode is set on AUTOMATIC OPERATION...

[Page 6: Remote Controller Preparation](#)

REMOTE CONTROLLER PREPARATION Kind of receiving tone Remote control When the indoor unit receives a signal from the remote control, the receiving tone sounds...Operation, change ..Stop PiPi ..Notice Transmitting part PiPi When the notice sounds, it means the operating setting returns to the datum point. (Example) When temperature setting.

[Page 7](#) Remote control Insert the battery Setting the clock Remove the cover and insert Press the CLOCK button AAA alkaline dry batteries Press with tip of the pencil. Insert direction of (+) and (-) correctlyAdjust the "Day"...

[Page 8](#) Indoor unit Turn on the main power supply ● A waiting period of 3 minutes is required after the power is turned on. During this period, the operation lamp will illuminate. However, the compressor will not start. Check transmitting and receiving Point the remote control at the remote control receiving module on the indoor unit.

[Page 9: Automatic Operation](#)

AUTOMATIC OPERATION The air conditioner selects the cooling operation. When sounds, When starting automatic operation, select it notices that the operation setting returns to the datum point. Page 5 ● The air volume can be set as you prefer. TEMP. When changing the temperature, Press ●...

[Page 10: Cooling / Fan Only / Dry Operation](#)

COOLING / FAN ONLY / DRY OPERATION Temperature and air volume for the cooling operation can be set as you prefer. When sounds, it notices the operation setting returns to the datum point. Page 5 Cooling operation Dry operation Fan only operation 1122350201_00_S03_182x257_64p_S_p70_190208.indd 8 2/23/2019 11:05:07 AM...

[Page 11](#) For dehumidification, a moderate cooling performance is controlled automatically. operation TEMP. When changing the temperature, Press Down When at 24°C PiPi ● The temperature changes by 1°C when pressed. It changes continuously when pressed continuously. ● The available setting range is 17°C - 30°C. Notes ●...

[Page 12: Air Volume](#)

AIR VOLUME When sounds, Changing the air volume, press it indicates the operation setting returns to the original setting. Page 5 ● Every time... When pressed during Auto, Cooling and

Fan only. AIR FLOW DIRECTION Press : Move the louver in the desired vertical direction.

[Page 13: Hi-Power Operation](#)

Hi-POWER OPERATION To automatically control room temperature and airflow for faster cooling operation (except in DRY and FAN ONLY mode) Hi-POWER OPERATION ● Hi-POWER appears on the remote control display. 1122350201_00_S03_182x257_64p_S_p70_190208.indd 11 2/23/2019 11:05:09 AM...

[Page 14: Eco Operation](#)

ECO OPERATION While Automatic, Cooling operation is activated, automatic control room temperature to save energy, except in DRY and FAN ONLY mode. ECO OPERATION ● appears on the remote control display. ● The set temperature will be automatically adjusted appropriately. However, the temperature is raised by no more than 2 degree Celsius.

[Page 15: Plasma Ion](#)

PLASMA ION Capture efficiency of floating impurities in the air is accelerated by plasma ion contaminates such as bacteria, odor, smoke, dust and virus are caught and deactivated by Plasma Ion. To clean the air, Plasma Ion When stopping operation. ●...

[Page 16: Comfort Sleep](#)

COMFORT SLEEP The operation stops automatically at the Pre-set time. When 1, 3, 5 and 9 hours are selected, the comfort sleep operation begins. The set temperature will be automatically adjusted appropriately. However, the temperature is raised or decreased to no more than 2 degrees Celsius.

[Page 17](#) Timer on, Timer off Start and stop of operation is selected with the time. Operate after setting the current time on the remote control Page 6 For timer on For timer off Example of setting (Selection of timer On/Off) To start at 6:00 AM and stop at 10:00 AM. ●...

[Page 18: Weekly Timer Operation](#)

WEEKLY TIMER OPERATION 4 programs for each day in the week can be set in WEEKLY TIMER. The following items can be set in WEEKLY TIMER operation. a. Operation time (ON timer for Start and OFF timer for Stop operation) b.

[Page 19](#) How to set WEEKLY TIMER Press to enter WEEKLY TIMER setting. Blink Press to select desired day in sequence.

[Page 20](#) Press to select desired operation.....Press to select desired temperature.

[Page 21](#) Edit Weekly timer program To edit the program after confirming the weekly timer setting on Page 18 , follow steps - 3 below. Press ● The day of the week and the program number of the current day will be displayed..... . . Press to select the day of the week and press to select...

[Page 22](#) To delete programs The individual program Press ● The day of the week and the program number is displayed. ● Select the day to delete the program..... . . Press to select the program number to be deleted.

[Page 23: Weekly Timer Usage Example](#)

WEEKLY TIMER USAGE EXAMPLE Living room (Example#1) Wake up Return home 6:00, ON, Mode : Auto, 16:00, ON, Mode : Cool, 26°C, FAN : Low, ECO 25°C, FAN : Auto, Hi-POWER MO-FR 8:00, OFF 22:00, OFF Go out Go to bed No program set, control by user.

[Page 24](#) WEEKLY TIMER USAGE EXAMPLE (continued) Bedroom (Example#2) More power save by Speed up adjustment to Release Hi-POWER More power save by ECO function with desired desired temperature with to normal operation ECO function with temperature. Hi-POWER function. for power save. desired temperature. 2:00, ON, 21:00, ON, Mode : Cool, 22:00, ON, 2:00, ON,...

Wi-Fi () () ...

Page 37: ...

... ..

Page 38 ... CLOCK ... AAA ... (+) ... (-) ...

Page 39 ... 3 ...

Page 40: ...

... ..

Page 41: ...

... ..

Page 42 ... TEMP. ...

Page 43: ...

... ..

Page 44: ...

... ..

Page 45: ...

... ..

Page 46: ...

... ..

Page 47: ...

... 1, 3, 5 9 ... comfort sleep ...

Page 48 ...

AM...

[Page 64](#) 1122350201 1122350201_00_S03_182x257_64p_S_p70_190208.indd 32 2/23/2019
11:06:21 AM...

This manual is also suitable for:

[Ras-1013j2acvrg-t](#)