



# **TOSHIBA**

Toshiba TEC POS ST-5600 Series Owner's Manual



1

2

3

4

Table Of Contents

5

6

7

8

9

10

11

12

13

14

15

16

17

18  
19  
20  
21  
22

|  |
|--|
|  |
|--|

---

•

Table of Contents

•

## Bookmarks

[Download this manual](#)

## Quick Links





# TEC

TEC POS Terminal

## ST-5600 Series

Document No. EO1-12023A

Original

Apr.; 1997

(Revised July,1999)

# Table of Contents

Toshiba TEC Corporation

[Table of Contents](#)

[Next Page](#)

1  
2  
3  
4  
5

## Related Manuals for Toshiba TEC POS ST-5600 Series

[Touch terminals Toshiba ST-A20 SERIES Owner's Manual](#)

Pos terminal (26 pages)

[Touch terminals Toshiba ST-A10 SERIES Owner's Manual](#)

(24 pages)

[Touch terminals Toshiba 4818-T10 Service Manual](#)

(22 pages)

[Touch terminals Toshiba 4818-T10 User Manual](#)

(42 pages)

[Touch terminals Toshiba 4818-ET1 User Manual](#)

(42 pages)

[Touch terminals Toshiba ST-B10 Series Maintenance Manual](#)

(126 pages)

[Touch terminals Toshiba ST-71 SERIES Owner's Manual](#)

Pos terminal (25 pages)

[Touch terminals Toshiba ST-70 SERIES Owner's Manual](#)

Tec pos terminal (22 pages)

[Touch terminals Toshiba 4818-T10 Operating System Installation Manual](#)

(3 pages)

[Touch terminals Toshiba ST-7000-C Series Owner's Manual](#)

Pos terminal (18 pages)

[Touch terminals Toshiba TFTST-76T-5A SERIES Owner's Manual](#)

Flat display unit (24 pages)

[Touch terminals Toshiba ST-7000 Series Owner's Manual](#)

Pos terminal (16 pages)

[Touch terminals Toshiba ST-B10 SERIES Quick Installation Manual](#)

Pos terminal (6 pages)

## Summary of Contents for Toshiba TEC POS ST-5600 Series

[Page 1](#) TEC POS Terminal ST-5600 Series Document No. E01-12023A Original Apr.; 1997 (Revised July,1999) Table of Contents Toshiba TEC Corporation...

[Page 3](#) Do not attempt to effect repairs or modifications to this equipment. If a fault occurs that cannot be rectified using the procedures described in this manual, turn off the power, unplug the machine, then contact your authorized TOSHIBA TEC representative for assistance. Meanings of Each Symbol This symbol indicates warning items (including cautions).

[Page 4](#) Utilize our maintenance services. After purchasing the machines, contact your authorized TOSHIBA TEC representative for assistance once per year or so to have the inside of the machines cleaned. Otherwise, dust will build up inside the machines and may cause fire or malfunction.

### [Page 5: Table Of Contents](#)

E01-12023 ST-5600 OWNERS MANUAL TABLE OF CONTENTS Chapter Page  
INTRODUCTION.....UNPACKING ..... FEATURES OF THE ST-5600

|  |  |
|--|--|
| .....PRECAUTIONS .....                                 | .....MODEL NAME DESCRIPTION                                  |
| .....OVERVIEW.....                                     | .....FLOPPY DISK AND FLOPPY DISK DRIVE (with FDD Model)..... |
| .....UPS (Uninterruptible Power Supply) Function ..... | .....SPECIFICATIONS  |
| .....OPTION KIT.....                                   |  |

## [Page 7: Introduction](#)

Please refer to this manual whenever you have any doubts concerning the machine. This machine has been manufactured under strict quality control and should give you full satisfaction. However, if the machine is damaged during transit, or there are any unclear points in this manual, please contact your local TOSHIBA TEC representative. •...

## [Page 8: Unpacking](#)

EO1-12023 EO1-12023A EO1-12023A ST-5600 SERIES ST-5600 SERIES ST-5600 SERIES (Revision Date: 7 Jul., 1999) 2. UNPACKING Confirm that the following accessories are completely contained in the carton after opening it. If some accessory is lacking or damaged, contact the store where purchased. (2 Expansion Slots model) (4 Expansion Slots model) Part Name...

## [Page 9: Features Of The St-5600](#)

EO1-12023 EO1-12023A EO1-12023A ST-5600 SERIES ST-5600 SERIES ST-5600 SERIES (Revision Date: 7 Jul., 1999) 3. Features of the ST-5600 • Equipped with a High Speed CPU The ST-5600 is equipped with Pentium CPU (133/166 MHz) or AMD K6-2 (266 MHz) which processes data at a high speed.

## [Page 10: Precautions](#)

6. The machine must be connected to a supply of the proper rated voltage. 7. Be sure to use the equipment within the proper range of power current consumption, temperature and relative humidity. 8. Never attempt to modify the TOSHIBA TEC equipment by yourself. 5. MODEL NAME DESCRIPTION ST - 560 -...

## [Page 11: Overview](#)

EO1-12023 EO1-12023A EO1-12023A ST-5600 SERIES ST-5600 SERIES ST-5600 SERIES SVO8A3008: 25 Mar., 1998 6. OVERVIEW The ST-5600 ENGINE Box has the function for controlling all units connected to it and for calculation processing and is the core of this system. The terminal is equipped with 3.5-inch floppy disk drive (Hardware option), 3.5-inch hard disk drive (Hardware option).

[Page 12](#) EO1-12023 EO1-12023A EO1-12023A ST-5600 SERIES ST-5600 SERIES ST-5600 SERIES (Revision Date: 30 Nov., 1999) <Rear View> (2 Expansion Slots model) AC Outlet AC Inlet P24V USB 1 USB 2 SIO2 COM4(SIO1) VGA/LCD COM2 Reset Switch Mouse KB SIO1(COM4) DRW1DRW2 COM3 COM1 LPT1 ) indicate the use for the ST-5500 Compatible Mode.

[Page 13](#) EO1-12023 EO1-12023A EO1-12023A ST-5600 SERIES ST-5600 SERIES ST-5600 SERIES (Revision Date: 30 Nov., 1999) AC Outlet ..... a connector to the AC outlet, used for the CRT power supply. AC Inlet ..... a connector for the AC inlet. P24V .....a terminal of a DC24V line connected to the Receipt/Journal printer (DRJST-50/51 or TRJST-52).

## [Page 14: Floppy Disk And Floppy Disk Drive \(With Fdd Model\)](#)

EO1-12023 EO1-12023A ST-5600 SERIES ST-5600 SERIES 7. FLOPPY DISK AND FLOPPY DISK DRIVE (with FDD Model) Shutter Head Window Plastic Case Envelope Handling the Floppy Disk • Utilize the permanent label on the jacket. For future reference, write on the label the date of purchase, the floppy disk ID No. for management purpose the defective track No.

## [Page 16: Ups \(Uninterruptible Power Supply\) Function](#)

EO1-12023 EO1-12023A ST-5600 SERIES ST-5600 SERIES 8. UPS (Uninterruptible Power Supply) Function The ST-5602 has the UPS function to automatically operate from the Ni-cd battery in the event of a power failure. When a power failure has occurred, the machine automatically switches to operate from the battery. However, the CRT will not operate.

## [Page 17: Specifications](#)

EO1-12023 EO1-12023A EO1-12023A ST-5600 SERIES ST-5600 SERIES ST-5600 SERIES (Revision Date: 7 Jul., 1999) 9. SPECIFICATIONS Item Contents Pentium™ Processor Clock

133MHz or 166MHz AMD K6-2 Processor Clock 266 MHz Memory 512KB BIOS (Flash ROM) 8MB (Capacity can expanded up to 64 MB (Pentium model) or 128 MB (K6-2 model)) DRAM Type : EDO 72pin SIMM 32bit Non-parity 60ns SIMM Socket : Four sockets (Two sockets have already been used at...

[Page 18](#) EO1-12023 EO1-12023A EO1-12023A ST-5600 SERIES ST-5600 SERIES ST-5600 SERIES SVO8A3008: 25 Mar., 1998 Item Contens Output Voltage 110 - 127VAC+5%-10% 50/60 Hz 2A (AC Outlet switched, for CRT) 220 - 240VAC-10% 50/60 Hz 1A Power Consumed 180W (operating) Ambient Temperature 5 C to 35 C Relative Humidity 10% to 80% RH (non condensation)

### [Page 19: Option Kit](#)

EO1-12023 EO1-12023A EO1-12023A ST-5600 SERIES ST-5600 SERIES ST-5600 SERIES (Revision Date: 7 Jul., 1999) 10. OPTION KIT The following optional devises are available for the ST-5600 Series. <Table of the optional devises> Model Name Description FDDST-51-1-QM 2 Mode (1.44MB/720KB) 3.5-inch FDD UNIT VGAST-52-12/22-QM VGA Card to connect the CRT or the TFTST-52T.

[Page 20](#) EO1-12023 EO1-12023A EO1-12023A ST-5600 SERIES ST-5600 SERIES ST-5600 SERIES SVO8A3008: 25 Mar., 1998 KITST-56-1-QM - 15 - - 15 -...

[Page 22](#) Toshiba TEC Corporation...