



Toshiba 24WK3C63DB Quick Start Manual

1
2
3
4
5
6
7
8
9
10
11
12
Table Of Contents
13

-

[Table of Contents](#)

•

Bookmarks


--

Quick Links

- [1 Inserting the Batteries into the Remote](#)
- [2 Internet Connection](#)
- [3 Switching on the Tv](#)
- [4 First Time Installation](#)
- [5 Remote Control](#)
- [6 Feature Overview](#)

7 Specification

[Download this manual](#)

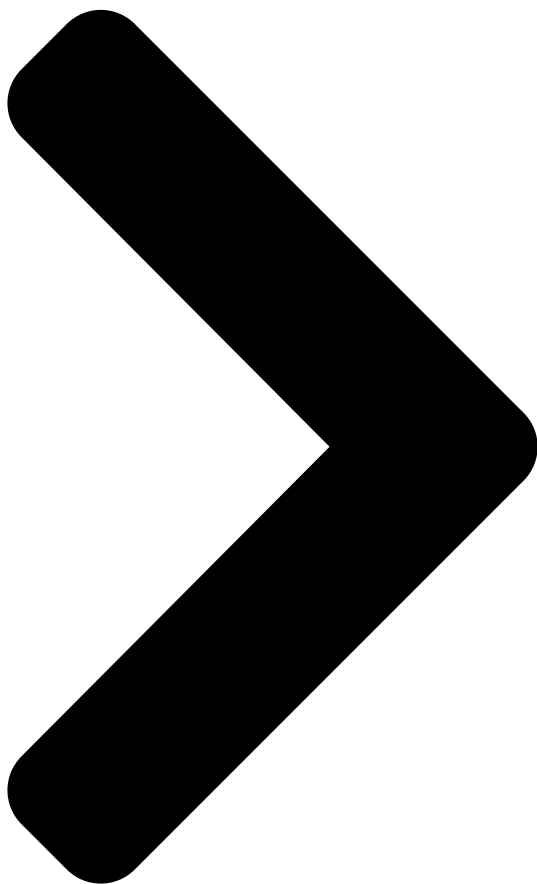

24WK3C63DB

QUICK START GUIDE

Please visit www.toshiba-tv.com to download the full user manual.

TOSHIBA



[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba 24WK3C63DB

[Smart TV Toshiba 32WK3C63DB Quick Start Manual](#)

(13 pages)

[Smart TV Toshiba 32WD2A63DB Quick Start Manual](#)

(17 pages)

[Smart TV Toshiba 46TL933F How To Upgrade The Software](#)

(4 pages)

[Smart TV Toshiba 43 UF3D Series Quick Start Manual](#)

(113 pages)

[Smart TV Toshiba 32WK3A63DB Quick Start Manual](#)

(12 pages)

[Smart TV Toshiba 24W3163DB Quick Start Manual](#)

(12 pages)

[Smart TV Toshiba 32L2163DB Quick Start Manual](#)

(12 pages)

[Smart TV Toshiba 32WL3C63DB Quick Start Manual](#)

(12 pages)

[Smart TV Toshiba 43LL3C63DB Quick Start Manual](#)

(13 pages)

Summary of Contents for Toshiba 24WK3C63DB

Page 1 24WK3C63DB QUICK START GUIDE Please visit www.toshiba-tv.com to download the full user manual.

Page 2: Inserting The Batteries Into The Remote

Building and fitting stand Inserting the batteries into the remote Remove the back cover to reveal the battery compartment. Insert two 1.5V size AAA batteries. Make sure the (+) and (-) signs match (observe correct polarity). Do not mix old and new batteries. Replace only with same or equivalent type.

Page 3: Switching On The Tv

Connections Antenna External Devices Connect the antenna cable/s to your TV. PLEASE ENSURE BOTH UNITS ARE SWITCHED OFF BEFORE CONNECTING satellite Use the proper cable to connect two units together. dish To select the desired input source, press the Source rear side of the TV button on the remote control.

Page 4: Remote Control

You can also review your TV's full user manual online or download as you like. Scan this QR code or visit <https://toshiba-tv.com> If you like to register your Toshiba TV, please visit the Toshiba support website as per link above and select "Register".

Page 5: Accessories Included

TV model. Please check the product fiche for the product specifications relating to your model For more detailed information and videos on installation, function and features of your TV, refer to the full manual on our website: <http://toshiba-tv.com> /uk-uk/support English - 4 -...

[Page 6: Safety Information](#)

- Do not place any heat sources such as electric Safety Information heaters, radiators, etc. near the TV set.
- Do not place the TV on the floor and inclined CAUTION surfaces.
- To avoid danger of suffocation, keep plastic bags RISK OF ELECTRIC SHOCK out of the reach of babies, children and domestic DO NOT OPEN...

[Page 7: Mains Supply](#)

Using the special functions to change the size of the WARNING displayed image (i.e. changing the height/width ratio) Do not ingest the battery, Chemical Burn Hazard. for the purposes of public display or commercial gain This product or the accessories supplied with the may infringe on copyright laws.

[Page 8: Wireless Lan Transmitter Specifications](#)

PlayReady technology to access PlayReady-protected Licences content and/or WMDRM-protected content. If the device fails to properly enforce restrictions on content The terms HDMI, HDMI High-Definition Multimedia usage, content owners may require Microsoft to revoke Interface, and the HDMI Logo are trademarks the device's ability to consume PlayReady-protected or registered trademarks of HDMI Licensing content.

[Page 9: Specification](#)

REACH (Registration, Evaluation, Authorisation and Restriction of Chemicals), entered into force on 1 June 2007. Toshiba will meet all REACH requirements and is committed to provide our customers with information about the presence in our articles of substances included on the candidate list according to REACH regulation.

[Page 10](#) Find out all you need to know about the latest, trend-setting TV technology on our website. www.toshiba-tv.com You can download the full manual, watch support videos, learn latest FAQs, stick your head into the forum, or register your TV in the support section.

[Page 11](#) Product Fiche Commercial Brand: TOSHIBA Model No. 24WK3C63DB Energy efficiency class Visible screen size 24 inches 60 cm (diagonal,approx.) (inch/cm) On mode average power 19.0 W consumption (Watt) Annual energy consumption 27.0 kWh (kWh/annum)(*) Standby power consumption 0.50 W (Watt)