

TOSHIBA

Toshiba RAS-07E2KVSG-A Owner's Manual

Inverter, for general public use

1
2
3
4
5
6
7
8
9
10
11
12

--

•

Bookmarks

[Download this manual](#)

Quick Links



R32

OWNERS MANUAL
TOSHIBA

AIR CONDITIONER (SPLIT TYPE)

For general public use

Indoor unit

RAS-07, 10, 13, 16E2KVSG-A

Outdoor unit



RAS-07, 10, 13, 16E2AVSG-A

1122350219

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba RAS-07E2KVSG-A

[Air Conditioner Toshiba RAS-07EK Service Manual](#)

Split wall type air-conditioner (49 pages)

[Air Conditioner Toshiba RAS-07EKH Service Manual](#)

Split wall type (48 pages)

[Air Conditioner Toshiba RAS-07EKV-EE Service Manual](#)

Indoor unit outdoor unit (100 pages)

[Air Conditioner Toshiba RAS-24E2KVG-E Owner's Manual](#)

Inverter r32 or r410a, for general public use, indoor/outdoor unit (7 pages)

[Air Conditioner Toshiba RAS-B05E2KVG-E Service Manual](#)

(141 pages)

[Air Conditioner Toshiba RAS-18E2KVG-E Installation Manual](#)

(21 pages)

[Air Conditioner Toshiba RAS-07E2KV2G-A Owner's Manual](#)

Air conditioner (split type) for general public use (8 pages)

[Air Conditioner Toshiba RAS-05E2KVG-TR Installation Manual](#)

(40 pages)

[Air Conditioner Toshiba RAS-24E2AVG-TR Owner's Manual](#)

(12 pages)

[Air Conditioner Toshiba RAS-07EKV Instruction Manual](#)

(6 pages)

[Air Conditioner Toshiba RAS-07UKP-ES Owner's Manual](#)

Air conditioner (split type) (32 pages)

[Air Conditioner Toshiba RAS-07UKHP-E Owner's Manual](#)

Air conditioner (split type) indoor unit and outdoor unit (28 pages)

[Air Conditioner Toshiba RAS-07BKVG-E Service Manual](#)

Split type (126 pages)

[Air Conditioner Toshiba RAS-05BKVG-E Owner's Manual](#)

R32 inverter, for general public use (16 pages)

[Air Conditioner Toshiba RAS-B07J2KVSG-E Service Manual](#)

Split type (139 pages)

[Air Conditioner Toshiba RAS-B05J2KVG-E Service Manual](#)

(138 pages)

Summary of Contents for Toshiba RAS-07E2KVSG-A

[Page 1](#) OWNER'S MANUAL AIR CONDITIONER (SPLIT TYPE) For general public use Indoor unit RAS-07, 10, 13, 16E2KVSG-A Outdoor unit RAS-07, 10, 13, 16E2AVSG-A 1122350219...

[Page 2: Precautions For Safety](#)

PRECAUTIONS FOR SAFETY Read the precautions in this manual carefully before This appliance is filled with R32. operating the unit. Warning indications on the air conditioner unit ■ Warning indication Description CAUTION CAUTION BURST HAZARD BURST HAZARD Open the service valves before the operation, Open the service valves otherwise there might be the burst.

[Page 3](#) PRECAUTIONS FOR SAFETY ● This appliance is not intended for use by person

(including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. ●...

[Page 4](#) INDOOR UNIT DISPLAY COOLING / HEATING / FAN ONLY OPERATION 1 ECO (White) 1. Press : Select Cool , Heat or Fan only 2 Wi-Fi access (White) w PURE (White) 2. Press : Set the desired temperature. Min. 17°C, Max. 30°C. 4 Timer (White) Fan Only: No temperature indication 5 Operation mode...

[Page 5](#) POWER-SELECTION AND SILENT PLASMA ION OPERATION (OUTDOOR UNIT) Capture efficiency of floating impurities in the air is accelerated by plasma ion contaminates such as bacteria, odor, smoke, dust and virus are caught and deactivated by Plasma Ion. Power-Selection (1.

[Page 6: Maintenance](#)

REMOTE CONTROL A-B SELECTION DISPLAY LAMP BRIGHTNESS ADJUSTMENT To separate using of remote control for each indoor unit in case of 2 air To decrease the display lamp brightness or turn it off. conditioners are installed nearby. 1. Press and hold for 3 seconds until brightness level (Remote Control B Setup.

[Page 7: Weekly Timer Operation](#)

*Point remote control at air conditioner receiving module WEEKLY TIMER OPERATION then, press SET button until you hear the “PiPi” sound. This means the setting operation has been completed. As the air conditioner is receiving the signal, you will hear separate How to set WEEKLY TIMER “Pi”...

[Page 8](#) MEMO...

[Page 9](#) MEMO...

[Page 10](#) MEMO...

[Page 12](#) 1122350219...

This manual is also suitable for:

[Ras-10e2kvsg-aRas-13e2kvsg-aRas-16e2kvsg-aRas-07e2avsg-aRas-10e2avsg-aRas-13e2avsg-a](#) ... [Show all](#)