# Installation Instructions - Sanyo SPW-XR253GH56 Technical Data & Service Manual

68	
69	
70	
71	
72	
73	
74	
75	
76	
77	
78	
79	
80	
81	
82	
83	
84	
85	
86	
87	
88	
89	
90	
91	
92	
93	
94	
95	
96	
90 97	
97 98	
90 99	
99 100	
101	
102	
103	
104	
105	
106	
107	
108	
109	
110	
111	
112	
113	
114	
115	
116	
117	

118 119	
120	
121 122	
123	
124	
125	
126 127	
127	
129	
130	
131 132	
132	
134	
135	
136	
137 138	
139	
140	
141	
142 143	
143	
145	
146	
147 148	
148 149	
150	
151	
152 153	
155	
155	
156	
157 158	
158	
160	
161	
162 163	
163	
165	
166	
167	

168 169	
170	
171	
172	
173	
174	
175	
176	
177 178	
178	
180	
181	
182	
183	
184	
185	
186	
187	
188 189	
109	
190	
192	
193	
194	
195	
196	
197	
198	
199 200	
200	
201	
202	
204	
205	
206	
207	
208	
209	
210	
211 212	
212	
213	
215	
216	
217	

218			
219			
220			
221			
222			
223			
(			

Table of Contents

•

Troubleshooting

•

Bookmarks

•



## 1-11 Installation Instructions

#### Selecting the Installation Site

Indoor Unit

 
AVOID:

areas where leakage of flammable gas may be expected.

places where large amounts of oil mist exist. direct sunlight\_\_\_\_\_

locations where nearby heat sources may affect performance of the unit.

locations where nearby external air may enter the room directly. This may cause "sweating" on the air discharge ports, causing them to spray or drip. locations where the remote controller will be



splashed with water or affected by dampness or humidity. installing the remote controller behind curtains or furniture.

DO:

select an appropriate position from which every corner of the room can be uniformly cooled. select a location where the ceiling is strong enough to support the weight of the unit. select a location where tubing and drain pipe

have the shortest run to the outside. allow room for peration and maintenance as well as unrestricted air flow around the unit. install the unit within the maximum elevation difference (H) above or below the outdoor unit

and within a total tubing length (L) from the outdoor unit as detailed in Table 1-1. allow room for mounting the remote controller about 1 m off the floor, in an area that is not in direct sunlight nor in the flow of cool air from the indoor unit.


#### NOTE

Air delivery will be degraded if the distance from the floor to the ceiling is greater than 3 m.



The rear of the in**c**or unit can be installed flush against the wall. Air

discharge 30 cm min. 2-Way, 4-Way Semi-Concealed Type 1-Way Semi-Concealed Type Obstacle Air discharge 5 cm min. Wall-Mounted Type 15 cm min

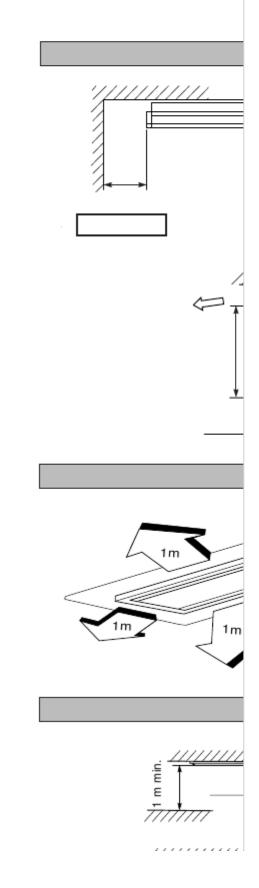

#### I - 100 1. Specifications Ceiling Wall 25 cm min. Front view Air intake Side view 0020\_T\_I Ceiling 5 cm min. Wall Air Wall intake 0022\_AS\_I 15 cm min. 15 cm min 0023\_K\_I Front View SM830080 Table of Contents

Previous Page Next Page

1
104
105
106
107

Quick Links: Specifications Unit Specifications (A) Indoor Units (B) Outdoor Units

## Troubleshooting

**Troubleshooting 168** 

General Troubleshooting Flow Chart: Diagnosis and Remedy 171

Related Manuals for Sanyo SPW-XR253GH56

<u>Air Conditioner Sanyo SPW-X253GH56 Service Manual</u> Split system (105 pages) Air Conditioner Sanyo SPW-X483GH56 Installation Instruction Eco multi system air conditioner (91 pages) Air Conditioner Sanyo SPW-C256VH Technical Data & Service Manual 4-way air discharge semi-concealed wall-mounted ceiling-mounted concealed-duct (517 pages) Air Conditioner Sanyo Big PACi 18 Series Technical Data & Service Manual Big pack i dc inverter (275 pages) Air Conditioner Sanyo SPW-X253G56 Service Manual Split system (72 pages) Air Conditioner Sanyo 2-WAY ECO-i SPW-C0705DXHN8 Service Manual Multi system (143 pages) Air Conditioner Sanyo SPW-XR254EH56 Installation And Operation Manual Dc inverter air conditioner (40 pages) Air Conditioner Sanyo Mini ECO-i SPW-ASR74GXH56(A/B) Installation **Instructions Manual** System air conditioner (49 pages) Air Conditioner Sanyo SPW-UMR74EXH56 Technical Data & Service Manual Split system air conditioner (38 pages) Air Conditioner Sanyo ECO G SGP-EGW190M2G2W Brochure & Specs Gas driven vrf m series (9 pages) Air Conditioner Sanyo SPW-C1155DXHN8 Technical Data & Service Manual 2-way eco-i multi system (242 pages) Air Conditioner Sanyo MINI ECO-i SPW-CR365GXH56B Service Manual (252 pages) Air Conditioner Sanyo SPW-FTR124EH56 Installation And Operation **Manual** Dc inverter air conditioner for refrigerant r410a (32 pages) Air Conditioner Sanyo SPW-CR365GXH56 Technical Data Manual Mini eco-i system (346 pages) Air Conditioner Sanyo SPW-C0705DZH8 Technical Data Manual 3-way eco-i multi system 5 series (703 pages) Air Conditioner Sanyo SPW-CR1503GDYH8 Technical Data & Service Manual W-eco multi system series (377 pages)

### Related Content for Sanyo SPW-XR253GH56

ECO-i AHX0752 Installation Instructions Sanyo ECO-i AHX0752 SAP-CMRV3143GJH Installation Instructions Sanyo SAP-CMRV3143GJH SAP-KM97GHS5A Installation Instructions Sanyo SAP-KM97GHS5A SAP-K91AA Installation Instructions Sanyo SAP-K91AA SAP-K92A Installation Instructions Sanyo SAP-K92A SAP-K91AA-S Installation Instructions Sanyo SAP-K91AA-S SAP-K302A Installation Instructions Sanyo SAP-K302A SAP-K77GHAX Installation Instructions Sanyo SAP-K77GHAX

## This manual is also suitable for:

Spw-xr363gh56Spw-xr483gh56Spw-tr253gh56Spw-tr363gh56Spw-tr483gh56Spw-ur253ghn56 ... Show all