

Cold Draft Prevention (Heating Cycle) - Sanyo SPW-XR253GH56 Technical Data & Service Manual

1

2

Table Of Contents

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

 
18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217

218
219
220
221
222
223



•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks



2-2 Cold Draft Prevention (Heating Cycle)

The cold draft prevention function controls indoor fan speed so a strong draft of cold air will not blow out before the indoor heat exchange coils have warmed up.

STANDBY shows on the remote controller when the indoor fan speed is LL (very low) or OFF. This condition occurs in the following 3 cases:

- During Thermo OFF (refer to 2-1 B). Room Temperature Control, Heating)
- During the defrosting operation (refer to 2-10 Defrosting Control, Heating)
- Until either the coil temperature E2 reaches 27°C or when a maximum of 6 minutes has past.

The indoor fan motor operates in L instead of LL for 3 seconds as it starts to give the fan an initial boost.

INDOOR UNIT

1

1 2

SET

FAN

SPEED

"STANDBY"

INDICATOR

The main idea of this chart is to show that the indoor fan speed increases and gets closer to the set fan speed as the coil temperature E2 rises.

The indoor unit's coil temperature is taken from sensor E2 located in the middle of the indoor heat exchange coil.

The dotted line shows that the indoor fan motor is OFF. When the temperature at sensor E2 falls below 10°C, the indoor fan motor stops running.

33

MAX. 6 MINUTES

31

E2 (°C)

27

25

10

AUTO OR H

LL

LL/OFF

M

LL

LL/OFF

L

LL

LL/OFF

"STANDBY" APPEARS

LL= Very low speed

L= Low speed

Chart Summary and Explanations

2. Processes and functions

LL



M= Medium speed

H= High speed

II - 4


H

M

L

0673_X_5

Fig. 3

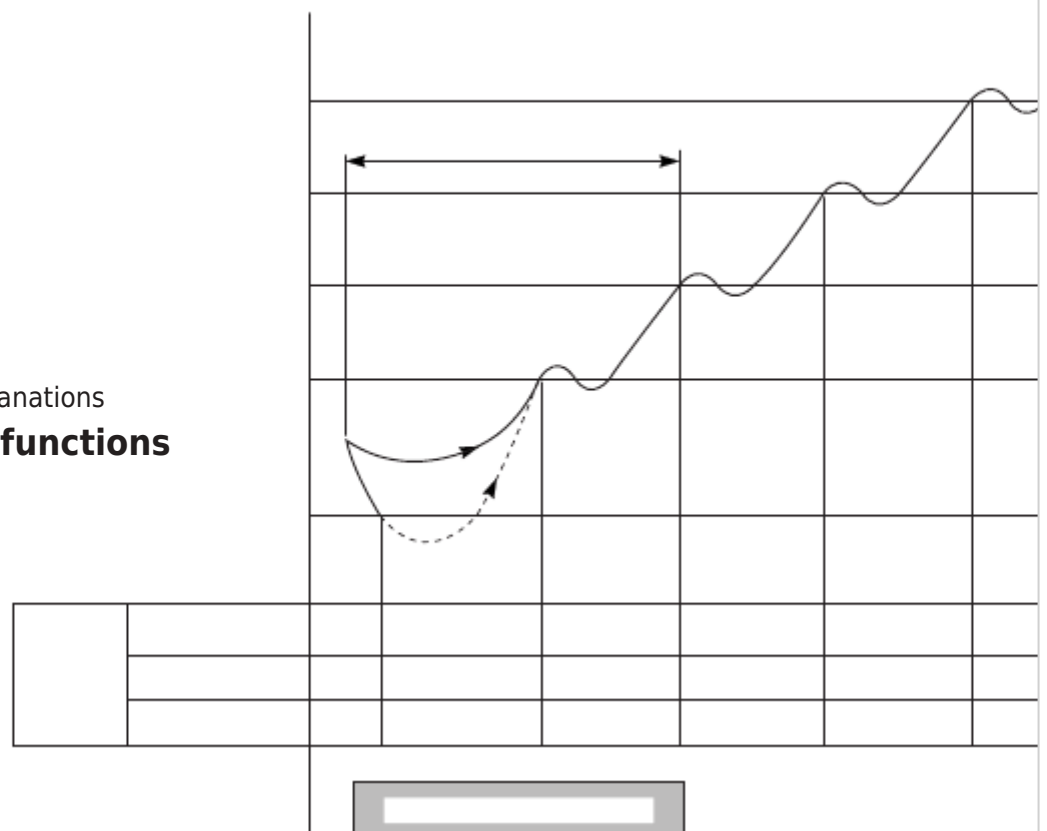

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
130
131
132
133

Quick Links:

[Specifications](#)

[Unit Specifications](#)

[\(A\) Indoor Units](#)

[\(B\) Outdoor Units](#)

Troubleshooting

[Troubleshooting](#) 168

[General Troubleshooting Flow Chart: Diagnosis and Remedy](#) 171

Related Manuals for Sanyo SPW-XR253GH56

[Air Conditioner Sanyo SPW-X253GH56 Service Manual](#)

Split system (105 pages)

[Air Conditioner Sanyo SPW-X483GH56 Installation Instruction](#)

Eco multi system air conditioner (91 pages)

[Air Conditioner Sanyo SPW-C256VH Technical Data & Service Manual](#)

4-way air discharge semi-concealed wall-mounted ceiling-mounted concealed-duct (517 pages)

[Air Conditioner Sanyo Big PACi 18 Series Technical Data & Service Manual](#)

Big pack i dc inverter (275 pages)

[Air Conditioner Sanyo SPW-X253G56 Service Manual](#)

Split system (72 pages)

[Air Conditioner Sanyo 2-WAY ECO-i SPW-C0705DXHN8 Service Manual](#)

Multi system (143 pages)

[Air Conditioner Sanyo SPW-XR254EH56 Installation And Operation Manual](#)

Dc inverter air conditioner (40 pages)

[Air Conditioner Sanyo Mini ECO-i SPW-ASR74GXH56\(A/B\) Installation Instructions Manual](#)

System air conditioner (49 pages)

[Air Conditioner Sanyo SPW-UMR74EXH56 Technical Data & Service Manual](#)

Split system air conditioner (38 pages)

[Air Conditioner Sanyo ECO G SGP-EGW190M2G2W Brochure & Specs](#)

Gas driven vrf m series (9 pages)

[Air Conditioner Sanyo SPW-C1155DXHN8 Technical Data & Service Manual](#)

2-way eco-i multi system (242 pages)

[Air Conditioner Sanyo MINI ECO-i SPW-CR365GXH56B Service Manual](#)

(252 pages)

[Air Conditioner Sanyo SPW-FTR124EH56 Installation And Operation Manual](#)

Dc inverter air conditioner for refrigerant r410a (32 pages)

[Air Conditioner Sanyo SPW-CR365GXH56 Technical Data Manual](#)

Mini eco-i system (346 pages)

[Air Conditioner Sanyo SPW-C0705DZH8 Technical Data Manual](#)

3-way eco-i multi system 5 series (703 pages)

[Air Conditioner Sanyo SPW-CR1503GDYH8 Technical Data & Service Manual](#)

W-eco multi system series (377 pages)

Related Content for Sanyo SPW-XR253GH56

[SAP- FR99EH Cold Draft Prevention \(Heating\)](#)

Sanyo SAP- FR99EH

[CH0951 Cold Draft Prevention \(Heating\)](#)

Sanyo CH0951

[SAP-K181GJH Cold Draft Prevention](#)

Sanyo SAP-K181GJH

[SAP-K71GH Cold Draft Prevention](#)

Sanyo SAP-K71GH

[SAP-K71GJHA Cold Draft Prevention](#)

Sanyo SAP-K71GJHA

[SAP-C302AH-S Cold Draft Prevention](#)

Sanyo SAP-C302AH-S

[SAP-KM97GHS5A 10-5.Cold Draft Prevention](#)

Sanyo SAP-KM97GHS5A

[C4272R Cold Draft Prevention \(Heating Cycle\)](#)

Sanyo C4272R

This manual is also suitable for:

[Spw-xr363gh56Spw-xr483gh56Spw-tr253gh56Spw-tr363gh56Spw-tr483gh56Spw-ur253ghn56](#) ... [Show all](#)