

Outdoor Unit (Electric Wiring
Diagram, Schematic Diagram);
Service Procedures; Checking The
Electrical Components; Measurement
Of Insulation Resistance - Sanyo
SPW-XR253GH56 Technical Data &
Service Manual

1

2

Table Of Contents

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

 
18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217

218
219
220
221
222
223



•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks



4-2 Checking the Electrical Components

4. 9

(1)

Measurement of Insulation

Resistance

• The insulation is in good condition if the resistance exceeds 1 MΩ.

1

(1) Measurement of Insulation Resistance

Power Supply Wires

Clamp the earthed wire of the Power Supply

wires with a lead clip of the insulation resistance tester and measure the resistance by

placing a probe on either of the power wires.

© 2011 Pearson Education, Inc. All rights reserved.

(Fig. 25)

Then measure the resistance between the earthed wire and the other power wire. (Fig. 25)

2

Indoor Unit

4-2 Checking the Electrical Components

Clamp an aluminum plate fin or copper tube with the lead clip of the insulation resistance tester and measure the resistance by placing a probe on high voltage terminal on the

(1) Measurement of Insulation Resistance

1

terminal plate (Fig. 26)

See Fig. 22.

3

(1) Power Supply Wires

Outdoor Unit (SPW-CR253GHL5)

Clamp the earthed wire of the Power Supply wires with a lead clip of the insulation resistance tester and measure the resistance by placing a probe on either of the power wires. (Fig. 25)

(Fig. 26)

See Fig. 22.

3

(2) Indoor Unit

Outdoor Unit (SPW-CR253GHL8,

SPW-CR363GHL8, SPW-CR483GHL8)

Clamp a metallic part of the unit with the lead clip of the insulation resistance tester and measure the resistance by placing a probe on high voltage terminal on the terminal plate (Fig. 26)

4

See Fig. 22.

5 and then 6, and then 7 on the 8P terminal plate. (Fig. 26)

(3) Outdoor Unit (SPW-CR253GHL5)

See Fig. 23.

5

Clip
Probe
Clip
Copper tube or metallic part



Clamp a metallic part of the unit with the lead clip of the insulation resistance tester and measure the resistance by placing a probe on

(1) and then (2) on the 8 or 6P terminal plate. (Fig. 26)

(Fig. 26)

See Fig. 22.

(3) Outdoor Unit (SPW-CR253GHL8, SPW-CR363GHL8, SPW-CR483GHL8)

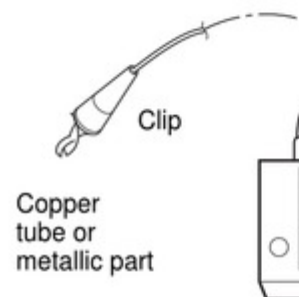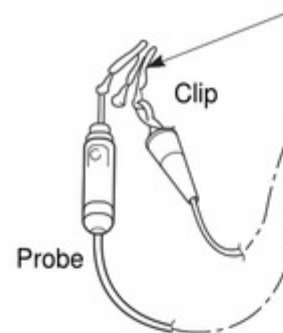

4. Service procedures

Earthed wire
Insulation
tester

4. 9

Fig. 25

Terminal plate
Probe
Insulation
tester

4-2 Checking the Electrical Components

(1) Measurement of Insulation Resistance

Fig. 26
SM830080

[Table of Contents](#)

1

...

201

202

203

204

Quick Links:

[Specifications](#)

[Unit Specifications](#)

[\(A\) Indoor Units](#)

[\(B\) Outdoor Units](#)

Troubleshooting

[Troubleshooting](#) 168

[General Troubleshooting Flow Chart: Diagnosis and Remedy](#) 171

Related Manuals for Sanyo SPW-XR253GH56

[Air Conditioner Sanyo SPW-X253GH56 Service Manual](#)

Split system (105 pages)

[Air Conditioner Sanyo SPW-X483GH56 Installation Instruction](#)

Eco multi system air conditioner (91 pages)

[Air Conditioner Sanyo SPW-C256VH Technical Data & Service Manual](#)

4-way air discharge semi-concealed wall-mounted ceiling-mounted concealed-duct (517 pages)

[Air Conditioner Sanyo Big PACi 18 Series Technical Data & Service Manual](#)

Big pack i dc inverter (275 pages)

[Air Conditioner Sanyo SPW-X253G56 Service Manual](#)

Split system (72 pages)

[Air Conditioner Sanyo 2-WAY ECO-i SPW-C0705DXHN8 Service Manual](#)

Multi system (143 pages)

[Air Conditioner Sanyo SPW-XR254EH56 Installation And Operation Manual](#)

Dc inverter air conditioner (40 pages)

[Air Conditioner Sanyo Mini ECO-i SPW-ASR74GXH56\(A/B\) Installation Instructions Manual](#)

System air conditioner (49 pages)

[Air Conditioner Sanyo SPW-UMR74EXH56 Technical Data & Service Manual](#)

Split system air conditioner (38 pages)

[Air Conditioner Sanyo ECO G SGP-EGW190M2G2W Brochure & Specs](#)

Gas driven vrf m series (9 pages)

[Air Conditioner Sanyo SPW-C1155DXHN8 Technical Data & Service Manual](#)

2-way eco-i multi system (242 pages)

[Air Conditioner Sanyo MINI ECO-i SPW-CR365GXH56B Service Manual](#)

(252 pages)

[Air Conditioner Sanyo SPW-FTR124EH56 Installation And Operation Manual](#)

Dc inverter air conditioner for refrigerant r410a (32 pages)

[Air Conditioner Sanyo SPW-CR365GXH56 Technical Data Manual](#)

Mini eco-i system (346 pages)

[Air Conditioner Sanyo SPW-C0705DZH8 Technical Data Manual](#)

3-way eco-i multi system 5 series (703 pages)

[Air Conditioner Sanyo SPW-CR1503GDYH8 Technical Data & Service Manual](#)

W-eco multi system series (377 pages)

Related Content for Sanyo SPW-XR253GH56

[SA-99G Electric Wiring Diagram](#)

Sanyo SA-99G

[SAP-K71GH Electric Wiring Diagram](#)

Sanyo SAP-K71GH

[SA-58S5 Electric Wiring Diagram](#)

Sanyo SA-58S5

[SAP-K71GJHA Electric Wiring Diagram](#)

Sanyo SAP-K71GJHA

[SAP-C302AH-S Electric Wiring Diagram](#)

Sanyo SAP-C302AH-S

[SA-79G Electric Wiring Diagram](#)

Sanyo SA-79G

[SPW-C256VH Outdoor Units \(Electric Wiring Diagram, Schematic Diagram\)](#)

Sanyo SPW-C256VH

[SPW-CR365GXH56 Wiring System Diagram \(For Single-Phase Outdoor Unit\)](#)

Sanyo SPW-CR365GXH56

This manual is also suitable for:

[Spw-xr363gh56Spw-xr483gh56Spw-tr253gh56Spw-tr363gh56Spw-tr483gh56Spw-ur253ghn56](#) ... [Show all](#)