



# Lock (Parental Control); Rating; Password (Security Code); Area Code - Toshiba SD-V383SC Owner's Manual

Dvd video player & video cassette recorder



1

2

3

Table Of Contents

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42

|  |
|--|
|  |
|--|

---

•

[Table of Contents](#)

- 

Troubleshooting

•

## Bookmarks







## Initial Settings - DVD (Continued)

### LOCK (Parental Control)


#### Rating

##### DVD

Some movies contain scenes that may not be suitable for children to view. Many of these discs contain parental control information that applies to the complete disc or to certain scenes on the disc. Movies and scenes are rated from 1 to 5. DVD video discs may or may not be locked to the parental control setting if the Area Code of the disc is set wrongly. Some discs offer more suitable scenes as an alternative. Ratings are area dependent. The parental control feature allows you to block access

## Initial Settings - DVD (Continued)

### LOCK (Parental Control)

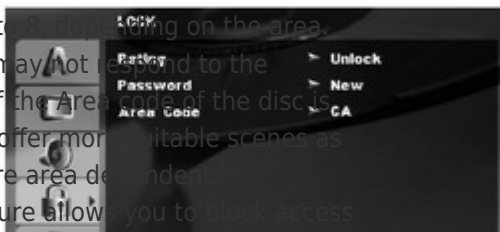

### Password (Security Code)

You can enter or change password.

1. Select "Password" on the menu.
2. Follow step 2 as shown below. To change the password, press ENTER and input the new password. Press ENTER. Input it again to verify.


to scenes below the rating you input, thereby preventing your children from being able to view material you believe is unsuitable.

1. Select "Rating" on the LOCK menu then press B.
2. To access the Rating, Password and Area Code features, you must input the 4-digit security code you created.

## Initial Settings - DVD (Continued)

If you have not yet entered a security code you are prompted to do so. Input a 4-digit code and press ENTER. Enter it again and press ENTER to verify. If you make a mistake before pressing ENTER, press CLEAR.

3. Select a rating from 1 to 8 using the ▲ / ▼ buttons.
- 1-8: Rating one (1) has the most restrictions and rating eight (8) has the least restrictive.**
- Unlock : If you select unlock, parental control is not active and the disc plays in full.**
4. Press ENTER to confirm your rating selection, then press SETUP to exit the menu.
  5. Press OPEN/CLOSE (

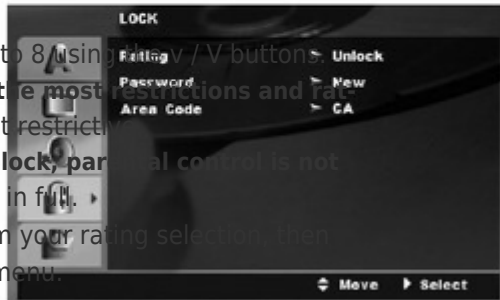

### Rating DVD

Note:

Some DVD video discs contain scenes that may not be suitable for children under 18. Many of these discs contain parental control information that applies to the complete disc or to certain scenes on the disc. Movies and scenes are rated from 1 to 8, depending on the area.

DVD video discs may or may not respond to the parental control setting if the Area code of the disc is set wrongly. Some discs offer more suitable scenes as an alternative. Ratings are area dependent.

### Password (Security Code)

The parental control feature allows you to block access to scenes below the rating you input, thereby preventing your children from being able to view material you believe is unsuitable.

1. Select "Password" on the LOCK menu then press B.
  2. Follow step 2 as shown left column (Rating).
- To change the password, select the "Change", press ENTER and input the new 4-digit code then press

ENTER. Input it again to verify.

3. Press SETUP to exit the menu.

If you forget your security code you can clear it using the following steps:

1. Press SETUP to display the Setup menu.
2. Input the 6-digit number "210499" and the security code is cleared.
3. Enter a new code as described above.

### Area Code

DVD

Enter the Area Code whose standards were used to rate the DVD video disc, based on the list in the reference chapter (see page 37).

1. Select "Area Code" on the LOCK menu then press B.

### Password (Security Code)

You can enter or change pas

1. Select "Password" on the
2. Follow step 2 as shown le  
To change the password,  
ENTER and input the new  
ENTER. Input it again to v
3. Press SETUP to exit the r

If you forget your Security

If you forget your security  
using the following ste

1. Press SETUP to displ
2. Input the 6-digit numb  
and the security code
3. Enter a new code as c

### Area Code DVD

Enter the Area Code whose :  
rate the DVD video disc, bas  
reference chapter (see page

1. Select "Area Code" on th  
▶.
2. Follow step 2 as shown l
3. Select the first character
4. Press ▶ and select the se  
▲ / ▼ buttons.
5. Press ENTER to confirm  
selection.

2. Follow step 2 as shown left (Rating).
3. Select the first character using v / V buttons.
4. Press B and select the second character using v / V buttons.
5. Press ENTER to confirm your area code selection.

[Table of Contents](#)

[Previous Page](#)  
[Next Page](#)

1  
...  
17  
18  
19  
20  
21  
22  
23  
24

Quick Links:

[Remote Control](#)

[Basic Tv Connections](#)

[Copying from DVD to Vcr](#)

## Related Products for Toshiba SD-V383SC

[Toshiba SD-V395](#)

[Toshiba SD-V392 - DVD/VCR Combo](#)

[Toshiba SD-V390](#)

[Toshiba SD-V393](#)

[Toshiba SD-V396](#)

[Toshiba SD-V393SU2](#)

[Toshiba SDV398](#)

[Toshiba SD-V395KC](#)

[Toshiba SD-V392SU](#)

[Toshiba SD V394 - DVD/VCR Combo](#)

[Toshiba SD-V330SC2](#)

[Toshiba SD-V330SC](#)

[Toshiba SDV391c](#)

[Toshiba SDV391U](#)

[Toshiba SD-V394SC](#)

[Toshiba SD-V340SC](#)