



# Vcr Tape Recording; Basic Instructions; Timer Recording - Toshiba SD-V383SC Owner's Manual

Dvd video player & video cassette recorder



1  
2  
3  
4  
5  
6  
7  
8  
9  
10  
11  
12  
13  
14  
15  
16  
17

Table Of Contents

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42

--

---

•

[Table of Contents](#)

•

Troubleshooting

•

## Bookmarks







## Operation with tape (Continued)

### VCR Tape Recording

#### Basic Instructions

1. Turn on the DVD+VCR and TV.
2. Tune the TV to the DVD+VCR output channel (CH 3 or 4) or if a direct VIDEO/AUDIO connection is made between the DVD+VCR and the TV, set the TV's source selector to VIDEO.
3. Insert a video cassette with the safety tab intact.
4. Select the desired channel using CH/TRK (V/A).
5. If you are recording from another source via audio/video input jacks (at the rear or front panel), select LINE1 or LINE2 using INPUT SELECT.

## Operation with tape (Continued)

### VCR Tape Recording

#### Basic Instructions

1. Turn on the DVD+VCR and TV.
2. Tune the TV to the DVD+VCR output channel (CH 3 or 4) or if a direct VIDEO/AUDIO connection is made between the DVD+VCR and the TV, set the

#### To record one TV program another

1. Press TV/VCR to select the TV. The TV indicator appears.
2. Using the TV, select the channel.

#### Timer Recording

6. Set the desired recording speed (SP or SLP) by pressing SP/SLP. This DVD+VCR is not designed to record in LP mode.

7. Set the MTS mode (STEREO or SAP). Set the BROADCAST TYPE option to SAP if applicable.

8. Press REC/OTR and recording starts. The REC indicator appears in the display window. If a cassette with no safety tab is loaded, the cassette is ejected.

9. Press STOP (x x) to stop recording. If the tape reaches the end before STOP (x x) is pressed, the DVD+VCR stops, rewinds and ejects the tape.

Tip:

Use PAUSE/STEP (X/C) for best results when making

changes while recording. For example, if you want to change

channels while recording, first press PAUSE/STEP (X/C) to

put the unit in pause mode, select the desired channel on the

DVD+VCR, and then press PAUSE/STEP (X/C) again to

resume recording.

Note:

During the VCR recording mode, you cannot change to the DVD mode.

### To pause the recording

1. Press PAUSE/STEP (X/C) to pause the tape during recording. The REC indicator flashes in the display window.

2. When you want to continue recording, press PAUSE/STEP (X/C) or press REC/OTR. After 5 minutes in PAUSE mode, the DVD+VCR stops automatically to protect the tape and the video heads.

24

### To record one TV program while watching another

1. Press TV/VCR to select the TV mode during recording. The TV indicator appears.

2. Using the TV, select the channel to be viewed.

### Timer Recording

For unattended recording, you must input the channels to be recorded and the starting and ending times.

#### Things to know before starting

If you try to set the program timer before setting the clock, "PLEASE SET THE CLOCK" appears for a moment and then CLOCK menu appears on the TV screen.

Set the time and date before proceeding.

During the VCR recording mode, you cannot change to the DVD mode.

1. Turn on the DVD+VCR and the TV.
2. Be sure the TV is set to the DVD+VCR output channel (3 or 4).

3. Make sure the TUNING BAND in the TUNING menu is set appropriately (TV or CATV).

4. Press PAUSE/STEP (II/III▶) to pause the tape during recording. The REC indicator flashes in the display window.
5. Use v/V to choose the PROGRAM menu and press

## Operation with tape (Continued)

### VCR Tape Recording

#### Basic Instructions

1. Turn on the DVD+VCR and the TV.
2. Tune the TV to the DVD+VCR output channel (CH 3 or 4) or if a direct VIDEO/AUDIO connection is made between the DVD+VCR and the TV, set the TV's source selector to VIDEO.
3. Insert a video cassette with the safety tab intact.
4. Select the desired channel using CH/TRK (▲/▼).
5. If you are recording from another source via audio/video input jacks at the rear or front panel, select LINE1 or LINE2 using INPUT SELECT.
6. Set the desired recording speed (SP or SLP) by pressing SP/SLP. This DVD+VCR is not designed to record in LP mode.
7. Set the MTS mode (STEREO or SAP). Set the BROADCAST TYPE option to SAP if applicable.
8. Press REC/OTR and recording starts. The REC indicator appears in the display window. If a cassette with no safety tab is loaded, the cassette is ejected.
9. Press STOP (■) to stop recording. If the tape reaches the end before STOP (■) is pressed, the DVD+VCR stops, rewinds and ejects the tape.

### To record one TV program another

1. Press TV/VCR to select the TV mode during recording. The TV indicator appears.
2. Using the TV, select the channel to be viewed.

### Timer Recording

For unattended recording, you must input the channels to be recorded and the starting and ending times.

#### Things to know before starting

If you try to set the program timer before setting the clock, "PLEASE SET THE CLOCK" appears for a moment and then CLOCK menu appears on the TV screen. Set the time and date before proceeding.

1. Turn on the DVD+VCR and the TV.
2. Be sure the TV is set to the DVD+VCR output channel (3 or 4).
3. Make sure the TUNING BAND in the TUNING menu is set appropriately (TV or CATV).
4. Press VCR MENU and the MAIN menu appears.
5. Use ▲/▼ to choose the PROGRAM menu and press ENTER.



If eight programs are already programmed, a PROGRAMMED message appears and then PROGRAM 1 appears on the TV screen.

6. Use the ▲/▼ buttons to select the desired options, and the ◀/▶ buttons to move the cursor. Input the month, day, starting time, and ending time.

Input the month, day, starting time, and ending time.

ENTER.

If eight programs are already entered, the FULLY PROGRAMMED message appears for a moment and then PROGRAM 1 appears on the TV screen.

6. Use the v/V buttons to switch between the program options, and the b/B buttons to input the program

information:

Input the month, day, start and stop times of the program you want to record.

## Operation with tape (Continued)

VCR Time Resolution

To record one TV program

[Table of Contents](#)

[Previous Page](#)

[Next Page](#)

1  
...  
21  
22  
23  
24  
25  
26  
27  
28

Quick Links:

[Remote Control](#)

[Basic Tv Connections](#)

[Copying from DVD to Vcr](#)

## Related Products for Toshiba SD-V383SC

[Toshiba SD-V395](#)

[Toshiba SD-V392 - DVD/VCR Combo](#)

[Toshiba SD-V390](#)

[Toshiba SD-V393](#)

[Toshiba SD-V396](#)

[Toshiba SD-V393SU2](#)

[Toshiba SDV398](#)

[Toshiba SD-V395KC](#)

[Toshiba SD-V392SU](#)

[Toshiba SD V394 - DVD/VCR Combo](#)

[Toshiba SD-V330SC2](#)

[Toshiba SD-V330SC](#)

[Toshiba SDV391c](#)

[Toshiba SDV391U](#)

[Toshiba SD-V394SC](#)

[Toshiba SD-V340SC](#)