

Changing The Audio Channel; Last Scene Memory; Instant Replay; Screen Saver - Toshiba SD-V383SC Owner's Manual

Dvd video player & video cassette recorder

1

2

3

Table Of Contents

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42

--

•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks



Operation with DVD and Video CD (Continued)

Changing the Audio Channel

Press AUDIO repeatedly during playback to hear a different audio channel (Stereo, Left, Right).

Operation with DVD and Video CD (Continued)

Last Scene Memory

DVD

This player memorizes last scene from the last disc that is viewed. The last scene remains in memory, even if you remove the disc from the player or switch off the player. If you load a disc that has the scene memorized, the scene is automatically recalled.

Note:

This player does not memorize the scene of a disc if you switch off the player before commencing to play the disc.

Changing the Audio Channel **VCD**

Press AUDIO repeatedly during playback to hear a different audio channel (Stereo, Left, Right).

Last Scene Memory **DVD** **CD** **VCD**

This player memorizes last scene from the last disc that

Special DVD Fea

Checking the contents

DVDs may offer menus that features. To use the disc me corresponding number or us highlight your selection. The

Instant Replay

DVD

Press INSTANT REPLAY during playback and the disc will reverse picture search through 10 seconds of playback. And then the playback will start from the point again.

Operation with DVD and Video CD (Continued)

Screen Saver

The screen saver appears when you leave the DVD+VCR in Stop mode for about five minutes.

Changing the Audio Channel **VCD**

Press AUDIO repeatedly during playback to hear a different audio channel (Stereo, Left, Right).

Special DVD Features

VCD

Last Scene Memory **DVD** **CD** **VCD**

Checking the contents of DVD discs: Menus

DVDs may offer menus that allow you to access special features. To use the disc menu, press MENU, input the corresponding number or use the h, B, v, Y buttons to highlight your selection. Then press ENTER.

CD

VCD

Title Menu

1. Press TOP MENU. If the current title has a menu,
2. The menu offers features such as **DVD** angles,
3. Press TOP MENU to exit.

Instant Replay **DVD**

Press INSTANT REPLAY during playback and the disc will reverse picture search through 10 seconds of playback. And then the playback will start from the point again.

Disc Menu

Press MENU and the disc menu is displayed. Press MENU again to exit.

Camera Angle

Screen Saver

If the disc contains scenes recorded at different camera angles, you can change to a different camera angle during playback. Press ANGLE repeatedly during playback to select a desired angle. Note that the number of the current angle appears on the display.

Tip:

The Camera Angle icon is displayed on the TV screen when alternate angles are available.

Changing the Audio Language

Press AUDIO repeatedly during playback to hear a different audio language or audio track.

Subtitles

Press SUBTITLE repeatedly during playback to see the different subtitle languages.

Note:

Special DVD Features

Checking the contents

DVDs may offer menus that allow you to access special features. To use the disc menu, press MENU, input the corresponding number or use the h, B, v, Y buttons to highlight your selection. Then press ENTER.

Title Menu **DVD**

1. Press TOP MENU. If the current title has a menu, the menu appears on the disc menu may appear.
2. The menu offers features such as spoken language and subtitle for the title.
3. Press TOP MENU to exit.

Disc Menu **DVD**

Press MENU and the disc menu is displayed. Press MENU again to exit.

Camera Angle **DVD**

If the disc contains scenes recorded at different camera angles, you can change to a different camera angle during playback. Press ANGLE repeatedly during playback to select a desired angle. Note that the number of the current angle appears on the display.

Tip:

The Camera Angle icon is displayed on the TV screen when alternate angles are available.

Changing the Audio Language

Press AUDIO repeatedly during playback to hear a different audio language or audio track.

Subtitles **DVD**

Press SUBTITLE repeatedly during playback to see the different subtitle languages.

Note:

If there is no information,

DVD

the menu appears on the screen. Otherwise, the disc menu may appear.

spoken language and subtitle options, and chapters for the title.

DVD

DVD

DVD

is displayed.

DVD

31

Operation with DVD and Video CD (Continued)

Changing the Audio Channel **VCD**

Press AUDIO repeatedly during playback to hear a

Special DVD Fea

Checking the contents

[Table of Contents](#)

[Previous Page](#)

[Next Page](#)

1
...
28
29
30
31
32
33
34
35

Quick Links:

[Remote Control](#)

[Basic Tv Connections](#)

[Copying from DVD to Vcr](#)

Related Products for Toshiba SD-V383SC

[Toshiba SD-V395](#)

[Toshiba SD-V392 - DVD/VCR Combo](#)

[Toshiba SD-V390](#)

[Toshiba SD-V393](#)

[Toshiba SD-V396](#)

[Toshiba SD-V393SU2](#)

[Toshiba SDV398](#)

[Toshiba SD-V395KC](#)

[Toshiba SD-V392SU](#)

[Toshiba SD V394 - DVD/VCR Combo](#)

[Toshiba SD-V330SC2](#)

[Toshiba SD-V330SC](#)

[Toshiba SDV391c](#)

[Toshiba SDV391U](#)

[Toshiba SD-V394SC](#)

[Toshiba SD-V340SC](#)