

Regional Code; Notes On Copyrights; About The Remote Control; Selecting The Viewing Source - Toshiba SD- V383SC Owner's Manual

Dvd video player & video cassette recorder

1

2

3

Table Of Contents

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42

--

•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks



Before Use (Continued)

Regional code

This DVD+VCR is designed and manufactured for playback of region "1" encoded DVD software. This unit can play only DVD discs labeled "1" or "ALL".

Notes on Regional Codes

Most DVD discs manufactured for playback of region "1" encoded DVD software. This unit can play only DVD discs labeled "1" or "ALL". If you try to play a DVD with a different region code from your player, the message "Check Regional Code" appears on the screen.

Before Use (Continued)

Regional code

This DVD+VCR is designed and manufactured for playback of region "1" encoded DVD software. This unit can play only DVD discs labeled "1" or "ALL".

Notes on Regional Codes



About the Remote Control

Operation Range

Point the remote control at the sensor.

Distance: About 23 ft (7 m) from the sensor.

Angle: About 30° in each direction.

Notes on Copyrights:

The unauthorized recording, use, distribution, or revision of copyrighted materials including, without limitation, television programs, videotapes, and DVDs, is prohibited under the Copyright Laws of Canada and other countries, and may subject you to civil and criminal liability.

Before Use (Continued)

This product features the copy protection function developed by Macrovision. Copy protection signals are recorded on some discs. When recording and playing the pictures of these discs picture noise will appear.

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

Regional code

This DVD+VCR is designed and manufactured for playback of region "1" encoded DVD software. This unit can play only DVD discs labeled "1" or "ALL".



Notes on Regional Codes

• Most DVD discs have a globe with one or more numbers in a clearly visible area on the cover. This number must match your DVD+VCR's regional code or the disc will not play. NOT ALL HIGH DEFINITION TELEVISION SETS ARE FULLY COMPATIBLE WITH THIS PRODUCT AND MAY CAUSE ARTIFACTS TO BE DISPLAYED ON THE PICTURE. IN CASE OF 525 PROGRESSIVE SCAN PICTURE PROBLEMS, IT IS RECOMMENDED THAT THE USER SWITCH THE CONNECTION TO THE 'STANDARD DEFINITION' OUTPUT. IF THERE ARE QUESTIONS REGARDING OUR TV SET COMPATIBILITY WITH THIS MODEL 525p DVD+VCR, PLEASE CONTACT OUR CUSTOMER SERVICE CENTER.

Notes on Copyrights:

The unauthorized recording, use, distribution, or revision of copyrighted materials including, without limitation, television programs, videotapes, and DVDs, is prohibited under the Copyright Laws of Canada and other countries, and may subject you to civil and criminal liability.

About the Remote Control

Operation Range

1

ALL

Point the remote control at the remote sensor and press the buttons.

Distance: About 23 ft (7 m) from the front of the remote

Angle:

Battery installation

Selecting the Viewing Source

You must select one of your output sources (DVD or VCR) to view on the TV screen.

- If you want to view DVD output source, Press DVD until DVD indicator lights and output source of DVD appear on the TV screen.
- If you want to view VCR output source, Press VCR until VCR indicator lights and output source of VCR appear on the TV screen.

About the Remote Control

Operation Range

Point the remote control at the remote sensor and press the buttons.

Distance: About 23 ft (7 m) from the front of the remote sensor.

Angle: About 30° in each direction from the remote sensor.

Battery installation



Detach the battery cover from the remote control. Insert (R03/AAA) size alkaline batteries, aligned correctly.



Do not mix old and new batteries or different types of batteries (alkaline, etc.).

Selecting the Viewing Source

You must select one of your output sources (DVD or VCR) to view on the TV screen.

- If you want to view DVD output source, Press DVD until DVD indicator lights and output source of DVD appear on the TV screen.
- If you want to view VCR output source, Press VCR until VCR indicator lights and output source of VCR appear on the TV screen.

Notes:

- If you insert a disc while the DVD+VCR is in the VCR mode, the DVD+VCR will automatically switch to DVD mode.
- If you insert a cassette tape while the DVD+VCR is in the DVD mode, the DVD+VCR will automatically switch to VCR mode.

If you want to view VCR deck output source:
 Press VCR until VCR indicator in the display window
 lights and output source of VCR deck is viewed on
 the TV screen.

Notes:

If you insert a disc while the DVD+VCR is in the VCR

mode, the DVD+VCR will switch to DVD mode automatically.

If you insert a cassette tape without prevention tab while

the DVD+VCR is in the DVD mode, the DVD+VCR will
 switch to VCR mode automatically.

Manufactured for playback of
Laboratories. This DVD+VCR is designed and
 manufactured for playback of
 "Region 1" products. DVDs with
 double-D symbols are trademarks of DVD
 Laboratories.

DTS and DTS Digital Out are trademarks of
Digital Theater Systems, Inc.

sensor.

About 30° in each direction of the front of the
 remote sensor.

Detach the battery cover on the rear of
 the remote control, and insert two

(R03/AAA) size batteries with 3 and #
 aligned correctly.

Do not mix old and new batteries and never mix
 different types of batteries such as standard,
 alkaline, etc.

**under
 license
 from
 Dolby
 7**

Before Use (Continued)

Regional code

This DVD+VCR is designed and



Manufactured for playback of
 Laboratories. This DVD+VCR is designed and
 manufactured for playback of
 "Region 1" products. DVDs with
 double-D symbols are trademarks of DVD
 Laboratories.

DTS and DTS Digital Out are trademarks of
 Digital Theater Systems, Inc.

Notes on Regional Codes

- Most DVD discs have a globe with one or more numbers in it clearly visible on the cover. This number must match your DVD+VCR's regional code or the disc cannot play.
- If you try to play a DVD with a different region code from your player, the message "Check Regional Code" appears on the TV screen.

Notes on Copyrights:

The unauthorized recording, use, distribution, or revision of copyrighted materials including, without limitation, television programs, videotapes, and DVDs, is prohibited under the Copyright Laws of Canada and other

About the Remote C

Operation Range

Point the remote control at the
 the buttons.

Distance: About 23 ft (7 m) to
 sensor.

Angle: About 30° in each direction
 remote sensor.

Battery installation



Detach the battery cover on the rear of
 the remote control, and insert two
 (R03/AAA) size batteries with 3 and #
 aligned correctly.



Do not mix old and new
 different types of batteries such as
 alkaline, etc.

Selecting the Viewing

[Previous Page](#)
[Next Page](#)

1
...
4
5
6
7
8
9
10
11

Quick Links:

[Remote Control](#)

[Basic Tv Connections](#)

[Copying from DVD to Vcr](#)

Related Products for Toshiba SD-V383SC

[Toshiba SD-V395](#)

[Toshiba SD-V392 - DVD/VCR Combo](#)

[Toshiba SD-V390](#)

[Toshiba SD-V393](#)

[Toshiba SD-V396](#)

[Toshiba SD-V393SU2](#)

[Toshiba SDV398](#)

[Toshiba SD-V395KC](#)

[Toshiba SD-V392SU](#)

[Toshiba SD V394 - DVD/VCR Combo](#)

[Toshiba SD-V330SC2](#)

[Toshiba SD-V330SC](#)

[Toshiba SDV391c](#)

[Toshiba SDV391U](#)

[Toshiba SD-V394SC](#)

[Toshiba SD-V340SC](#)