



Asus BM6635 User Manual

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68

69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117
118

119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167
168

169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215

-

[Table of Contents](#)


•

Bookmarks

--

[Download this manual](#)

Quick Links

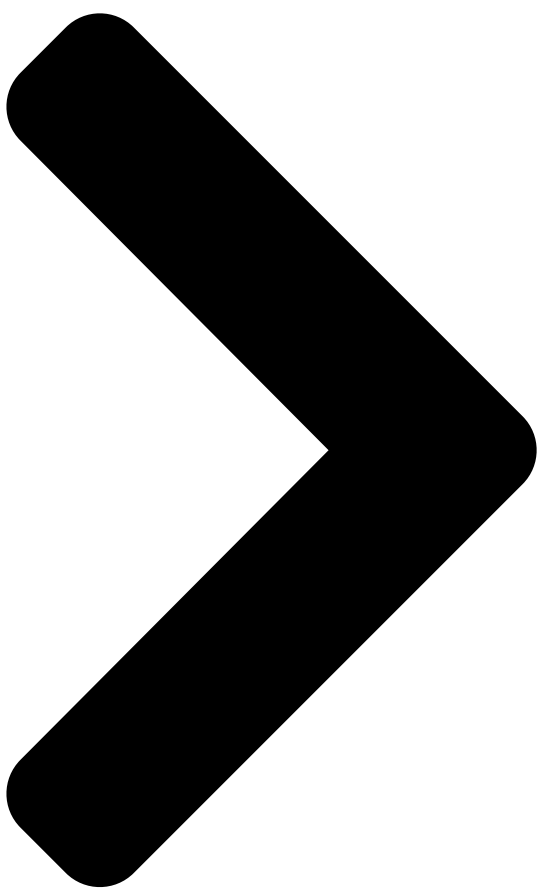

ASUS Desktop PC

BM6635(MD560)

BM6835

BP6335(SD560)

BM6635(MD560)

BM6835

BP6335(SD560)

User Manual



[Table of Contents](#)

[Next Page](#)

- 1
- 2
- 3
- 4
- 5

Chapters

English 3

73

Related Manuals for Asus BM6635

[Desktop Asus BM6635 User Manual](#)

(578 pages)

[Desktop Asus SD560 User Manual](#)

(92 pages)

[Desktop Asus BM6635 User Manual](#)

Bm6635_bm6835_bp6335 user's manual (72 pages)

[Desktop Asus BM6635 Installation Manual](#)

(2 pages)

[Desktop Asus BM6635/MD560 Installation Manual](#)

(2 pages)

[Desktop ASUS BM6835 Product Specification](#)

(2 pages)

[Desktop ASUS BP6335 Product Specification](#)

(2 pages)

[Desktop pc Asus k20ce User Manual](#)

(62 pages)

[Desktop pc Asus P30AD User Manual](#)

(72 pages)

[Desktop pc Asus CP3130 User Manual](#)

(206 pages)

[Desktop pc Asus G20BM User Manual](#)

(78 pages)

[Desktop pc Asus K30AM User Manual](#)

(81 pages)

Summary of Contents for Asus BM6635

[Page 1](#) ASUS Desktop PC BM6635(MD560) BM6835 BP6335(SD560) BM6635(MD560) BM6835 BP6335(SD560) User Manual...

[Page 2](#) Product warranty or service will not be extended if: (1) the product is repaired, modified or altered, unless such repair, modification or alteration is authorized in writing by ASUS; or (2) the serial number of the product is defaced or missing.

[Page 3: Table Of Contents](#)

Using the optical drive (on selected models only)4 Chapter 5 Connecting to the Internet
Wired connection4 Chapter 6 Using the utilities ASUS AI Suite II47
ASUS AI Manager54 ASUS WebStorage57 ASUS Easy Update
.....59 Nero 9

[Page 4](#) Contents Chapter 7 Troubleshooting Troubleshooting 6 ASUS contact

[Page 5: Notices](#)

Notices ASUS Recycling/Takeback Services ASUS recycling and takeback programs come from our commitment to the highest standards for protecting our environment. We believe in providing solutions for you to be able to responsibly recycle our products, batteries, other components, as well as the packaging materials.

[Page 6](#) RF exposure warning This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 30 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

[Page 7: Safety Information](#)

Safety information Disconnect the AC power and peripherals before cleaning. Wipe the Desktop PC using a clean cellulose sponge or chamois cloth dampened with solution of nonabrasive detergent and a few drops of warm water then remove any extra moisture with a dry cloth. DO NOT place on uneven or unstable work surfaces.

[Page 8: Conventions Used In This Guide](#)

Refer to the following sources for additional information and for product and software updates. ASUS websites The ASUS website provides updated information on ASUS hardware and software products. Refer to the ASUS website www.asus.com. ASUS Local Technical Support Visit ASUS website at <http://support.asus.com/contact> for the contact information of...

[Page 9: Package Contents](#)

Package contents ASUS Desktop PC Keyboard x1 Mouse x1 Power cord x1 Support DVD x1 (Optional) Recovery DVD x1 (Optional) Nero 9 burning software Installation Guide x1 Warranty card x1 DVD x1 (Optional) • If any of the above items is damaged or missing, contact your retailer.

[Page 11: Chapter 1 □ Getting Started](#)

All these values are encapsulated in a stunningly futuristic and stylish system casing. Read the ASUS Warranty Card before setting up your ASUS Desktop PC. Getting to know your computer illustrations are for reference only. The ports and their locations, and the chassis color vary with different models.

[Page 12](#) Front panel BM6635(MD560) 2 x 5.25 inch optical disk drive bays. The 5.25 inch optical disk drive bays are for 5.25 inch DVD-ROM / CD-RW / DVD-RW devices. Microphone port (pink). This port connects to a microphone. Headphone port (lime). This port connects to a headphone or speaker.

[Page 13](#) • We strongly recommend that you connect USB 3.0 devices to USB 3.0 ports for faster and better performance for your USB 3.0 devices. USB 2.0 ports. These Universal Serial Bus 3.0 (USB 3.0) ports connect to USB 3.0 devices such as a mouse, printer, scanner, camera, PDA, and others. ASUS BM6635(MD560), BM6835, and BP6335(SD560)

[Page 14](#) BP6335(SD560) Optical disk drive eject button. Press this button to eject the optical disk drive tray. 5.25 inch optical disk drive bay. The 5.25 inch optical disk drive bay is for 5.25 inch DVD-ROM / CD-RW / DVD-RW devices. HDD LED. This LED lights up when the hard disk drive operates. Microphone.

[Page 15](#) • We strongly recommend that you connect USB 3.0 devices to USB 3.0 ports for faster and better performance for your USB 3.0 devices. USB 2.0 ports. These Universal Serial Bus 3.0 (USB 3.0) ports connect to USB 3.0 devices such as a mouse, printer, scanner, camera, PDA, and others. ASUS BM6635(MD560), BM6835, and BP6335(SD560)

[Page 16](#) Microphone port (pink). Microphone port (pink). This port connects to a microphone. Line Out port (lime). Line Out port (lime). This port connects to a headphone or speaker. In a 4, 6, or 8-channel configuration, the function of this port becomes Front Speaker Out. Line In port (light blue).

[Page 17](#) PS/2 keyboard port (purple). This port is for a PS/2 keyboard. DVI-D port. DVI-D port. This port is for any DVI-D compatible device and is HDCP compliant allowing playback of HD DVD, Blu-ray, and other protected content. ASUS BM665(MD560), BM685, and BP665(SD560)

[Page 18](#) USB 3.0 ports. These Universal Serial Bus 3.0 (USB 3.0) ports connect to USB 3.0 devices such as a mouse, printer, scanner, camera, PDA, and others. • DO NOT connect a keyboard / mouse to any USB 3.0 port when installing Windows ®...

[Page 19](#) • USB 3.0 devices can only be used as data storage only. • We strongly recommend that you connect USB 3.0 devices to USB 3.0 ports for faster and better performance for your USB 3.0 devices. ASUS BM665(MD560), BM685, and BP665(SD560)

[Page 20](#) USB 2.0 ports. USB 2.0 ports. These Universal Serial Bus 2.0 (USB 2.0) ports connect to USB 2.0 devices such as a mouse, printer, scanner, camera, PDA, and others. Microphone port (pink). Microphone port (pink). This port connects to a microphone. Line Out port (lime).

[Page 21: Setting Up Your Computer](#)

Connect your monitor to the onboard display output port. To connect an external monitor using the onboard display output ports: Connect your monitor to the VGA port, DVI-D port, or display port of your computer. Plug your monitor to a power source. BM6635(MD560) ASUS BM665(MD560), BM685, and BP665(SD560)

[Page 22](#) BM6835 BP6335(SD560) • If your computer comes with an ASUS Graphics Card, the graphics card is set as the primary display device in the BIOS. Hence, connect your monitor to a display output port on the graphics card. • To connect multiple external monitors to your computer, refer to Connecting multiple external monitors in Chapter 2 of this user manual for details.

[Page 23](#) Connecting a USB keyboard and a USB mouse Connect a USB keyboard and a USB mouse to the USB ports on the rear panel of your computer. BM6635(MD560) BM6835 ASUS BM665(MD560), BM685, and BP665(SD560)

[Page 24](#) BP6335(SD560) Connecting the power cord Connect one end of the power cord to the power connector on the rear panel of your computer and the other end to a power source. BM6635(MD560) Chapter 1: Getting started...

[Page 25](#) BM6835 BP6335(SD560) ASUS BM665(MD560), BM685, and BP665(SD560)

[Page 26: Turning Your Computer On/Off](#)

Turn the power switch ON (for BM685 only). Press the power button on your computer. Power button Power button BM6835 BM6635(MD560) Power button BP6335(SD560) Wait until the operating system loads automatically. Turning your computer OFF To turn your computer OFF: Close all running applications.

[Page 27: Chapter 2 Using Windows](#)

To skip this step, select Ask me later. Review your date and time settings. Click Next. The system loads the new settings and restarts. You may now start using your computer. ASUS BM665(MD560), BM685, and BP665(SD560)

[Page 28](#) Using Windows 7 desktop ® Click the Start icon > Help and Support to obtain more information about Windows ® Using the Start menu The Start menu gives you access to programs, utilities, and other useful items on your computer. It also provides you with more information about Windows 7 through its Help and Support feature.

[Page 29](#) Remove from this list. Unpinning programs from the taskbar To unpin programs from the taskbar: From the taskbar, right-click the program that you want to remove from the taskbar, then select Unpin this program from taskbar. ASUS BM665(MD560), BM685, and BP665(SD560)

[Page 30: Managing Your Files And Folders](#)

Using the notification area By default, the notification area shows these three icons: Action Center notification Click this icon to display all the alert messages/notifications and launch the Windows ® Action Center. Network connection This icon displays the connection status and signal strength of the wired or wireless network connection.

[Page 31](#) From the menu that appears, select Sort by, then select your preferred sorting type. Grouping your files To group your files: Launch Windows Explorer. Right-click anywhere on the View pane. From the menu that appears, select Group by, then select your preferred grouping type. ASUS BM66□5(MD560), BM68□5, and BP6□□5(SD560)

[Page 32: Restoring Your System Settings](#)

Adding a new folder To add a new folder: Launch Windows Explorer. From the toolbar, click New folder. Key in a name for the new folder. You may also right-click anywhere on the View pane, click New > Folder. Backing up your files Setting up a backup To set up a backup: >...

[Page 33: Protecting Your Computer](#)

> Getting Started > Add new users. ® Select Manage another account. Select Create a new account. Key in the name of the new user. Select either Standard user or Administrator as the user type. When done, click Create Account. ASUS BM66□5(MD560), BM68□5, and BP6□□5(SD560)

[Page 34: Getting Windows ® Help And Support](#)

Setting up a user's password To set up a user's password: Select the user that you would like to set a password. Select Create a password. Key in a password and confirm it. Key in your password's hint. When done, click Create password. Activating the anti-virus software Trend Micro Internet Security is pre-installed on your computer.

[Page 35: Chapter 3 □ Connecting Devices To Your Computer](#)

This desktop PC provides USB □.0/1.1 ports on both the front and rear panels. The USB ports allow you to connect USB devices such as storage devices. To connect a USB storage device: • Insert the USB storage device to your computer. Front panel BM6635(MD560) BM6835 BP6335(SD560) ASUS BM66□5(MD560), BM68□5, and BP6□□5(SD560)

[Page 36](#) Rear panel BM6635(MD560) BM6835 BP6335(SD560) Chapter □: Connecting devices to your computer...

[Page 37: Connecting Microphone And Speakers](#)

This desktop PC comes with microphone ports and speaker ports on both the front and rear panels. The audio I/O ports located on the rear panel allow you to connect □-channel, 4-channel, 6-channel, and 8-channel stereo speakers. Connecting Headphone and Mic BM6635(MD560) BM6835 ASUS BM66□5(MD560), BM68□5, and BP6□□5(SD560)

[Page 38](#) BP6335(SD560) Connecting 2-channel Speakers Chapter □: Connecting devices to your computer...

[Page 39](#) Connecting 4-channel Speakers Connecting 6-channel Speakers ASUS BM66□5(MD560), BM68□5, and BP6□□5(SD560)

[Page 40](#) Connecting 8-channel Speakers Chapter □: Connecting devices to your computer...

[Page 41: Chapter 4 □ Using Your Computer](#)

• Use your Desktop PC in a comfortably-lit area, and keep it away from sources of glare such as windows and straight sunlight. • Take regular mini-breaks from using your Desktop PC. ASUS BM66□5(MD560), BM68□5, and BP6□□5(SD560)

[Page 42: Using The Optical Drive \(On Selected Models Only\)](#)

Using the optical drive (on selected models only) Inserting an optical disc To insert an optical disc: While your system is on, press the eject button below the drive bay cover to open the tray.

Place the disc to the optical drive with the label side facing up. Push the tray to close it.

[Page 43: Chapter 5 □ Connecting To The Internet](#)

Refer to the documentation that came with your DSL/cable modem. Connect one end of an RJ-45 cable to the LAN (RJ-45) port on the rear panel of your computer and the other end to a DSL/cable modem. BM6635(MD560) Modem RJ-45 cable ASUS BM66□5(MD560), BM68□5, and BP6□□5(SD560)

[Page 44](#) BM6835 Modem RJ-45 cable BP6335(SD560) Modem RJ-45 cable Turn on the DSL/cable modem and your computer. Configure the necessary Internet connection settings. Contact your Internet Service Provider (ISP) for details or assistance in setting up your Internet connection. Chapter 5: Connecting to the Internet...

[Page 45](#) To connect via a LAN: Connect one end of an RJ-45 cable to the LAN (RJ-45) port on the rear panel of your computer and the other end to your LAN. BM6635(MD560) RJ-45 cable BM6835 RJ-45 cable ASUS BM66□5(MD560), BM68□5, and BP6□□5(SD560)

[Page 46](#) BP6335(SD560) RJ-45 cable Turn on your computer. Configure the necessary Internet connection settings. Contact your network administrator for details or assistance in setting up your Internet connection. Chapter 5: Connecting to the Internet...

[Page 47: Asus Ai Suite li](#)

Recovering your system in this chapter. ASUS AI Suite II ASUS AI Suite II is an all-in-one interface that integrates several ASUS utilities and allows users to launch and operate these utilities simultaneously. This utility is pre-installed on some models. For models without an operating system, follow the steps below to install this utility.

[Page 48](#) The Tool menu The Tool menu includes the EPU, Probe II, and Sensor Recorder panels. Launching and configuring EPU EPU is an energy-efficient tool that provides you with a total power-saving solution. It detects the current loading and intelligently adjusts the power usage in real-time. When you select the Auto mode, the system changes modes automatically according to the current system status.

[Page 49](#) The Preference tab allows you to customize the time interval of sensor alerts, or change the temperature unit. Saves your configuration Loads your saved configuration Applies your changes Loads the default threshold values for each sensor ASUS BM66□5(MD560), BM68□5, and BP6□□5(SD560)

[Page 50](#) Launching and configuring Sensor Recorder Sensor Recorder allows you to monitor the changes in the system voltage, temperature, and fan speed, as well as recording the changes. To launch Sensor Recorder: Click Tool > Sensor Recorder on the AI Suite II main menu bar. •...

[Page 51](#) The Update menu allows you to update the motherboard BIOS and the BIOS boot logo with the ASUS designed update utilities. ASUS Update The ASUS Update is a utility that allows you to manage, save, and update the motherboard BIOS in Windows OS. The ASUS Update utility allows you to update the BIOS directly ®...

[Page 52](#) Follow the onscreen instructions to complete the update process. MyLogo ASUS MyLogo allows you to customize the boot logo. The boot logo is the image that appears on screen during the Power-On Self-Tests (POST). ASUS MyLogo allows you to: •...

[Page 53](#) Click the Disk tab and then select each disk to see the details on it. The Support screen The Support screen displays the information about the ASUS website, technical support website, download support website, or contact information. The Settings screen The Settings screen allows you to customize the main menu bar settings and the interface's...

[Page 54: Asus Ai Manager](#)

AI Manager either from the quick bar or taskbar. AI Manager quick bar The AI Manager quick bar saves the desktop space and allows you to launch the ASUS utilities or display system information easily. Click any of the Main, My Favorites, Support or Information tab to display the menu's contents.

Page 55 Select a device, then click the left/right button to specify the boot sequence. When done, press Apply. My Favorites My Favorites allows you to add applications that you frequently use, saving you from searching for the applications throughout your computer. ASUS BM66□5(MD560), BM68□5, and BP6□5(SD560)

Page 56 Right click on the application icon to launch, delete, or rename the selected application. You can also double click to launch the selected application. Support Click any links on the Support window to go to the ASUS website, technical support website, download support website, or contact information. Information Click the tab on the Information window to see the detailed information about your system, motherboard, CPU, BIOS, installed device(s), and memory.

Page 57: Asus Webstorage

Installing WebStorage To install WebStorage: Place the support DVD in the optical drive. Double-click the setup.exe file from the ASUS WebStorage folder in the Software folder in the support DVD. Launching WebStorage ®...

Page 58 ASUS WebStorage's mobile applications allow you to synchronize your files between your mobile devices. It also allows you to preview or stream files on your mobile device. Go to Web ASUS WebStorage allows you to experience its value-added cloud service without the risk of losing your data. Settings Click the Settings icon to launch the Settings screen.

Page 59: Asus Easy Update

ASUS Easy Update ASUS Easy Update is a software tool that automatically detects the latest drivers and applications for your system. From the Windows notification area, ® right-click the ASUS Easy Update icon. Select Schedule to set how often you want to update your system.

Page 60: Nero 9

Nero 9 Nero 9 allows you to create, copy, burn, edit, share, and update different kinds of data. Installing Nero 9 To install Nero 9: Insert the Nero 9 DVD into your optical drive. If Autorun is enabled, the main menu appears automatically. If Autorun is disabled, double-click the SetupX.exe file from the main directory of your Nero 9 DVD.

Page 61: Recovering Your System

System DDD Backup: This feature allows you to make a backup copy of the support DVD. Follow the onscreen instructions to complete the recovery process. Visit the ASUS website at www.asus.com for updated drivers and utilities. ASUS BM66□5(MD560), BM68□5, and BP6□5(SD560)

Page 62 Follow the onscreen instructions to complete the recovery process. DO NOT remove the Recovery disc, unless instructed to do so, during the recovery process or else your partitions will be unusable. Visit the ASUS website at www.asus.com for updated drivers and utilities. Chapter 6: Using the utilities...

Page 63 • Connect the external antennas (optional) to the antenna connectors on the ASUS WLAN Card and place the antennas on the top of your computer chassis for the best wireless performance. The arrow keys on the number key pad are not working.

Page 64 No display on the monitor. • Check if the monitor is powered on. • Ensure that your monitor is properly connected to the video output port on your computer. • If your computer comes with a discrete graphics card, ensure that you connect your monitor to a video output port on the discrete graphics card.

Page 65 Check if the disc is centered in the tray, especially for the discs with non-standard size or shape. • Check if the disc is scratched or damaged. The DDD drive eject button is not respond. Click > Computer. , then click Eject from the menu. Right-click ASUS BM66□5(MD560), BM68□5, and BP6□5(SD560)

Page 66 Power Problem Possible Cause Action • Set your computer's power voltage switch to your area's power requirements. Incorrect power voltage • Adjust the voltage settings. Ensure that the power cord is unplugged from the power outlet. No power Press the power key on the front panel (The power Your computer is not to ensure that your computer is turned...

☐ Yes ☒ No

[illegible]

[Page 88](#) ® •. Windows . USB.3.0. ® •. USB.3.0. USB.3.0. Windows . OS. USB.3.0. •. USB.3.0. PDA. 10.. 11.. CD DVD. 2468. /

[Page 89](#) USB 2.0 4 BP6335(SD560) PS/2 PS/2 DVI-D. USB. 3.0. PDA. ® •. Windows . USB.3.0. •. USB.3.0. BM6635(MD560),,BM6835,,BP6335(SD560)

[Page 90](#) USB.2.0. PDA. 68. /

[Page 91:](#)

BM6635(MD560),,BM6835,,BP6335(SD560)

[Page 92](#) BM6835 BP6335(SD560) BIOS. ..

[Page 93](#) USB BM6635(MD560) BM6835 BM6635(MD560),,BM6835,,BP6335(SD560)

[Page 94](#) BP6335(SD560) BM6635(MD560) ..

[Page 95](#) BM6835 BP6335(SD560) BM6635(MD560),,BM6835,,BP6335(SD560)

[Page 96:](#)

BM6835 BM6835 BM6635(MD560) BP6335(SD560) Windows .

[Page 97:](#)

Windows 7 ® Windows . 7. BM6635(MD560),,BM6835,,BP6335(SD560)

[Page 98: Windows ® .7.](#)

® Windows 7 ® Windows . 7. Windows .

[Page 99](#) ..

Page 110 BP6335(SD560) □□□□□□ □□□□□□...

[illegible]

[illegible]

Page 127 System.Information. * .MB.
 .BIOS.* .CPU.* .SPD.
 .Settings.* .Applicaion.*
 Bar.* Skin.* gamma.
 BM6635(MD560),BM6835,.BP6335(SD560)

00000000 00000000000000000000000000000000 0000000000 00000000 000000000000000000 00000000
 00000000000000000000000000000000 00000000.setup.exe.000 00000000 0. Windows . 000000. 00. >. ® 00
 00. >. 0000000. >. 0000 000000000000000000 000000000000000000 00000000 Drive 0000000000000000
 0000000000000000000000 00
 00. 00000.00000000 MySyncFolder 00000000000. MySyncFolder. 0000000000000000000000000000000000
 0...

© Easy Update .Easy.Update.® .Windows. .
 .Easy.Update.
 ...

[illegible]

*. 00.MyLogo.2 • 00.Secure.Delete • Intel ® .SBA.00000000 Intel . SBA. 00000000000000000000
0000000000 ® 00000000 0000 ASUS Business Suite 00000.Business.Suite.000000
0.Wake.On.LAN.(WOL).000000.WOL 000.BIOS.0000.Advanced.Mode.000000.Advanced.>.APM00
000.WOL. (000.AC.Power.Loss).000.[Enabled] 000000000000 Business Suite 000000000000. DVD.
0000000000000000000000 000.00.Business.Suite.00000000.setup.exe 0000 Business Suite 0000.
Windows ® . 00000000. Business. Suite. 0000 000.Windows ®...

Page 133 0000. W i n d o w s. 0000000000000000. BIOS00000000. Ai. Suite. II. 0000000000
00000000 0000 MyLogo 2 0000000000000000. 256-00000000 0000000000000000. Ai.

[illegible][illegible]

Page 137 0000 0000 00000000000000000000. 000000000000000000000000 • 00000000000000
• 0000000000000000 • 0000000000000000000000000000000000 00000000 • 000000000000000000 1..
0 000.<Alt>+.<Ctrl>+.<Delete>.00000.000000 2.. 00.0000.0 3.. 0000000000000000.0000.0 •
0000000000000000000000000000000000 000000000000 0000000000000000000000000000000000 • 00000000
0000000000000000000000 • 0000000000000000000000000000000000 0000000000000000000000000000000000 00000000
00000000 0000000000000000000000000000000000 0000000000000000000000000000000000 000000000000 00
BM6635(MD560),,BM6835,,BP6335(SD560)

[Page 139](#)

Page 141

[illegible]

Page 143 00000000 000000 ASUSTeK COMPUTER INC.0000 0000 000 000000000000 15 0 0.
00. + 886-2-2894-3447. 000+886-2-2894-3447 00800-093-4560 000+886-2-2890-7798 00000. h
http://support.asus.com/techserv/ 000000info@asus.com.tw techserv.aspx 0000
00http://tw.asus.com 000000 ASUSTeK COMPUTER INC.000000 0000 0000 00. 0 00000000000.150
000+86-21-38429911 000+886-2-2894-3447 000. + 86-21-58668722,ext.9101# 0
00+886-2-2890-7798 00000. h http://support.asus.com/techserv/ 000000info@asus.com.tw...

[illegible]

[Page 147](#) □□□□□□ □□□□□□□□□□□□□□□□213 □□□□□□215..

Page 149 Canadian Department of Communications Statement This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications. This class B digital apparatus complies with Canadian ICES-003. □□□□...

[illegible]

华硕笔记本电脑售后服务网
http://www.asus.com.cn 华硕笔记本电脑服务热线
http://support.asus.com/contact 华硕笔记本电脑维修点

BM6635, BM6835, BP6335...

Page 178: [Windows](#)

Trend Micro Internet Security 60 Trend Micro Internet Security Trend Micro Internet Security Windows ® ® ® Windows Windows 7 ® > Windows Windows ®...

Page 179 □□ BM6635, BM6835, BP6335...

Page 180: □□□ □□□□

USB 2.0/1.1 USB 3.0 USB BIOS USB 2.0 USB 3.0 BIOS USB BM6835 BM6635 BP6335...

Page 181 □□ BM6635 BM6835 BP6335 □□ BM6635, BM6835, BP6335...

Page 182: □□□□□□□□

00000000 000000000000000000000000 I/O 00000 0000000000000000 BM6635 BM6835 0000
 0000...

[Page 183](#) BP6335 □□□□□□ □□ BM6635, BM6835, BP6335...

Page 184 □□□□□□ □□□□□□ □□□□□□...

Page 185 □□□□□□ □□ BM6635, BM6835, BP6335...

Page 186: □□□ □□□□□□

1. 在 3D 模型中，選擇要旋轉的物件。
 2. 在「旋轉」工具欄中，點選「旋轉」圖示。
 3. 在 3D 模型中，點選物件的旋轉軸。
 4. 在 3D 模型中，點選物件的旋轉角度。
 5. 在 3D 模型中，點選物件的旋轉速度。
 6. 在 3D 模型中，點選物件的旋轉方向。
 7. 在 3D 模型中，點選物件的旋轉位置。
 8. 在 3D 模型中，點選物件的旋轉時間。
 9. 在 3D 模型中，點選物件的旋轉次數。
 10. 在 3D 模型中，點選物件的旋轉模式。

Page 187: □□□□

この製品は、インストール時に Windows 7 のインストールディスクまたは CD/DVD を必要とします。
インストール時には、インストールメディアとして以下のいずれかを使用する必要があります。

- インストールメディア
- “インストール”タブの CD/DVD を使用する

インストールには、以下のいずれかのモデルが必要です。BM6635、BM6835、BP6335...

Page 188: [Bios](#) [Usb](#)

BIOS の USB の設定 BIOS の設定画面で USB 2.0 と USB 3.0 の設定を確認する。USB の設定は、
BIOS の設定画面で F8 を押して BIOS の設定画面の Advanced > USB Configuration に移動し、USB
の設定を確認する。BIOS の設定画面で Enter を押して Exit から Save Changes & Reset を選択すると、USB の設定が
保存される。

Page 189 □□ BM6635, BM6835, BP6335...

Page 190: □□□ □□□□

RJ-45 LAN (RJ-45) DSL/Cable modem
 DSL/Cable modem RJ-45 cable BM6635, BM6835, BP6335...

Page 191 BM6835 Modem RJ-45 cable BP6335 Modem RJ-45 cable DSL/Cable modem (ISP) BM6635, BM6835, BP6335...

Page 192 □□□□□□□□ (LAN) □□□□□□□□□□□□□□□□ RI-45 □□□□□□□□□□□□ LAN (RI-45) □□□□□□

[Page 193](#) BP6335 RJ-45 cable 00000000 0000000000 00000000000000000000 00
BM6635, BM6835, BP6335...

Page 195

Secure Delete Secure Delete Secure Delete
Secure Delete: Secure Delete • Windows Secure Delete
• > > > Secure Delete • •
Secure Delete...

Page 205: ☐☐ Business Suite

® Windows Business Suite ® Windows Business Suite
Business Suite Business Suite
Business Suite
Intel SBA
BM6635, BM6835, BP6335...

Page 206 00 00 Energy Saver Energy Saver 000000000000000000 000000000000000000
00000000 000000000000000000 Business Suite 00 000 0000000000 PC Health Center PC Health
Center 000000000000000000 0000000000000000000000000000 0000000000000000000000000000
00 PC Health Center000000000000000000 00000000 Business Suite 00000 000000 000 ® I n t
e l S B A Software Monitor 00000...

[illegible]

Page 208: □□□□□□

000000 000000 0000000000000000000000000000000000 0000000000000000000000000000
0000 0000000000000000000000000000000000 0000 Outlook 0 PST 0000000000000000000000
000 000000000000 000000 0000000000000000000000000000000000 000000000000000000 000000 Disk
0 000
000000 000000 <F9>0000000000 00 <Enter> 000 Windows 00 [EMS Enabled]0 000000000000000000
0 <Next>0 000000000000000000 000 http://www.asus.com.cn 00000000000000000000 0000000000
0...

Page 209 Windows 繁體中文 安裝說明書
 Microsoft Windows 安裝說明書 DVD 安裝說明書 DVD 安裝說明書
 <F8> “CD/ DVD” <Enter> OK OK
 http://www.asus.com.cn BM6635, BM6835, BP6335...

[illegible][illegible]

[Page 212](#)

Page 213

[Page 214](#)

請 * 前往 ASUS Support 網頁 <http://support.asus.com> 查詢相關資訊。
請...

[Page 215](#) 請前往 <http://www.asus.de/sales> 或 <http://support.asus.com/> 查詢相關資訊。techserv/techserv.aspx * 0.14 0.42
請 請 BM6635, BM6835, BP6335...

This manual is also suitable for:

[Md560Bm6835Bp6335Sd560](#)