



# Whirlpool AMW 901 Instructions For Use Manual



1	
2	
3	
4	
5	
6	
7	
8	
9	
10	
11	
12	
13	
14	
15	
16	
Table Of Contents	
17	

--	--

•

[Table of Contents](#)

- 

Troubleshooting

•

Bookmarks

--

[Download this manual](#)

### Quick Links





# **AMW 901**

**Gebrauchsanweisung**

**Brugsanvisning**

**Instructions for use**

**Bruksanvisning**

**Mode d'emploi**

**Käyttöohje**

**Gebruiksaanwijzing**

**Manual de utilização**

**Istruzioni per l'uso**

**Instrucciones para el uso**

**Οδηγίες Χρήσης**

**Návod k použití**



Návod na použitie  
Instrukcje użytkowania  
Használati utasítás  
Instrucțiuni de utilizare  
Инструкция за употреба  
Инструкции по эксплуатации

1

[Table of Contents](#)

[Next Page](#)

1  
2  
3  
4  
5

# Summary of Contents for Whirlpool AMW 901

[Page 1](#) AMW 901 Gebrauchsanweisung Brugsanvisning Instructions for use Bruksanvisning Mode d'emploi Käyttöohje Gebruiksaanwijzing Manual de utilização Istruzioni per l'uso Instrucciones para el uso Οδηγίες Χρήσης Návod k použití Návod na použitie Instrukcje użytkowania Használati utasítás Instrucțiuni de utilizare Инструкция за употреба...

## [Page 2: Installation](#)

INSTALLATION MOUNTING THE APPLIANCE separate mounting in- FOLLOW THE SUPPLIED structions when installing the appliance. PRIOR TO CONNECTING on the rating plate corre- if it has a damaged HECK THAT THE VOLTAGE O NOT OPERATE THIS APPLIANCE sponds to the voltage in your home. mains cord or plug, if it is not working proper- ly, or if it has been damaged or dropped.

## [Page 3: Important Safety Instructions](#)

IMPORTANT SAFETY INSTRUCTIONS READ CAREFULLY AND KEEP FOR FUTURE REFERENCE in or to use the appliance under O NOT HEAT OR USE FLAMMABLE MATERIALS NLY ALLOW CHILDREN near the oven. Fumes can create a fire hazard adult supervision and after adequate instructions or explosion.

## [Page 4: Important Precautions](#)

IMPORTANT PRECAUTIONS LIQUIDS HIS APPLIANCE IS DESIGNED FOR DOMESTIC USE ONLY . Overheating the liquid BEVERAGES OR WATER without food HE APPLIANCE SHOULD NOT BE OPERATED beyond boiling point can occur in the oven when using microwaves. Operation in without evidence of bubbling. this manner is likely to damage the appliance.

## [Page 5: Glass Turntable](#)

ACCESSORIES GENERAL a number of accessories available on TURNTABLE SUPPORT HERE ARE the market. Before you buy, ensure they are under the SE THE TURNTABLE SUPPORT suitable for microwave use. Glass turntable. Never put any oth- er utensils on the turntable sup- are oven proof NSURE THAT THE UTENSILS YOU USE port.

## [Page 6: Pause Or Stop Cooking](#)

PAUSE OR STOP COOKING O PAUSE COOKING ' F YOU DON T WANT TO CONTINUE COOKING HE COOKING CAN BE PAUSED , close the door and EMOVE THE FOOD check, turn or stir the food press the STOP button by opening the door. The setting will be maintained for 10 minutes.

## [Page 7: Kitchen Timer](#)

KITCHEN TIMER □ when you need SE THIS FUNCTION a kitchen timer to measure exact time for various purposes such as □ □ cooking eggs, pasta or letting the dough rise before baking etc. □ to set the time to measure. RESS THE BUTTONS □...

## [Page 8: Power Level](#)

COOK & REHEAT WITH MICROWAVES □ for normal cook- SE THIS FUNCTION ing and reheating, such as vege- tables, fish, potatoes and meat. □ □ □ to set the time. RESS THE BUTTONS □ repeatedly to set the power. RESS THE POWER BUTTON □...

## [Page 9: Jet Start](#)

JET START for quick re- HIS FUNCTION IS USED heating of food with a high water content such as clear soups, cof- □ fee or tea. □ RESS THE TART BUTTON with maximum microwave power HIS FUNCTION AUTOMATICALLY STARTS level and the cooking time set to 30 seconds. Each additional press increases the time with 30 seconds.

## [Page 10: Jet Defrost](#)

JET DEFROST only if the net SE THIS FUNCTION weight is between 100 g- 2 Kg. on the glass ALWAYS PLACE THE FOOD □ □ turntable. □ □ RESS THE EFROST BUTTON □ + / - to set the weight of the food. RESS THE BUTTONS □...

## [Page 11: Maintenance And Cleaning](#)

MAINTENANCE & CLEANING normally re- , water and a soft cloth to LEANING IS THE ONLY MAINTENANCE SE A MILD DETERGENT quired. clean the interior surfaces, front and rear of the door and the door opening. in a clean condition AILURE TO MAINTAIN THE OVEN could lead to deterioration of the surface that or food particles to...

## [Page 12: Troubleshooting Guide](#)

TROUBLE SHOOTING GUIDE , do not make a service it should F THE OVEN DOES NOT WORK F THE MAINS CORD NEEDS REPLACING call until you have made the following checks: be replaced by the original The Turntable and turntable support is in mains cord, which is avail- place.

## [Page 16: Data For Test Heating Performance](#)

OWER NPUT 10 A (UK 13 A) 750 W OUTPUT POWER UTER DIMENSIONS NNER DIMENSIONS 5 0 1 9 - 3 2 1 - 0 1 7 2 9 © Whirlpool Sweden AB 2012. All rights reserved. Made in Sweden.