



Toshiba RBC-AX32U(W)-E Owner's Manual

Wireless remote controller kit

1	
Table Of Contents	
2	
3	
4	
5	
6	
7	
8	
9	
10	
11	
12	
13	
14	
15	
16	

--	--

•

[Table of Contents](#)

•

Bookmarks

--

Table of Contents

1 Table of Contents

2 Precautions for Safety

3 Changing Batteries

4 Adjusting Clock

5 Part Names and Functions

6 Operating Unit

[7 Operating Unit with Timer](#)


[8 Adjusting Louver Direction](#)

[9 Mounting Remote Controller Holder](#)

[10 Operating Air Conditioner Without Remote Controller](#)

[11 Before Asking for Repair Work](#)

[Download this manual](#)

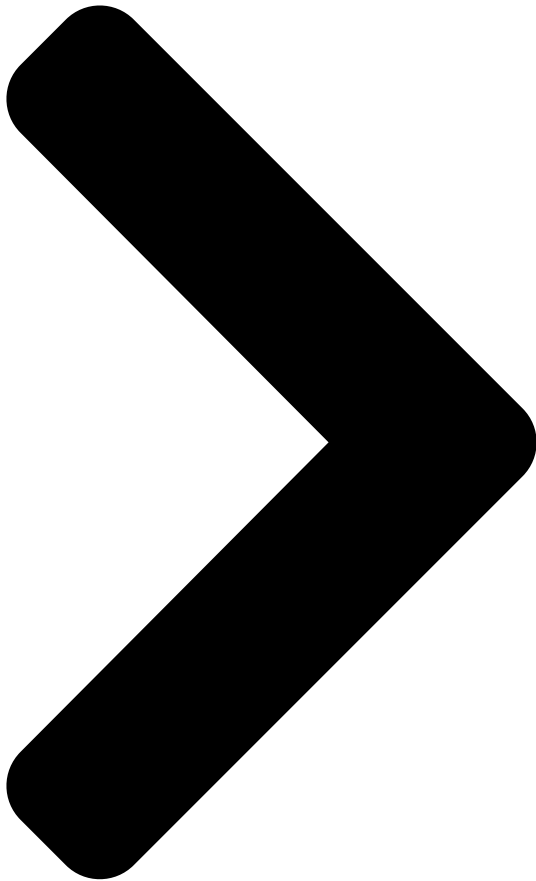

AIR CONDITIONER (SPLIT TYPE)

Owner's Manual

TOSHIBA

Wireless remote controller kit

Model name:

RBC-AX32U(W)-E

RBC-AX32U(WS)-E

Generic model name

RBC-AX32U(W)-E

Generic model name

RBC-AX32U(WS)-E

Wireless remote controller
model name

WH-L11SE

Signal receiving unit

model name

SX-W1NE

Wireless remote controller
model name

WH-L11SE

Signal receiving unit

model name

SX-W2NE

Owner's Manual

TOSHIBA

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba RBC-AX32U(W)-E

[Remote Control Toshiba RBC-AX32U\(W\)-E Installation Manual](#)

Wireless remote controller kit (1 page)

[Remote Control Toshiba RBC-AX32CE2 Owner's Manual](#)

Wireless remote controller kit (16 pages)

[Air conditioners Toshiba RAV-SM564UTP-E Installation Manual](#)

4-way cassette type split (56 pages)

[Air conditioners Toshiba RAV-SM404MUT-E Owner's Manual](#)

Toshiba compact 4-way type split type air conditioners (16 pages)

Summary of Contents for Toshiba RBC-AX32U(W)-E

[Page 1](#) AIR CONDITIONER (SPLIT TYPE) Owner's Manual Wireless remote controller kit Model name: RBC-AX32U(W)-E RBC-AX32U(WS)-E Wireless remote controller Generic model name model name RBC-AX32U(W)-E WH-L11SE Signal receiving unit model name SX-W1NE Wireless remote controller Generic model name model name RBC-AX32U(WS)-E WH-L11SE...

[Page 2: Table Of Contents](#)

Thank you very much for purchasing TOSHIBA Remote controller for Air Conditioner. Please read this owner's manual carefully before using your Remote controller for Air Conditioner • Be sure to obtain the "Owner's manual" and "Installation manual" from constructor (or dealer).

[Page 3: Precautions For Safety](#)

If the remote controller is inappropriate installed by yourself, it may cause electric shock, fire or other trouble. • Make sure to install the air conditioner specified by TOSHIBA and ask the exclusive dealer when installing. If the air conditioner is installed by yourself, it may cause electric shock, fire or other trouble.

[Page 4: Changing Batteries](#)

Changing batteries Loading batteries Removing batteries Remove the battery cover. Remove the battery cover. Insert 2 new batteries (R03 [AAA]) Slap the batteries out lightly onto your following the (+) and (-) positions. palm. Batteries • To replace the batteries, use two new batteries (R03 [AAA]).

[Page 5: Part Names And Functions](#)

Part names and functions Remote controller (WH-L11SE) • Max. 8 indoor units can be operated by a remote controller as a group. • Illustration of LCD shown below is for explanation. It may differ from the actual LCD. Temperature button (TEMP ...

[Page 6](#) Names and functions of COMFORT SLEEP button Push this button to start the OFF timer operation that indications on wireless remote automatically adjusts the room temperature and the controller fan speed. You can select the OFF timer time from four durations (1, 3, 5 or 9 hours).

[Page 7](#) (COMFORT SLEEP) display Swing display Indicated during the OFF timer operation that Indicated during the swinging operation where the automatically adjusts the room temperature and the horizontal louver automatically moves up and down. fan speed. Each time you push the COMFORT NOTE SLEEP button, the display changes in the sequence of 1h, 3h, 5h, and 9h.

[Page 8: Operating Unit](#)

Operating unit Cooling / Heating / Fan / Dry Automatic operation operation (auto changeover) Start Start PRESET PRESET TEMP TEMP MODE MODE START/STOP button (START/STOP button (

Push this button to start the air conditioner. Push this button to start the air conditioner. Mode select button (MODE) Mode select button (MODE) Select Cool...

[Page 9](#) High power operation Quiet operation The QUIET mode provides quiet operating status by High power (Hi POWER) automatically setting the fan speed to the lowest speed. The Hi POWER (high power operation) mode automatically controls room temperature, airflow and operation mode so that the room is quickly cooled in summer and warmed in winter.

[Page 10](#) Preset operation CAUTION Set your preferred operation mode for future use. The setting is memorized by the unit for future operation • The COMFORT SLEEP mode is not enabled in the (except airflow direction). DRY or FAN ONLY operation. • When Auto changeover control mode is selected, the air conditioner does not automatically control the room temperature.

[Page 11: Operating Unit With Timer](#)

Operating unit with timer ON timer and OFF timer CAUTION • When you select the timer operation, the remote controller automatically transmits the timer signal to the indoor unit at the specified time. Therefore, keep the remote controller in a location where it can transmit the signal to the indoor unit properly.

[Page 12](#) ON timer —> OFF timer (Stop —> Operation —> Stop) You can use this setting to start the air conditioner when you wake up and stop it when you leave the house. Example: To start the air conditioner next morning and stop it. Operation Stop Stop...

[Page 13: Adjusting Louver Direction](#)

Adjusting louver direction • Never move the louver (air direction up / down adjusting plate) which is operated on the remote controller with hands except a case of cleaning the louver. • While the air conditioner is not working, the louver (air direction adjusting plate) is closed automatically. •...

[Page 14: Operating Air Conditioner Without Remote Controller](#)

Wireless remote controller A-B selection Using 2 wireless remote controllers for the respective air "B" Display conditioners, when the 2 air conditioners are closely installed. "00" Display Wireless remote controller B setup 1. Start the air conditioner. PRESET 2. Point the wireless remote controller at the indoor unit.

[Page 15: Before Asking For Repair Work](#)

Before asking for repair work Check the following before asking for repair work. Check again Phenomenon Possible cause Measures Operation does The air conditioner is not working or a power failure Push START/STOP button on the not start even if has occurred.

[Page 16](#) EB01600201...

This manual is also suitable for:

Rbc-ax32u(ws)-eWh-l11seSx-w1neSx-w2ne