



# Table Of Contents - Asus TUF GAMING H470-PRO Manual



1
2
Table Of Contents
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62

•

[Table of Contents](#)

•

## Bookmarks







# Contents

[Safety information](#)

..... iv

[About this guide](#)

..... v

[TUF GAMING H470-PRO specifications summary](#)

..... vi

[Connectors with shared bandwidth](#)

..... ix

[Package contents](#)

..... x

[Installation tools and components](#)

..... xi

[Chapter 1:](#)

1.1

[Before you proceed](#) ..... 1-1

1.2

[Motherboard layout](#) ..... 1-2

Chapter 2:

2.1

[Building your PC system](#) ..... 2-1

2.1.1

2.1.2

2.1.3

2.1.4

2.1.5

2.1.6

2.1.7

2.1.8

2.1.9

2.2

[Motherboard rear and audio connections](#) ..... 2-14

2.2.1

2.2.2

2.3

[Starting up for the first time](#) ..... 2-18

2.4

[Turning off the computer](#) ..... 2-18

[Chapter 3:](#)

3.1

[Knowing BIOS](#) ..... 3-1

3.2

[BIOS setup program](#) ..... 3-2

3.3

[ASUS EZ Flash 3](#) ..... 3-3

3.4

[ASUS CrashFree BIOS 3](#) ..... 3-4

3.5

[RAID configurations](#) ..... 3-5

## [Appendix](#)

[Notices](#)

..... A-1

[ASUS contact information](#)

..... A-6

## [Product Introduction](#)

### Basic Installation

[CPU installation](#)..... 2-1

[Cooling system installation](#)..... 2-3

[DIMM installation](#)..... 2-5

[M.2 installation](#) ..... 2-6

[Motherboard installation](#) ..... 2-7

[ATX power connection](#) ..... 2-9

[SATA device connection](#) ..... 2-10

[Front I/O connector](#) ..... 2-11

[Expansion card installation](#) ..... 2-12

[Rear I/O connection](#) ..... 2-14

[Audio I/O connections](#) ..... 2-15

### [BIOS and RAID Support](#)

[Previous Page](#)  
[Next Page](#)

1  
2  
3  
4  
5  
6  
7

## Related Manuals for Asus TUF GAMING H470-PRO

[Motherboard Asus TUF GAMING H470-PRO \(WI-FI\) Manual](#)

(64 pages)

[Motherboard Asus TUF GAMING H470-PRO WI-FI Manual](#)

(20 pages)

[Motherboard Asus TUF GAMING H470-PRO WI-FI Quick Start Manual](#)

(2 pages)

[Motherboard Asus TUF GAMING H470-PRO Quick Start Manual](#)

(2 pages)

[Motherboard Asus PRIME H470-PLUS Manual](#)

(32 pages)

[Motherboard Asus PRIME H470-PLUS Quick Start Manual](#)

(2 pages)

[Motherboard Asus ROG STRIX H470-I GAMING Manual](#)

(62 pages)

[Motherboard Asus Prime H470M-PLUS Manual](#)

(32 pages)

[Motherboard Asus PRIME H470M-PLUS Quick Start Manual](#)

(2 pages)

[Motherboard Asus PRIME H410M-A Manual](#)

(28 pages)

[Motherboard Asus PRIME H410M-D Manual](#)

(28 pages)

[Motherboard Asus Prime H410M-R User Manual](#)

(28 pages)

[Motherboard Asus PRIME H410M-E Manual](#)

(28 pages)

[Motherboard Asus PRIME H410M-K R2.0 Manual](#)

(32 pages)

[Motherboard Asus PRIME H410I-PLUS Manual](#)

(30 pages)

[Motherboard Asus Pro H410T Manual](#)

(28 pages)

## Related Content for Asus TUF GAMING H470-PRO

[PRIME Z270-K Table Of Contents](#)

Asus PRIME Z270-K

[Z170-P Table Of Contents](#)

Asus Z170-P

[Prime H270-PRO Table Of Contents](#)

Asus Prime H270-PRO

[PRIME Z270-P Table Of Contents](#)

Asus PRIME Z270-P

[PRIME Z370-P Table Of Contents](#)

Asus PRIME Z370-P

[970 PRO GAMING/AURA Table Of Contents](#)

Asus 970 PRO GAMING/AURA

[Pro WS X570-ACE Table Of Contents](#)

asus Pro WS X570-ACE

[PRIME Z390-P Table Of Contents](#)

Asus PRIME Z390-P