

Safety Information - Asus TUF GAMING H470-PRO Manual

1

2

Table Of Contents

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62

•

[Table of Contents](#)

•

Bookmarks



Safety information

Electrical safety

-

To prevent electrical shock hazard, disconnect the power cable from the electrical outlet before relocating the system.

-

When adding or removing devices to or from the system, ensure that the power cables for the devices are unplugged before the signal cables are connected. If possible, disconnect all power cables from the existing system before you add a device.

-

Before connecting or removing signal cables from the motherboard, ensure that all

power cables are unplugged.

- Seek professional assistance before using an adapter or extension cord. These devices could interrupt the grounding circuit.

- Ensure that your power supply is set to the correct voltage in your area. If you are not sure about the voltage of the electrical outlet you are using, contact your local power company.

- If the power supply is broken, do not try to fix it by yourself. Contact a qualified service technician or your retailer.

Operation safety

- Before installing the motherboard and adding devices on it, carefully read all the manuals that came with the package.

- Before using the product, ensure all cables are correctly connected and the power cables are not damaged. If you detect any damage, contact your dealer immediately.

- To avoid short circuits, keep paper clips, screws, and staples away from connectors, slots, sockets and circuitry.

- Avoid dust, humidity, and temperature extremes. Do not place the product in any area where it may become wet.

- Place the product on a stable surface.

- If you encounter technical problems with the product, contact a qualified service technician or your retailer.

- Your motherboard should only be used in environments with ambient temperatures between 0°C and 40°C.

iv

[Previous Page](#)
[Next Page](#)

1
2
3
4
5
6
7
8

Related Manuals for Asus TUF GAMING H470-PRO

[Motherboard Asus TUF GAMING H470-PRO \(WI-FI\) Manual](#)

(64 pages)

[Motherboard Asus TUF GAMING H470-PRO WI-FI Manual](#)

(20 pages)

[Motherboard Asus TUF GAMING H470-PRO WI-FI Quick Start Manual](#)

(2 pages)

[Motherboard Asus TUF GAMING H470-PRO Quick Start Manual](#)

(2 pages)

[Motherboard Asus PRIME H470-PLUS Manual](#)

(32 pages)

[Motherboard Asus PRIME H470-PLUS Quick Start Manual](#)

(2 pages)

[Motherboard Asus ROG STRIX H470-I GAMING Manual](#)

(62 pages)

[Motherboard Asus Prime H470M-PLUS Manual](#)

(32 pages)

[Motherboard Asus PRIME H470M-PLUS Quick Start Manual](#)

(2 pages)

[Motherboard Asus PRIME H410M-A Manual](#)

(28 pages)

[Motherboard Asus PRIME H410M-D Manual](#)

(28 pages)

[Motherboard Asus Prime H410M-R User Manual](#)

(28 pages)

[Motherboard Asus PRIME H410M-E Manual](#)

(28 pages)

[Motherboard Asus PRIME H410M-K R2.0 Manual](#)

(32 pages)

[Motherboard Asus PRIME H410I-PLUS Manual](#)

(30 pages)

[Motherboard Asus Pro H410T Manual](#)

(28 pages)

Related Content for Asus TUF GAMING H470-PRO

[Pro Q670M-CE Safety Information](#)

Asus Pro Q670M-CE

[Pro Q670M-CE D4 Safety Information](#)

Asus Pro Q670M-CE D4

[PRIME B760M-F D4 Safety Information](#)

Asus PRIME B760M-F D4

[PRIME A620-PLUS WIFI6 Safety Information](#)

Asus PRIME A620-PLUS WIFI6

[Z790 GAMING WIFI7 Safety Information](#)

Asus Z790 GAMING WIFI7

[PRIME X299-A Series Safety Information](#)

Asus PRIME X299-A Series

[A620M-AYW WIFI Safety Information](#)

Asus A620M-AYW WIFI

[PRIME H610T2-CSM D4 Safety Information](#)

Asus PRIME H610T2-CSM D4