

About This Guide - Asus TUF GAMING H470-PRO Manual

1

2

Table Of Contents

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62

•

[Table of Contents](#)

•

Bookmarks



About this guide

This user guide contains the information you need when installing and configuring the motherboard.

How this guide is organized

This guide contains the following parts:

-

Chapter 1: Product Introduction

This chapter describes the features of the motherboard and the new technology it supports. It includes description of the switches, jumpers, and connectors on the motherboard.

-

Chapter 2: Basic Installation

This chapter lists the hardware setup procedures that you have to perform when installing system components.

•

Chapter 3: BIOS and RAID Support

This chapter tells how to boot into the BIOS, upgrade BIOS using the EZ Flash Utility and support on RAID.

Where to find more information

Refer to the following sources for additional information and for product and software updates.

1.

ASUS website

The ASUS website (www.asus.com) provides updated information on ASUS hardware and software products.

2.

Optional documentation

Your product package may include optional documentation, such as warranty flyers, that may have been added by your dealer. These documents are not part of the standard package.

Conventions used in this guide

To ensure that you perform certain tasks properly, take note of the following symbols used throughout this manual.

CAUTION: Information to prevent damage to the components and injuries to yourself when trying to complete a task.

IMPORTANT: Instructions that you **MUST** follow to complete a task.

NOTE: Tips and additional information to help you complete a task.

v

[Previous Page](#)
[Next Page](#)

1
2
3
4
5
6
7
8
9

Related Manuals for Asus TUF GAMING H470-PRO

[Motherboard Asus TUF GAMING H470-PRO \(WI-FI\) Manual](#)

(64 pages)

[Motherboard Asus TUF GAMING H470-PRO WI-FI Manual](#)

(20 pages)

[Motherboard Asus TUF GAMING H470-PRO WI-FI Quick Start Manual](#)

(2 pages)

[Motherboard Asus TUF GAMING H470-PRO Quick Start Manual](#)

(2 pages)

[Motherboard Asus PRIME H470-PLUS Quick Start Manual](#)

(2 pages)

[Motherboard Asus PRIME H470-PLUS Manual](#)

(32 pages)

[Motherboard Asus ROG STRIX H470-I GAMING Manual](#)

(62 pages)

[Motherboard Asus Prime H470M-PLUS Manual](#)

(32 pages)

[Motherboard Asus PRIME H470M-PLUS Quick Start Manual](#)

(2 pages)

[Motherboard Asus PRIME H410M-A Manual](#)

(28 pages)

[Motherboard Asus PRIME H410M-D Manual](#)

(28 pages)

[Motherboard Asus Prime H410M-R User Manual](#)

(28 pages)

[Motherboard Asus PRIME H410M-E Manual](#)

(28 pages)

[Motherboard Asus PRIME H410M-K R2.0 Manual](#)

(32 pages)

[Motherboard Asus PRIME H410I-PLUS Manual](#)

(30 pages)

[Motherboard Asus Pro H410T Manual](#)

(28 pages)

Related Content for Asus TUF GAMING H470-PRO

[PRIME B760M-F D4 About This Guide](#)

[Asus PRIME B760M-F D4](#)

[PRIME A620-PLUS WIFI6 About This Guide](#)

[Asus PRIME A620-PLUS WIFI6](#)

[Z790 GAMING WIFI7 About This Guide](#)

Asus Z790 GAMING WIFI7

[PRIME X299-A Series About This Guide](#)

Asus PRIME X299-A Series

[A620M-AYW WIFI About This Guide](#)

Asus A620M-AYW WIFI

[PRIME H610T2-CSM D4 About This Guide](#)

Asus PRIME H610T2-CSM D4

[ROG RAMPAGE V EDITION 10 About This Guide](#)

Asus ROG RAMPAGE V EDITION 10

[WS X299 SAGE About This Guide](#)

Asus WS X299 SAGE