



# Connectors With Shared Bandwidth - Asus TUF GAMING H470-PRO Manual



1

2

Table Of Contents

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62

---

•

[Table of Contents](#)

•

## Bookmarks








# Connectors with shared bandwidth

KBMS  
\_USB910  
ASM  
1442K  
HDMI  
\_DP  
U32G2\_C2  
U32G2\_1  
LAN\_U32G1\_78  
Intel  
®  
AUDIO  
I219-V  
PCIEX1\_1  
PCIEX1\_2  
Super  
I/O  
PCIEX1\_3  
PCIEX1\_4  
AAFP

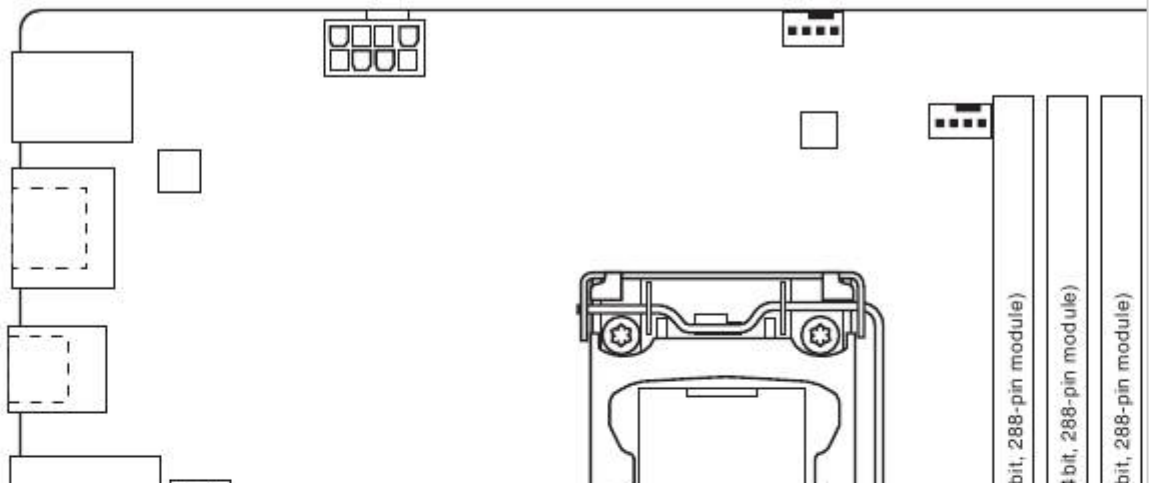

# M.2\_1

## A

### SATA6G\_1

M.2\_1 shares bandwidth with SATA6G\_1. When M.2\_1 runs SATA mode, SATA6G\_1 will be disabled.

Please adjust BIOS setting for changing onboard device configuration.

### EATX12V

- CHA\_FAN1
- AIO\_PUMP
- 2280
- 2260
- 2242
- PCIEX16\_1
- BATTERY
- PCIEX16\_2
- 22110
- 2280
- COM\_DEBUG
- COM
- CHA\_FAN2
- TB\_HEADER

### PCIe x4 mode

- CPU\_OPT
- DIGI+
- VRM
- CPU\_FAN
- LGA1200
- PCI SATA
- IRST
- X4
- V
- M.2\_1(SOCKET3)

### Intel

®

### H470

- 2260
- 2242
- PCI SATA
- IRST
- X4
- V


- CHA\_FAN3
- M.2\_2(SOCKET3)
- 64Mb
- BIOS
- 128Mb
- BIOS
- USB4
- USB1112

## V

- RGB\_HEADER2
- BOOT
- VGA
- DRAM
- CPU
- SATA6G\_3
- RGB\_HEADER1
- CLRTC
- PANEL
- SATA6G\_4
- SATA6G\_5

## SATA

-

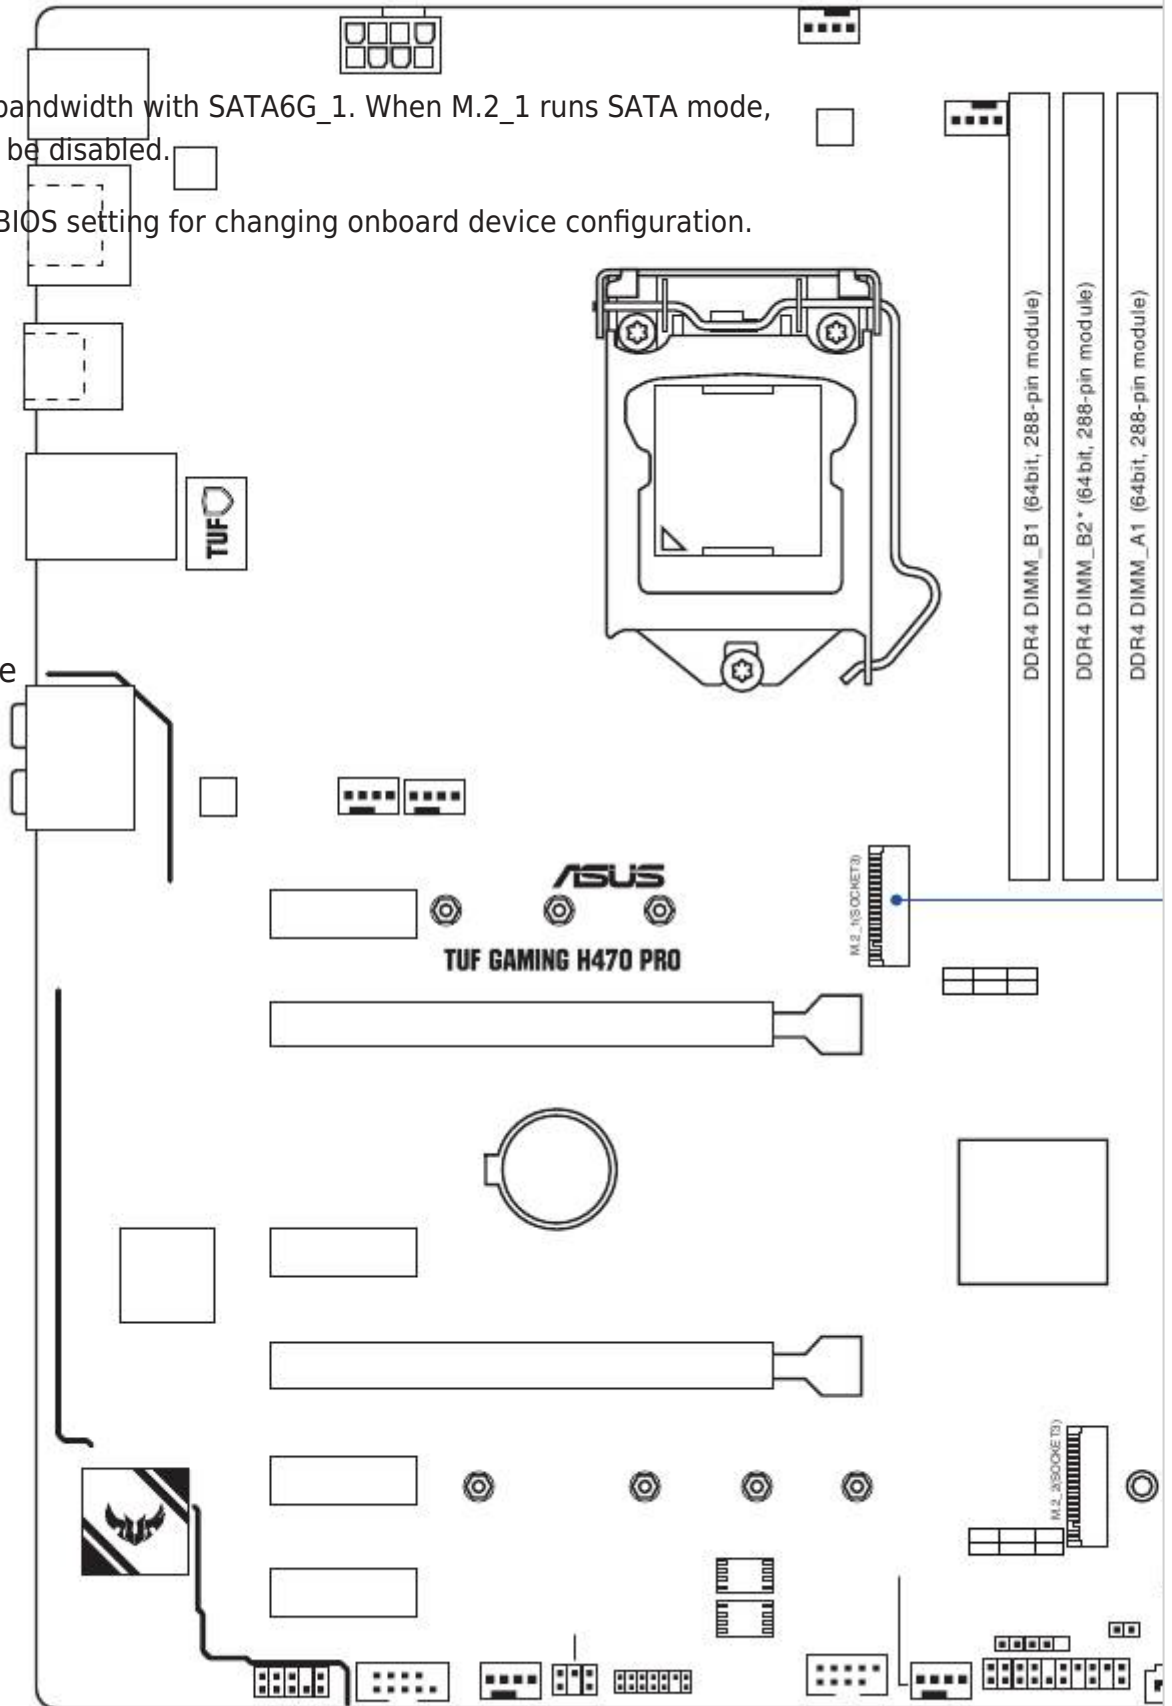

## Table of Contents

[Previous Page](#)  
[Next Page](#)

1  
...  
6  
7  
8  
9  
10  
11  
12  
13

## Related Manuals for Asus TUF GAMING H470-PRO

[Motherboard Asus TUF GAMING H470-PRO \(WI-FI\) Manual](#)

(64 pages)

[Motherboard Asus TUF GAMING H470-PRO WI-FI Manual](#)

(20 pages)

[Motherboard Asus TUF GAMING H470-PRO WI-FI Quick Start Manual](#)

(2 pages)

[Motherboard Asus TUF GAMING H470-PRO Quick Start Manual](#)

(2 pages)

[Motherboard Asus PRIME H470-PLUS Manual](#)

(32 pages)

[Motherboard Asus PRIME H470-PLUS Quick Start Manual](#)

(2 pages)

[Motherboard Asus ROG STRIX H470-I GAMING Manual](#)

(62 pages)

[Motherboard Asus Prime H470M-PLUS Manual](#)

(32 pages)

[Motherboard Asus PRIME H470M-PLUS Quick Start Manual](#)

(2 pages)

[Motherboard Asus PRIME H410M-A Manual](#)

(28 pages)

[Motherboard Asus PRIME H410M-D Manual](#)

(28 pages)

[Motherboard Asus Prime H410M-R User Manual](#)

(28 pages)

[Motherboard Asus PRIME H410M-E Manual](#)

(28 pages)

[Motherboard Asus PRIME H410M-K R2.0 Manual](#)

(32 pages)

[Motherboard Asus PRIME H410I-PLUS Manual](#)

(30 pages)

[Motherboard Asus Pro H410T Manual](#)

(28 pages)

## Related Content for Asus TUF GAMING H470-PRO

[PRIME Z590-P Connectors With Shared Bandwidth](#)

Asus PRIME Z590-P

[Pro H510M-C Connectors With Shared Bandwidth](#)

Asus Pro H510M-C

[TUF GAMING B560M-PLUS WIFI Connectors With Shared Bandwidth](#)

Asus TUF GAMING B560M-PLUS WIFI

[90MB1BK0-M0EAY0 Connectors With Shared Bandwidth](#)

Asus 90MB1BK0-M0EAY0

[90MB1310-M0EAY0 Connectors With Shared Bandwidth](#)

Asus 90MB1310-M0EAY0

[TUF GAMING B550-PLUS WIFI II Connectors With Shared Bandwidth](#)

Asus TUF GAMING B550-PLUS WIFI II

[ROG STRIX B760-A GAMING WIFI Connectors With Shared Bandwidth](#)

Asus ROG STRIX B760-A GAMING WIFI

[TUF GAMING B550-PRO Connectors With Shared Bandwidth](#)

Asus TUF GAMING B550-PRO