

Precautions For Assembling The Control Panel - Toshiba THL Series Instruction Manual

Industrial robot

1
2
3
4
5
6
Table Of Contents
7
8
9
10
11
12
13
14
15
16
17

 
18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217

218
219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237
238
239
240
241
242
243
244
245
246
247
248
249
250
251
252
253
254
255



•

[Table of Contents](#)

•

Bookmarks



10.4 Precautions for Assembling the Control Panel

When installing the robot controller TSL3000 to the control panel, be careful with the following items.

- a) When installing the robot controller to the control panel, remove the rubber legs on the bottom surface and use the holes for installing the rubber legs to fix the controller in position.
- b) If there are options such as Ethernet support and distributed I/O, it is necessary to connect a cable to the rear of the controller, and a space of at least 110 mm is

necessary in the rear direction when doing so.

c) To do maintenance of the controller, do it with the upper cover removed. (See Fig.

10.4.)

d) When installing the controller, make sure that the maintenance of the controller can

be done without any problem. Especially when storing the controller in the control

panel, it will be necessary to take out the controller from the control panel for maintenance.

Specifically, be careful of the following points.

1)

Arrange the cables around the rear side of the controller (so that the controller can be removed).

2)

Connect all cables in such a manner that the robot can be operated even if the controller is removed from the rack.

TRANSPORTATION AND INSTALLATION MANUAL

118

STE 85356

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1

...

117

118

119

120

Quick Links:

[Robot Configuration Diagram \(Tsl3000\)](#)

[Specifications \(Thl500, Thl600 and Thl700\)](#)

Related Manuals for Toshiba THL Series

[Robotics Toshiba THL Series Instruction Manual](#)

Industrial robot (280 pages)

[Robotics Toshiba THL Series Instruction Manual](#)

Industrial robot, robot controller (29 pages)

[Robotics Toshiba SR Series Instruction Manual](#)

Cassette transfer robot (38 pages)

[Robotics Toshiba TCR Series Instruction Manual](#)

(40 pages)

[Robotics Toshiba TH650A-IP Instruction Manual](#)

Industrial robot (49 pages)

[Robotics Toshiba TH850A Instruction Manual](#)

Industrial robot (51 pages)

[Robotics Toshiba THP550-IP Instruction Manual](#)

Dust- & drip-proof type industrial robot (51 pages)

[Robotics Toshiba TH450A Instruction Manual](#)

Industrial robot (76 pages)

[Robotics Toshiba TH180 Instruction Manual](#)

Industrial robot (95 pages)

[Robotics Toshiba TH450A-T Instruction Manual](#)

(36 pages)

[Robotics Toshiba TH650A Instruction Manual](#)

Industrial robot (72 pages)

[Robotics Toshiba TV800 Instruction Manual](#)

Industrial robot (82 pages)

[Robotics Toshiba TV800-CR Instruction Manual](#)

Industrial robot (33 pages)

[Robotics Toshiba THP700 Instruction Manual](#)

Industrial robot (72 pages)

[Robotics Toshiba THP700 Maintenance Manual](#)

Industrial robot (106 pages)

[Robotics Toshiba TV1000H-WP Instruction Manual](#)

Industrial robot (32 pages)

Related Content for Toshiba THL Series

[TH650A Separating Control Panel From Controller](#)

Toshiba TH650A

[TH Series Storage Precautions For The Robot](#)

Toshiba TH Series

[TV1000H-WP Precautions For Use](#)

Toshiba TV1000H-WP

[TH450A-T Storage Precautions For The Robot](#)

Toshiba TH450A-T

[TH850A Arm 2 Panel Cover](#)

Toshiba TH850A

[TH650A-IP Lid Used For Arm 2 Panel](#)

Toshiba TH650A-IP

This manual is also suitable for:

[Th1300](#)[Th1400](#)[Th1500](#)[Th1600](#)[Th1700](#)[Th1800](#) ... [Show all](#)